

OMEGA™ User's Guide



*Shop online at
omega.com*

*e-mail: info@omega.com
For latest product manuals:
www.omegamanual.info*

ISO 9001
CERTIFIED
CORPORATE QUALITY
NORWALK, CT

ISO 9001
CERTIFIED
CORPORATE QUALITY
MANCHESTER, UK

**CONNECTION HEAD STYLE
PRS SERIES
Spring Loaded Sanitary
RTD Sensors with Thermowells**

M-4913-J Instruction Manual for Connection Head Style PRS Series Spring Loaded Sanitary RTD Sensors With Thermowells



GENERAL DESCRIPTION

The OMEGA PRS series sensors are designed for use in Sanitary Clean-In-Place (CIP) systems, and are supplied with a Tri-Grip® flanged thermowell for easy installation into Food, Dairy and Biopharmaceutical systems. These sensors are supplied with a stainless steel thermowell, a spring loaded probe assembly and White Polypropylene (NB9W) or 316L Stainless Steel (NB15) connection heads standard.

When assembled, the probe is spring loaded into the thermowell through a spring loading arrangement housed in the pipe nipple connecting the thermowell and the connection head. The probe contains a 4-wire PT100 Platinum RTD (Resistance Temperature Detector) that meets the resistance vs. temperature characteristics and Class A requirements of IEC 60751. Equations for calculating resistance vs. temperature, temperature vs. resistance, and Class A tolerances are included below the resistance vs. temperature table.


PROCESS CONNECTION

This sensor has a thermowell that includes a Tri-Grip® flange so it can be installed into existing process connections. A commercially available gasket is placed between the thermowell flange and process connection, with a clamp used to complete the connection as shown above.

The Thermowell is made from 316L Stainless Steel, with wetted surfaces that have a surface finish of 32 microinches or better. Care should be exercised when handling sensors so that the surface finish is not damaged during handling or installation.

WIRING CONFIGURATION:

The **Omega PRS** Style sensors are supplied with 4-wire connections as shown in the schematic diagrams below. The sensor wiring is connected to the four inner screws of the terminal board (see image below), leaving the outer terminals available for instrument connections. For 4-wire PT100 RTD connections, simply connect to the two red and two white wires (note: RTD sensors have no polarity). If three wire connections are required, simply do not connect to one of the red or white wire terminals.

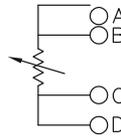

OPERATING CURRENT:

To insure self heating effects do not occur, the **Omega PRS** series sensors should be powered with no more than **1 milliamp** of excitation current. Although capable of operating at higher current levels, self heating effects may occur.

SPECIFICATIONS:

RTD Type: Platinum per IEC-60751.

Accuracy: Class A per IEC-60751.

Temperature Range: -50 to 250°C.

Excitation Current: 1 milliamp max.

Response Time: 2.5 Seconds max (63%).

Wetted Surfaces: 316L Stainless Steel with 10 microinch or better surface finish.

Connection Head: White Polypropylene with 3/4" NPT Cable Connection (NB9W Style).

M-4913-J Instruction Manual for Connection Head Style PRS Series Spring Loaded Sanitary RTD Sensors With Thermowells

Resistance Vs. Temperature Table: (Resistance Values Stated in Ohms)

Temperature °C

	0	1	2	3	4	5	6	7	8	9
-50	80.32	79.92	79.52	79.13	78.73	78.33	77.93	77.54	77.14	76.74
-40	84.28	83.88	83.48	83.09	82.69	82.30	81.90	81.50	81.11	80.71
-30	88.22	87.83	87.44	87.04	86.65	86.25	85.86	85.46	85.07	84.67
-20	92.16	91.77	91.37	90.98	90.59	90.19	89.80	89.41	89.01	88.62
-10	96.09	95.69	95.30	94.91	94.52	94.13	93.73	93.34	92.95	92.55
0	100.00	99.61	99.22	98.83	98.44	98.04	97.65	97.26	96.87	96.48
	100.00	100.39	100.78	101.17	101.56	101.95	102.34	102.73	103.12	103.51
10	103.90	104.29	104.68	105.07	105.46	105.85	106.24	106.63	107.02	107.40
20	107.79	108.18	108.57	108.96	109.35	109.73	110.12	110.51	110.90	111.29
30	111.67	112.06	112.45	112.83	113.22	113.61	114.00	114.38	114.77	115.15
40	115.54	115.93	116.31	116.70	117.08	117.47	117.86	118.24	118.63	119.01
50	119.40	119.78	120.17	120.55	120.94	121.32	121.71	122.09	122.47	122.86
60	123.24	123.63	124.01	124.39	124.78	125.16	125.54	125.93	126.31	126.69
70	127.08	127.46	127.84	128.22	128.61	128.99	129.37	129.75	130.13	130.52
80	130.90	131.28	131.66	132.04	132.42	132.80	133.18	133.57	133.95	134.33
90	134.71	135.09	135.47	135.85	136.23	136.61	136.99	137.37	137.75	138.13
100	138.51	138.88	139.26	139.64	140.02	140.40	140.78	141.16	141.54	141.91
110	142.29	142.67	143.05	143.43	143.80	144.18	144.56	144.94	145.31	145.69
120	146.07	146.44	146.82	147.20	147.57	147.95	148.33	148.70	149.08	149.46
130	149.83	150.21	150.58	150.96	151.33	151.71	152.08	152.46	152.83	153.21
140	153.58	153.96	154.33	154.71	155.08	155.46	155.83	156.20	156.58	156.95
150	157.33	157.70	158.07	158.45	158.82	159.19	159.56	159.94	160.31	160.68
160	161.05	161.43	161.80	162.17	162.54	162.91	163.29	163.66	164.03	164.40
170	164.77	165.14	165.51	165.89	166.26	166.63	167.00	167.37	167.74	168.11
180	168.48	168.85	169.22	169.59	169.96	170.33	170.70	171.07	171.43	171.80
190	172.17	172.54	172.91	173.28	173.65	174.02	174.38	174.75	175.12	175.49
200	175.86	176.22	176.59	176.96	177.33	177.69	178.06	178.43	178.79	179.16
210	179.53	179.89	180.26	180.63	180.99	181.36	181.72	182.09	182.46	182.82
220	183.19	183.55	183.92	184.28	184.65	185.01	185.38	185.74	186.11	186.47
230	186.84	187.20	187.56	187.93	188.29	188.66	189.02	189.38	189.75	190.11
240	190.47	190.84	191.20	191.56	191.92	192.29	192.65	193.01	193.37	193.74
250	194.10	194.46	194.82	195.18	195.55	195.91	196.27	196.63	196.99	197.35
260	197.71	198.07	198.43	198.79	199.15	199.51	199.87	200.23	200.59	200.95

For Determining Resistance from Temperature (0°C and above):

$$R_t = R_0(1 + A_t + B_t^2)$$

where:

R_t = Sensor Resistance at Temperature (°C)

R_0 = Sensor resistance at 0°C

= (100 Ohms Nominal)

$$A = 3.9083 \times 10^{-3} \text{ } ^\circ\text{C}^{-1}$$

$$B = -5.775 \times 10^{-7} \text{ } ^\circ\text{C}^{-2}$$

For Determining Temperature From Resistance (0°C and above):

$$t = [\text{sqrt}(A^2 - 4B(1 - R_t/R_0)) - A]/2B = \text{ } ^\circ\text{C}$$

where:

t = Temperature at Sensor Resistance R_t

A, B, R_0 and R_t per above

Class A Tolerance = $\pm (0.15 + 0.002t) = \text{ } ^\circ\text{C}$

With t = temperature in °C regardless to sign



omega.com info@omega.com

Servicing North America:

U.S.A.
Headquarters:

Omega Engineering, Inc.
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378 (USA & Canada only)
Engineering Service: 1-800-872-9436 (USA & Canada only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

DISCLAIMER

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY RETURNS**, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY REPAIRS**, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2018 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.