

**1 YEAR**  
WARRANTY



**RoHS**



# **Ω OMEGA™** **User's Guide**



***Shop online at  
[omega.com](http://omega.com)***

***e-mail: [info@omega.com](mailto:info@omega.com)  
For latest product manuals:  
[www.omega.com/en-us/  
pdf-manuals](http://www.omega.com/en-us/pdf-manuals)***

## **OM-DAQXL** **Multi-Channel Universal Input** **Touch Screen Data Logger**



omega.com info@omega.com

**Servicing North America:**

**U.S.A.:**

Omega Engineering, Inc.,  
800 Connecticut Ave  
Norwalk, CT 06854  
Toll-Free: 1-800-826-6342 (USA & Canada only)  
Customer Service: 1-800-622-2378 (USA & Canada only)  
Engineering Service: 1-800-872-9436 (USA & Canada only)  
Tel: (203) 359-1660 Fax: (203) 359-7700  
e-mail: info@omega.com

**For Other Locations Visit [omega.com/worldwide](http://omega.com/worldwide)**

<b>Section</b>	<b>Page</b>
<b>Section 1 - Introduction .....</b>	<b>1-1</b>
<b>Section 2 - Hardware .....</b>	<b>2-1</b>
2.1 Included Items.....	2-1
2.2 Views and Descriptions .....	2-2
<b>Section 3 - Sensor Wiring.....</b>	<b>3-1</b>
3.1 User Interface Flowchart .....	3-2
3.2 Home Toolbar .....	3-4
3.3 Add Channels .....	3-5
3.4 Communication Setting.....	3-7
<b>Section 4 - Specifications.....</b>	<b>4-1</b>
4.1 General.....	4-1
4.2 Inputs .....	4-2
4.3 Functions .....	4-3
4.4 Communication .....	4-4
4.5 External I/O .....	4-4
4.6 Dimensions .....	4-5

## 1 Introduction

Thank you for purchasing our OM-DAQXL Multi-channel touch screen data logger.

This Quick Start guide briefly describes the key operations and provides setup examples of the OM-DAQXL so that you can quickly operate the device for the first time.

In addition to this quick start manual, the complete User manual can be downloaded from Omega's website (<http://www.omega.com/manuals/>). The User manual provides detailed information regarding all of the functions and operations of the OM-DAQXL. Use it together with this Quick Start Manual.

After reading this manual, keep it in an easily accessible place for later reference.

## 2 Hardware

### 2.1 Included Items

The following items are supplied in the box:

Model	Specifications
OM-DAQXL-1-*	8 channel data logger with USB Host/Device
OM-DAQXL-2-*	16 channel data logger with USB Host/Device
OM-DAQXL-1-EW-*	8 channel data logger with USB Host/Device, Ethernet and Wi-Fi
OM-DAQXL-2-EW-*	16 channel data logger with USB Host/Device, Ethernet and Wi-Fi

#### Included Items

No.	Model No.	Description
1	OM-DAQXL-RB	Rubber boot for impact resistance
2	SD32GB	32GB SD card
3	OM-DAQXL-USB	6' USB cable
4	OM-DAQXL-CABLE6	Digital I/O cable ,6 ft.
5	OM-DAQXL-TB8	Alarm/excitation terminal block
6	OM-DAQXL-ADAPTOR-*	12Vdc, 5A power adaptor
8	MQS-5570	OM-DAQXL Series quick start guide
9	5TC-TT-K-20-36	Type K thermocouples 5 pack with stripped leads
10	N/A	Crimp on ground lug
12	OM-DAQXL-RF	Snap-on round cable ferrite
13	N/A	50Ω shunt resistor

\* Specifies the country code.

Table 2-1 OM-DAQXL Included Items

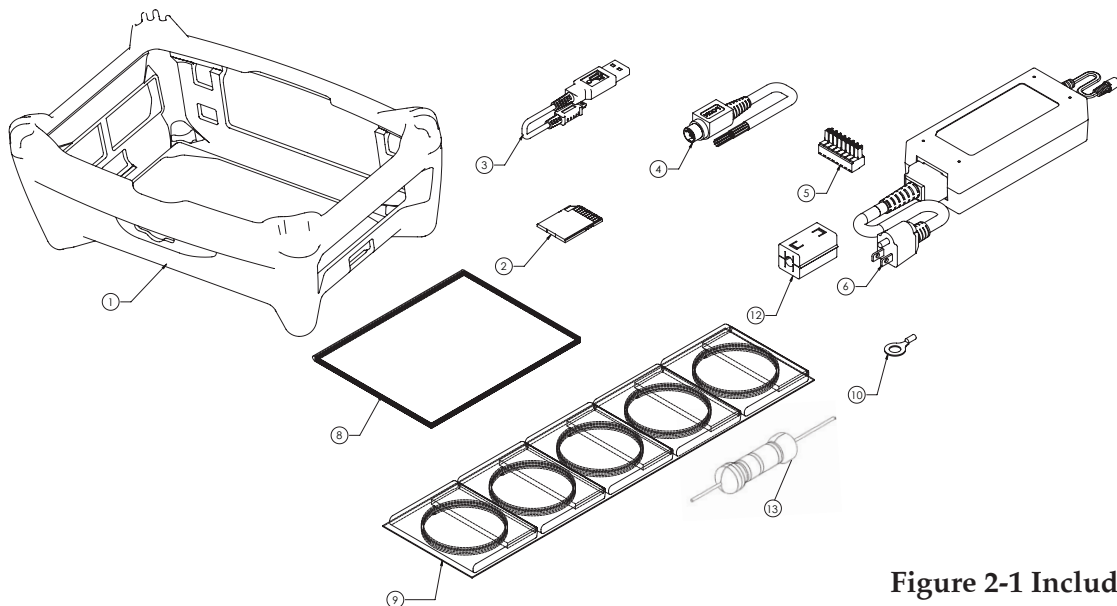


Figure 2-1 Included Items

Data Logging Instrument

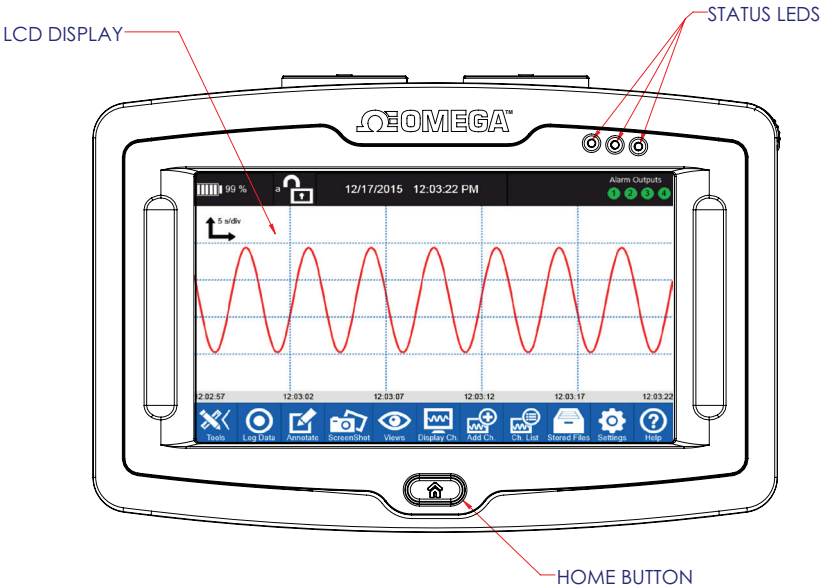


Figure 2-2 OM-DAQXL Front View

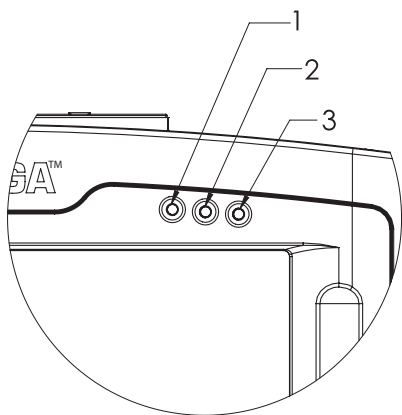


Figure 2-3 Status LED Locations

LED	STATUS		COLOR and STATE
	DC Adapter	Battery	
1 – Power/Charging	Connected	Charged	Green
	Connected	Charging	Green Flashing
	Not connected	Discharging	Green, amber battery <40% remaining, red battery <15% remaining.
	Connected	No battery	Flashing amber
2 – Logging	Logging		Flashing Green
	Not logging - Error		Red
	Armed mode		Amber
	Free running		Green
3 - Alarm	Alarm condition		Red
	No alarm		Green
	Alarms disabled		Off

Table 2-2 Status LED States

Verify the model number shown on the rear label of your data logger matches what was ordered.

Sensor Type		Any Channel	
		+	-
Temperature	Thermocouple	TC+	TC-
Process	Voltage	V+	V-
	Current	I+	I-

Table 3-1 Two Wire Sensor Connections.

Sensor Type		Odd Channel		Even Channel	
		+	-	+	-
Temperature	2 Wire RTD	RTD+	RTD-		RTD-
	3 Wire RTD	RTD+	RTD-		RTD-
	4 Wire RTD	RTD+	RTD-	RTD+	RTD-
	Thermistor	Th+	Th-		Th-
Bridge	Strain Gage	EXC+	EXC-	V+	V-
	Load Cell	EXC+	EXC-	V+	V-
	Pressure Transducer	EXC+	EXC-	V+	V-

Table 3-2 Three and Four Wire Sensor Connections

Note: For bridge type sensors, only channels 1, 2, 3, 4, and 9, 10, 11, 12 are available.

Signal Name	Pin #	Wire Color
Digital Input 1	1	White
Digital Input 2	2	Red
Digital Input 3	3	Orange
Digital Input 4	4	Purple
Digital Output 1	5	Brown
Digital Output 2	6	Black
Digital Output 3	7	Blue
Digital Output 4	8	Green
Isolated Ground	9	Yellow

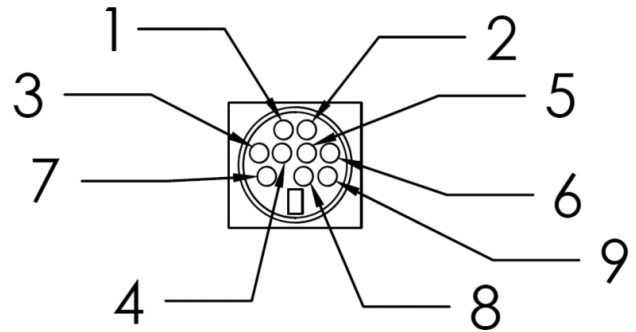


Figure 3-1 Digital I/O Connector Pin Numbers

Table 3-3 Digital I/O Cable Pinout.

Signal Name	Terminal #
Alarm 1	1
Alarm 2	2
Alarm 3	3
Alarm 4	4
Ground	5
External Trigger	6
Isolated Ground	7
+24 Vdc	8

Table 3-4 Alarm Terminal Block Signals

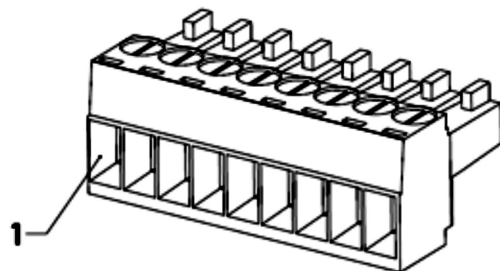


Figure 3-2 Alarm Terminal Block

## 2.2 Views and descriptions

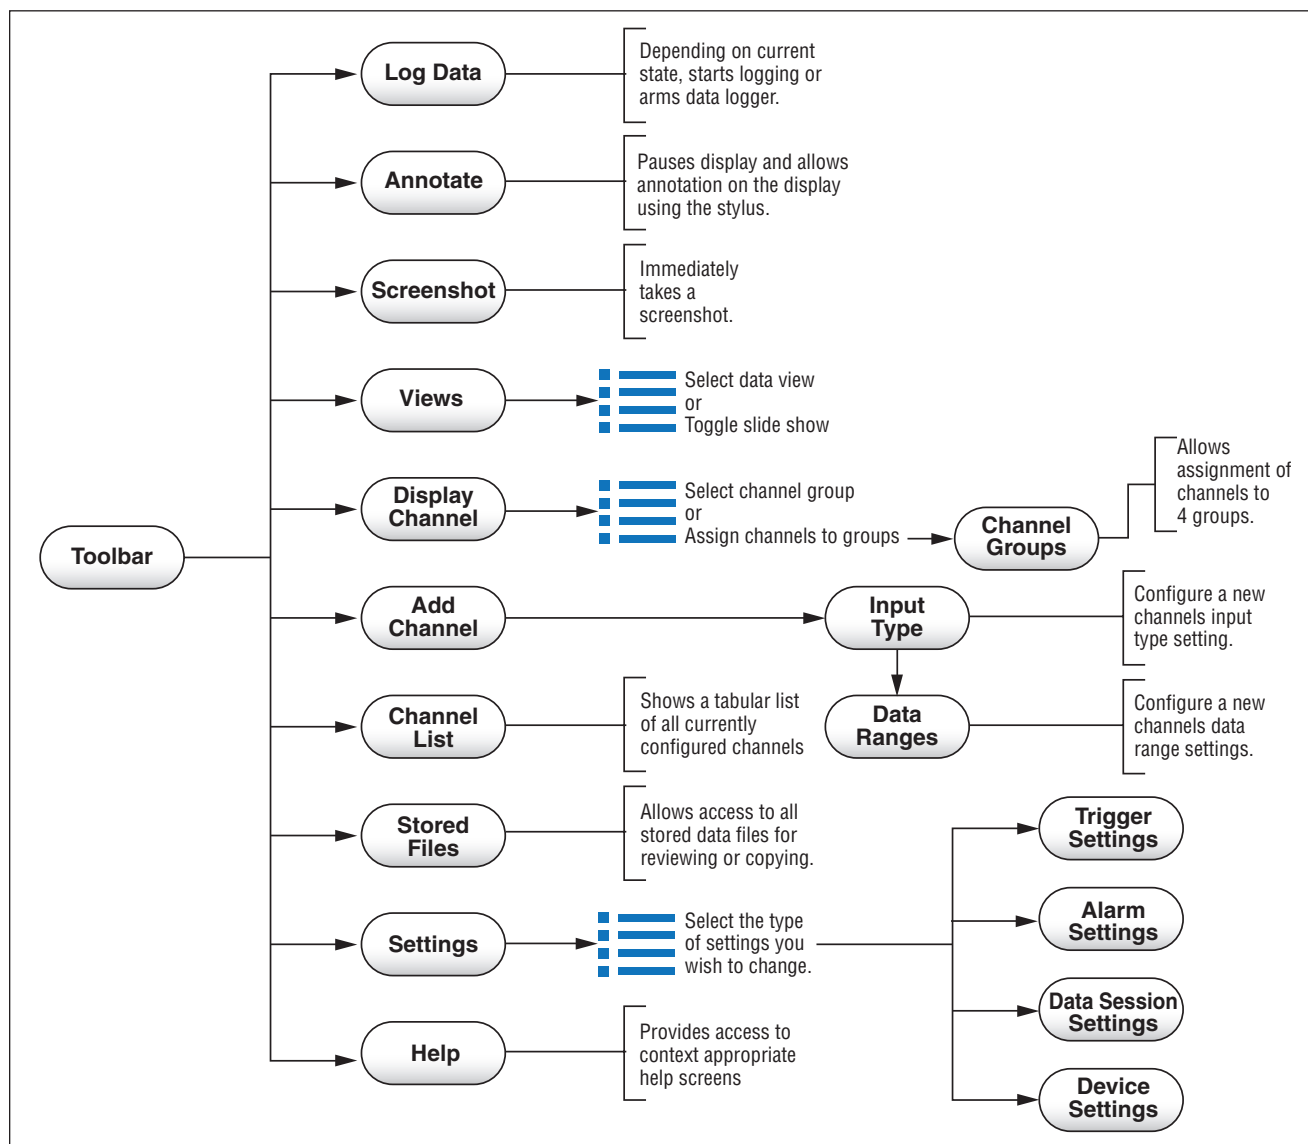


Figure 3-3 Menu Flowchart



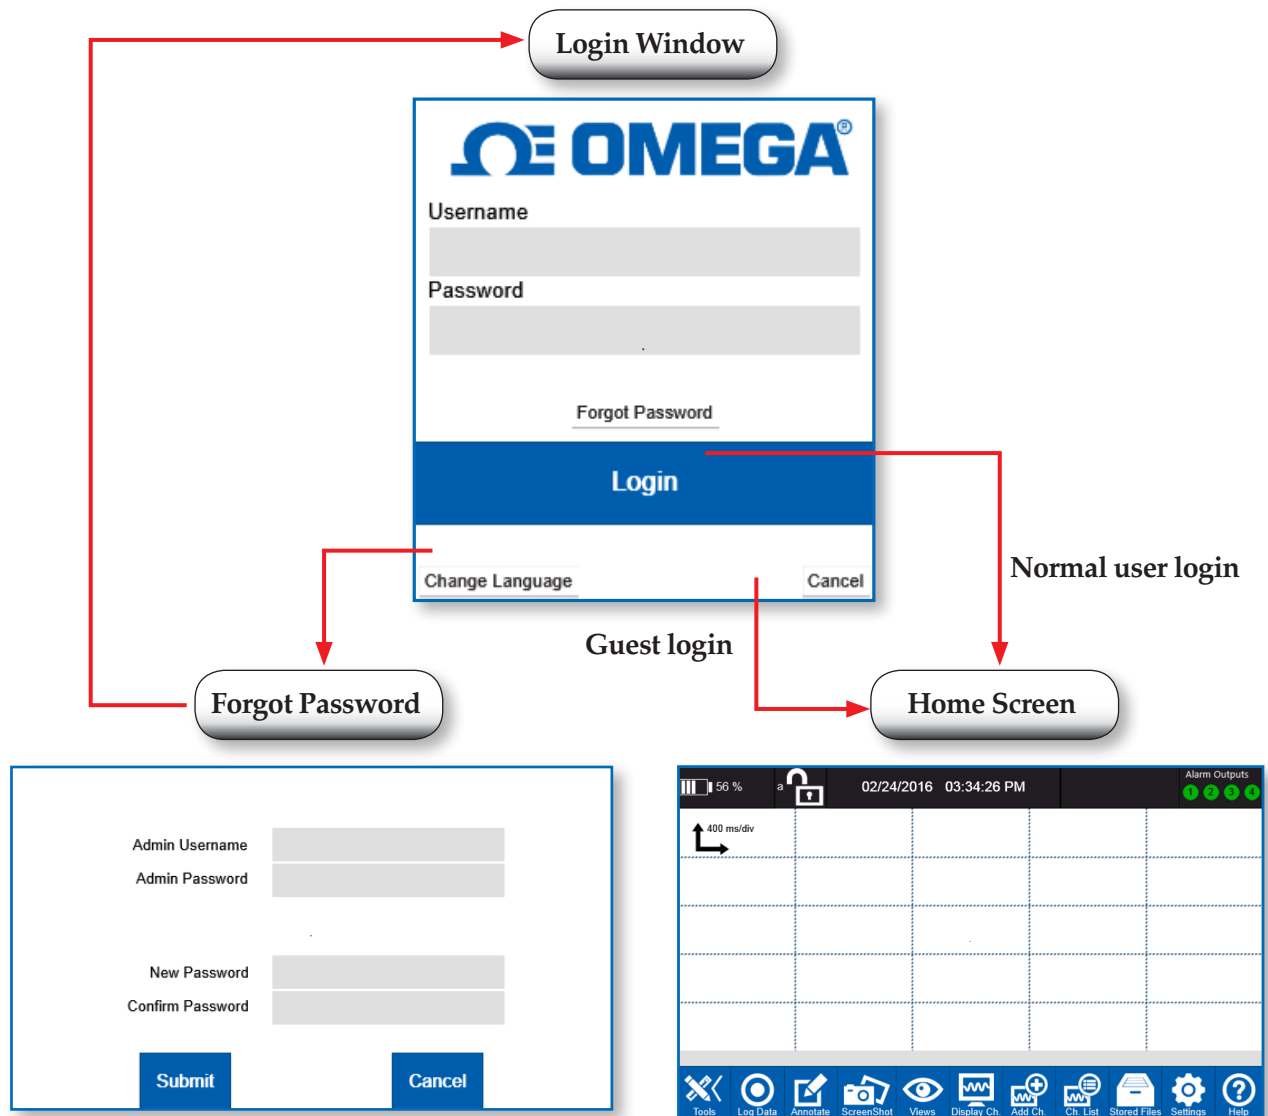


Figure 3-4 Menu Flowchart

**NOTE:** For initial login use the default account with user name and password: omega, omega. This is an administrator account allowing additional users to be created.

### 3 Sensor Wiring

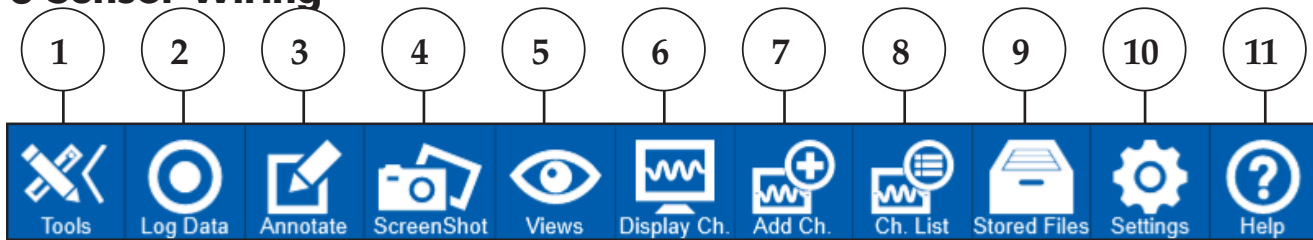


Figure 3-5 Home Toolbar

## 3.1 User Interface Flowchart

## 3.2 Home Toolbar

1. **Tools Button** - Extends or retracts the toolbar with each tap. When the toolbar is retracted there is additional channel information displayed in the toolbar area.
2. **Log Data** - The log data button is used to change the logging state of the data logger. Depending upon the current state this button will appear white (free running), red (logging) or orange (armed).
3. **Annotate** – The annotate button freezes the current display and allows the user the ability to make annotations on the display using the stylus. A screenshot will then be saved showing the annotation.
4. **Screen Shot** – Takes a screenshot of the current display and saves it to the memory location specified in the data session settings.
5. **Views** – Invokes a fly-out menu list with selections for the 4 different view modes as well as a selection for toggling the slide show feature.
6. **Display Channels** – Invokes a fly-out menu list with selections for the four channel groups as well as selection to bring the user to the channel group channel selection screen.
7. **Add Channel** – Opens the add channel screen with the next available channel selected for configuration.
8. **Channel List** - Opens the channel list screen which lists all the currently configured channels.
9. **Stored Files** – Opens the stored files screen to perform various operations on files in stored in memory.
10. **Settings** – Invokes a fly-out menu list with selections for trigger, alarm, and data session and device settings. Each selection opens a screen where settings related to that function can be set and saved.
11. **Help** – Opens a context sensitive help screen which will display content appropriate to the current screen. This button is present in all of the various UI screens.

### 3.3 Add Channels

Channel settings can be configured for new channels using the Input Type and Data Ranges screens. To add a new input channel and configure its settings, hit the Add Channel button on the toolbar to navigate to the Input Type screen. There are two types of channels which can be configured, physical input channels and virtual math channels. Depending on the type of channel being configured, the Input Type screen will have different settings available. The toolbar appears as shown below when adding channels.

#### Input Setup – Physical Input Channel

The Input Type screen is used to configure the basic settings for an input channel. For physical input channels the input type selected will determine the settings available.

#### Temperature Inputs

For temperature input types the Input Type screen will appear as shown below.

The figure shows the 'Physical Input Channel' tab selected. The settings are as follows:

- Input Type:** Temperature
- Sensor Type:** Thermocouple
- Sensor Sub Type:** J Type
- Channel Number:** 3
- Channel Color:** Red
- Channel Name:** (empty)
- Channel Map:**
  - Analog Channels: 16 channels (1-16). Channel 3 is highlighted in orange. Channels 1, 2, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, and 16 are blue.
  - Digital Connector: 9 pins (1-9). Pins 1, 2, 3, 4, 5, 6, 7, 8, and 9 are blue.

Figure 3-6 Input Type - Temperature

#### 1. Channel Type Button

The channel type selects between physical and math channel input types. Temperature inputs are physical input channels.

#### 2. Input Type Settings

For temperature inputs there are multiple sensor types available. These include thermocouple, RTD and thermistor. Each of these sensor types have additional sensor sub types available. The sub type drop-down list will populate with the appropriate subtypes for each sensor type. A channel number, color and name must be assigned for each channel.

#### 3. Channel Map

The channel map provides a quick view of which channels have already been configured (blue) and the currently selected channel (orange). Some temperature input types require the use of two input channels.

The Data Ranges screen appears the same for all temperature input types. Depending on the sensor type selected the fixed values shown for the input and display range will vary.

The screenshot shows the 'Data Ranges' configuration screen for a temperature sensor. It features several input fields and dropdown menus, each highlighted with a red dashed box and a numbered callout:

- 1. Engineering Unit Type:** A dropdown menu currently set to 'Metric'.
- Engineering Unit:** A dropdown menu currently set to '°C'.
- 2. Input Range:** Two text boxes showing '-328' and '2012' separated by a 'to' label.
- 3. Display Range:** Two text boxes showing '-328' and '2012' separated by a 'to' label.
- 4. Zero Adjust:** A text box showing the value '0'.
- 5. Moving Average Filter:** A dropdown menu currently set to 'None'.
- 6. Graph Range:** Two text boxes showing '-328' and '2012' separated by a 'to' label.
- 7. Decimal Places:** A dropdown menu currently set to 'None'.

Figure 3-7 Data Ranges - Temperature

**1. Engineering Units**

The two drop downs allow selection of various engineering units for display.

**2. Input Range**

The input range boxes show the full measureable input of the data logger for the sensor type being configured. These are not editable.

**3. Display Range**

The display range boxes show the full display range available on the data logger. The graph range can be any subset of this range. This range is fixed for all temperature inputs.

**4. Zero Adjust**

The zero adjust provides a user configurable offset adjustment, in engineering units, which will be applied to measurements across the full range of input.

**5. Moving Average Filter**

This setting provides the option to average an individual channels input samples.

**6. Graph Range**

The graph range is the y-axis range that will be shown on the waveform view of the data logger. This can be any subset of the display range and is defined in the assigned engineering units. It can also be adjusted on the waveform view.

**7. Decimal Places**

Selects the number of decimal places to display.

### 3.4 Communication Settings (if applicable)

If you purchased a -EW data logger, your tool bar will have a communications settings button. The Comm settings screen is where you can configure the Ethernet or optional Wi-Fi communication settings

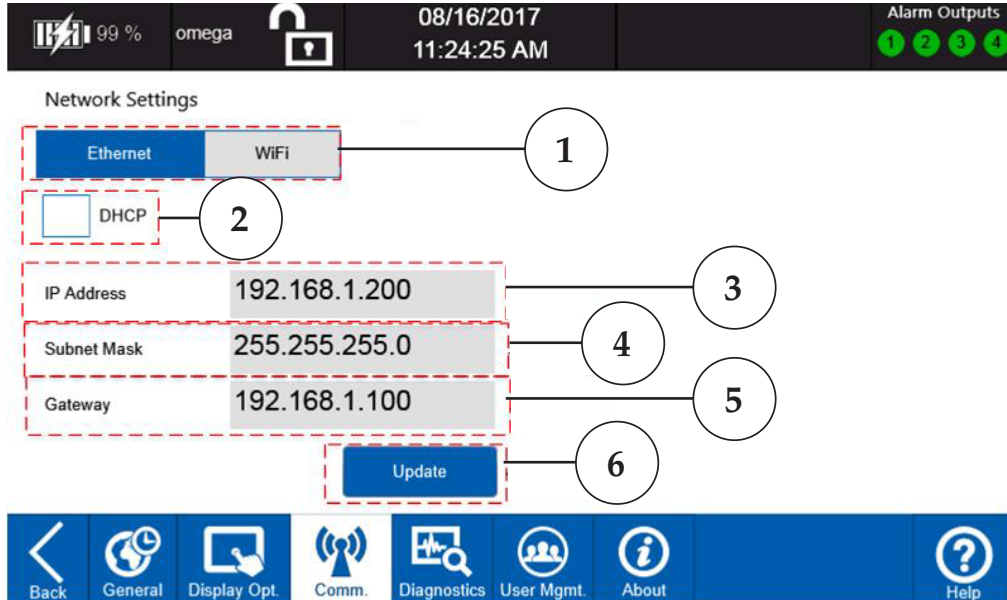


Figure 3-8 Comm Settings – Ethernet

1. **Connection Selection**

This button is used to select the network adapter. The settings for the currently selected network adapter will be shown below.

2. **DHCP**

This checkbox is used to enable or disable DHCP for the currently selected network adapter. DHCP Dynamic Host Configuration Protocol (DHCP) is a client/server protocol that automatically provides an Internet Protocol (IP) host with its IP address and other related configuration information such as the subnet mask and default gateway.

3. **IP Address**

If DHCP is checked the DHCP assigned IP address is shown for the selected adapter. If DHCP is not checked, a static IP address can be entered using the keypad.

4. **Subnet Mask**

If DHCP is checked the DHCP assigned subnet mask is shown for the selected adapter. If DHCP is not checked, a subnet mask can be entered using the keypad.

5. **Gateway**

If DHCP is checked the DHCP assigned gateway IP is shown for the selected adapter. If DHCP is not checked, a gateway IP can be entered using the keypad.

6. **Update**

After configuring the settings, hit the update button to apply the settings to the selected network adapter.

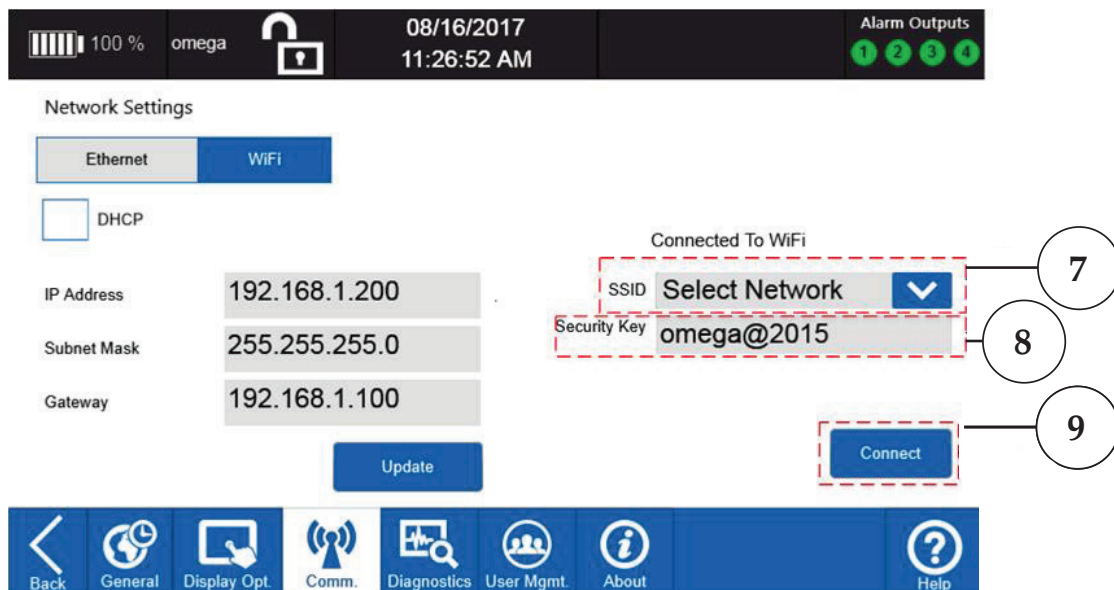


Figure 3-9 Comm Settings - Wi-Fi

7. **SSID – Select Network**  
This dropdown selection will show all of the Wi-Fi networks within range.
8. **Security Key**  
Enter the passphrase or security key for the selected network. If it is an open network, leave this field blank.
9. **Connect**  
Hit the connect button to connect to the selected network.

## 4 Specifications

### 4.1 General

**Display:** 7.0" TFT color LCD (WVGA: 800 x 480 pixels) with chemically hardened touch panel.

**Internal Memory:** 1 GB FLASH Memory

**SD Memory Card:** 32 GB

**Ethernet\*\*:** 10/100 Base-T, TCP/IP

**USB Wi-Fi Dongle\*\*:** 802.11 b/g/n, USB#2.0 interface, Up to 150#Mbps, WEP and WPA/WPA2 encryption schemes

**Operating Environment:** 0 to 50°C (32 to 122°F), 0 to 95% RH non-condensing

**Storage Conditions:** -10 to 60°C (32 to 140°F)

#### Dimensions

**With Rubber Boot:** (9.00 X 6.5 X 3.5")

**Without Rubber Boot:** (8.75 X 5.75 X 2.42")

**Weight:** 3.2 lbs (1.45 kg)\*

**Power Supply:** AC Adapter Input: 100 to 240 Vac, 50 to 60 Hz, 1.5 A max

**AC Adapter Output:** 12 Vdc, 5A max

**Battery:** Lithium Ion Rechargeable (7.2 V, 4800 mAh)

**Battery Life:** Approximately 4-8 hours depending on display settings before recharge

**Screen Time Out:** 30 sec, 1 min, 2 min, 5 min, 10 min, Never

**Slide Show Timing:** 5 sec, 10 sec, 15 sec, 20 sec, 30 sec

**Auto Power Shut Down:** 5 minutes after screen time out

**Line Graph Time Scale:** From 400 msec/div up to 1 hr/div

**External Excitation Output:** 24 Vdc, regulated ( $\pm 2\%$ ) isolated.  
Maximum current output 50 mA

**External I/O:** 4 digital inputs, 4 digital outputs, 4 alarm outputs,  
1 external trigger input.

**Temperature Coefficient:** 50 PPM/°C (for all inputs)

\*Includes battery and rubber boot

\*\*Only available for -EW models

## 4.2 Inputs

Number of Analog Inputs: 8 or 16

Sampling Rate

Maximum Sampling Rate per Number of Channels  
(Analog and Digital):

1 Channel: 125 s/sec

2 Channels: 50 s/sec

4 Channels: 25 s/sec

8 Channels: 10 s/sec

16 Channels: 5 s/sec

Logging Rate

Maximum logging Rate per Number of Channels  
(Analog and Digital):

1 Channel: 125 s/sec

2 Channels: 50 s/sec

4 Channels: 25 s/sec

8 Channels: 10 s/sec

16 Channels: 5 s/sec

### Thermocouple

Type	Range (°C)	Range (°F)	Accuracy at Positive Range (and above -49°C)	Accuracy at Negative Range (-50°C to -200°C)
J	-200 to 1100°C	-328 to 2012°F	±(0.15% of range +1.1°C)	±(0.25% of range +1.1°C)
K	-200 to 1370°C	-328 to 2300°F		
T	-200 to 400°C	-328 to 752°F	±(0.15% of range +1.7°C)	±(0.25% of range +2.6°C)
E	-200 to 1000°C	-328 to 1832°F		
N	-100 to 1300°C	-148 to 2372°F		
R	0 to 1760°C	32 to 3200°F	±(0.15% of range +2.0°C)	±(0.25% of range +2.6°C)
S	0 to 1760°C	32 to 3200°F		
B	500 to 1820°C	932 to 3308°F		
C	0 to 2315°C	32 to 4200°F		

### RTD

Type	Range (°C)	Range (°F)	Accuracy
Pt 100, Pt 500, Pt 1000 (0.00385 curve)	-200 to 850°C	-328 to 1562°F	±(0.25% of reading +1°C)
Pt 100, Pt 500, Pt 1000 (0.00392 curve)	-200 to 660°C	-328 to 1220°F	±(0.25% of reading +1°C)

### Thermistor

Type	Range	Accuracy
2252 Ω	-30 to 150°C	±1°C
10,000 Ω	-5 to 150°C	±1°C

### Current

Range	Measurement Range	Accuracy
20mA	-20 to 20mA	±0.1% of FS

### Frequency

Measurement Range	Accuracy
0 to 250 KHz	±2 Hz

### Voltage

Range	Measurement Range	Accuracy
50mV	-50 to 50mV	±0.1% of FS
100mV	-100 to 100mV	
1V	-1.00 to 1.00V	
5V	-5.00 to 5.00V	
10V	-10.00 to 10.00V	
20V	-20.00 to 20.00V	±0.1V
50V	-30.00 to 30.00V	



**Measurement Accuracy**

\*At room temperature after 40 minute warm up period and with all input sensors connected.

**NOTE:** Short each unused TC input (+, -) with a copper wire.

**Input Type:** Thermocouple, RTD, Thermistor, Voltage, Current, Strain Gage

**Strain Gage Input:** Only Channels 1, 2, 3, 4, 9, 10, 11, 12 are available.

**Frequency Update Rate:** 250 msec

**Digital Input and Functions:** Frequency, volumetric flow rate, totalization, resettable counter

**Virtual Math Channels 1 to 16:** Math equation of any two physical channels

**Filter:**

- Per channel selectable moving average filter: None, 2, 5, 10, 20 or 50 samples

**Resolution:** One to four decimal places depending on the Input type

**Statistics:** Peak to peak, average, minimum, maximum, RMS

**Input Sampling/Logging Rate:** 125 s/sec (1 Channel), 50 s/sec (2 Channels), 25 s/sec (4 Channels), 10 s/sec (8 Channels), 5 s/sec, 1 s/sec, 12 s/min, 6 s/min, 2 s/min, 1 s/min, 12 s/hr, 6 s/hr, 2 s/hr, 1 s/hr (For All Channels)

**Logging Mode:** Interval, average

**Trigger Conditions (Start & Stop):** Timer, date and time, weekday and time, alarm output, external trigger

**Logging Condition:** On command or trigger condition

## 4.3 Functions

### Display

**Views:** Waveform, waveform and table, table only, digital, slide show

**Display Channels:** 4 channels per group – 4 groups

**Stored Files:** Screen capture and log (internal, SD card, USB drive)

**Data Review:** Up to any 4 channels – scroll or page right and left, zoom in, zoom out, annotate

### Device Settings:

- General – Set current Time & Date
- Display Option – Screen Timeout, Background & Grid color, Brightness, Slide show timing, Key sound, Calibrate Touch screen
- Diagnostics – Analog, Digital, Power shut down test & generate report
- User Management – Admin, Normal User (Set User ID & Password)
- About – Firmware Upgrade

### Help:

- Help screen for every menu screen

**Virtual Math Channels:** Up to 16 virtual channels can be created.

**Statistics:** Peak to Peak, Average, Minimum, Maximum, RMS

**Triggers**

**Trigger Types:**

- Start, Stop, Repeat

**Trigger Conditions:**

- Timer, Date & Time, Weekday & Time, Alarm Output, External Trigger

**Logging**

**Logging Modes:**

- Interval, Average

**Logging Conditions:**

- On demand or trigger condition

**Digital input functions:**

Frequency, Volumetric flow, Totalization, Resettable counter

## 4.4 Communication

Protocol: Modbus TCP/IP

## 4.5 External I/O:

**Alarm Outputs:** 4 open collector alarm outputs rated for 0.5A @ 30 Vdc with audible alarm buzzer

**Digital Outputs:** 4 open collector digital outputs rated to 30 mA @ 5 Vdc logically tied to alarm outputs

**Digital Inputs:** 4 Schmitt trigger based inputs

- 0 to 24 Vdc single ended, grounded input range
- Logic high threshold 2.5 V; Logic low threshold 1.5 V
- Contact closure detection
- Maximum input frequency: 250 kHz

**Power Input to Digital I/O Isolation:** 1.5 kVrms

**Alarm Condition:** High, Low, Window In, Window Out, Open Sensor

**On Alarm Event:** Map to 4 Alarm outputs, Sound Buzzer, Take Screen shot





**Alarm Type:** Latch, Non-Latch

**Alarm per Channel:** Two

## 4.6 Dimensions

Dimensions: mm (inch)

Note: Ethernet port is only present on -EW models.

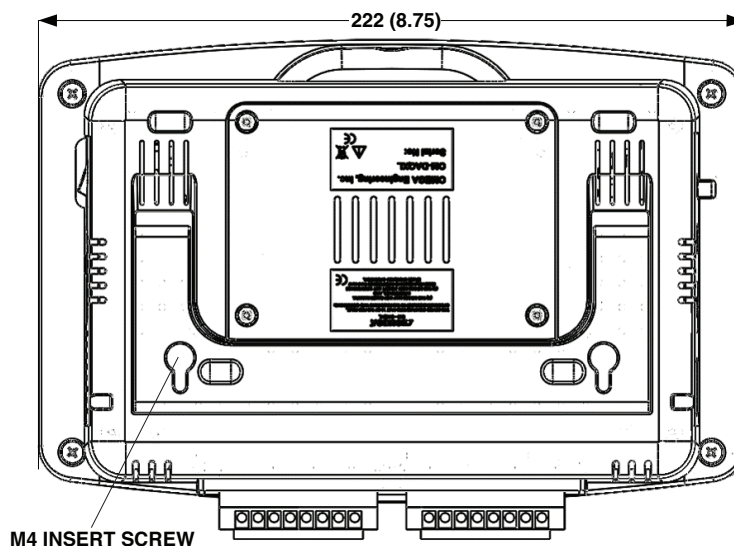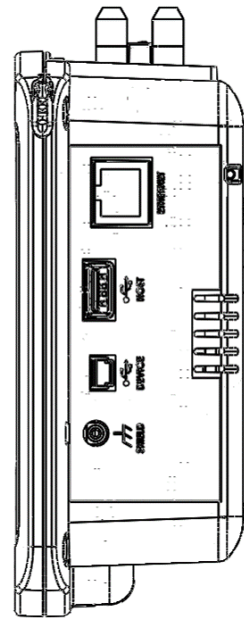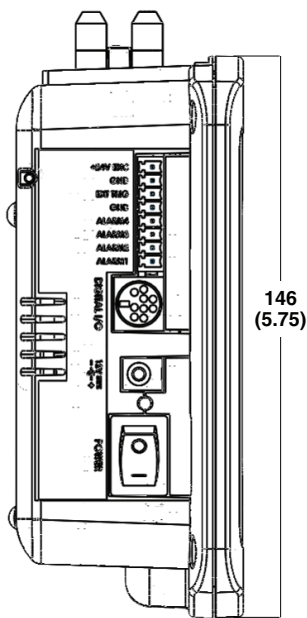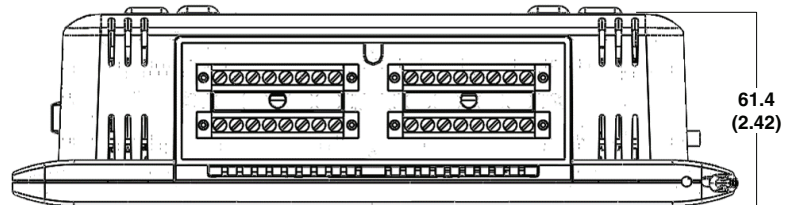



## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2017 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at [omega.com](http://omega.com)*

## **TEMPERATURE**

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

## **PRESSURE, STRAIN AND FORCE**

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

## **FLOW/LEVEL**

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

## **pH/CONDUCTIVITY**

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

## **DATA ACQUISITION**

- ☑ Communications-Based Acquisition Systems
- ☑ Data Logging Systems
- ☑ Wireless Sensors, Transmitters, & Receivers
- ☑ Signal Conditioners
- ☑ Data Acquisition Software

## **HEATERS**

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

## **ENVIRONMENTAL MONITORING AND CONTROL**

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments