


DRSP-I, DRSP-I-DC 4-20 mA Isolated Signal Splitters

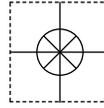

User's Guide

M-5244/1114

Model	Module Power
DRSP-I	85-265 VAC, 50/60 Hz or 60-300 VDC
DRSP-I-DC	9-30 VDC or 10-32 VAC

Description

The DRSP-I series accepts a 4-20 mA current input and provides two optically isolated 4-20 mA current outputs that are linearly related to the input. Typical applications include isolation, output splitting, output device separation, and redundancy (i.e. to prevent failure of the entire loop if one device fails), or a combination of these.

Full 4-way isolation makes this module useful for ground loop elimination, common mode signal rejection, or noise pickup reduction.

Sink/Source I/O

Standard is a 15 VDC loop excitation supply for the input and a 20 VDC loop excitation supply for each output. These power supplies can be selectively wired for sinking or sourcing allowing use with any combination of powered or unpowered milliamp I/O devices.

I/O Status LEDs

A green input LED and two red output LEDs vary in intensity with changes in the process input and output signals. These provide a quick visual picture of your process loop at all times.

Output Test

An output test button provides a fixed output (independent of the input) when held depressed. The test output level is potentiometer adjustable from 0 to 100% of output span.

Terminals are provided to operate the test functions remotely for each channel. This also allows use as a remote manual override to provide a temporary fixed output.

Input Range

4-20 mADC

Input Impedance

50 Ω typical

Voltage Burden

1.25 VDC max. at 20 mA current input

Input Loop Power Supply

15 VDC $\pm 10\%$, regulated, 25 mADC

May be selectively wired for sinking or sourcing mA input

LED Indicators

Variable brightness LEDs indicate I/O loop level and status
One for input, one for each output

Output Range

Channel 1: 4-20 mADC

Channel 2: 4-20 mADC

Output Linearity

Better than $\pm 0.1\%$ of span

Output Zero and Span

Multi-turn zero and span potentiometers for each output channel to compensate for load and lead variations
 $\pm 15\%$ of span adjustment range typical

Output Loop Power Supplies

One for each output channel

20 VDC nominal, regulated, 25 mADC

May be selectively wired for sinking or sourcing mA output

Output Ripple and Noise

Less than 10 mV_{RMS}



Output Functional Test

Front buttons set each output to test level when pressed

Each test level potentiometer adjustable 0-100% of span

Terminals provided for remote switching of each output to test level

Response Time

70 milliseconds typical

Common Mode Rejection

120 dB minimum

Isolation

Full 4-way isolation: input 1, output 1, output 2, power
1200 V_{RMS} minimum

Ambient Temperature Range and Stability

-10°C to +60°C operating ambient

Better than $\pm 0.04\%$ of span per °C stability

Power

85-265 VAC, 50/60 Hz or 60-300 VDC, 6 W maximum

DC version: 9-30 VDC or 10-32 VAC 50/60 Hz, 6 W maximum

Housing

IP 40, mounts to standard 35 mm DIN rail

Connectors

Eight 4-terminal removable connectors

14 AWG max wire size

Dimensions

1.78" W x 4.62" H x 4.81" D

45 mm W x 117 mm H x 122 mm D

Height includes connectors

Shop online at

omega.com[®]

OMEGA[®]

omega.com

e-mail: info@omega.com

For latest product manuals:
omegamannual.info

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9002
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

1 YEAR
WARRANTY

MADE IN
USA

Electrical Connections

WARNING! All wiring must be performed by a qualified electrician or instrumentation engineer. See wiring diagrams.

Avoid shock hazards! Turn signal input, output, and power off before connecting or disconnecting wiring.

The DRSP-I is factory configured for one 4-20 mA input and two 4-20 mA outputs as indicated on the serial number label.

To maintain full isolation, avoid combining power supplies in common with inputs, outputs, or unit power.

The power supplies are fuse protected and the unit may be returned for fuse replacement.

Signal Input Terminals

Polarity must be observed when connecting the signal inputs.

The DRSP-I may be wired for a sinking or sourcing input.

Determine if your input device provides power to the current loop or if the loop must be powered by the DRSP-I. Typical voltage may be 9-24 VDC at your device's terminals if it provides power to the loop.

Type of Input Device	- Terminal	+ Terminal
Transmitter with mA (current) output that provides power to the current loop. Typically a 3 or 4-wire device.	17 (-)	19 (+)
Transmitter with mA (current) output that is unpowered. Typically a 2-wire device. DRSP-I module provides loop power.	19 (-)	18 (+15 V)

Signal Output Terminals

Polarity must be observed when connecting the signal outputs.

The two DRSP-I output channels may be individually wired for a sinking or sourcing output as needed.

For each channel determine if your output device provides power to the current loop or if the loop must be powered by the DRSP-I. Typical voltage may be 9-24 VDC at your device's terminals if it provides power to the loop.

The wiring diagram illustrates typical wiring examples. Each channel may be wired as needed.

If the output does not function, check wiring and polarity for both inputs and outputs.

Type of Device for Output Channel 1	- Terminal	+ Terminal
Measuring/recording device accepts a mA (current) input and the input is unpowered or passive. DRSP-I provides the loop power.	3 (-)	4 (+20 V)
Measuring or recording device accepts a mA (current) input and provides power to the current loop.	2 (-)	3 (+)

Type of Device for Output Channel 2	- Terminal	+ Terminal
Measuring/recording device accepts a mA (current) input and the input is unpowered or passive. DRSP-I provides the loop power.	7 (-)	8 (+20 V)
Measuring or recording device accepts a mA (current) input and provides power to the current loop.	6 (-)	7 (+)

Module Power Terminals

Check white model/serial number label for module operating voltage to make sure it matches available power.

Connect power last. When using DC power, either polarity is acceptable, but for consistency with similar products, positive (+) can be wired to terminal 13 and negative (-) can be wired to terminal 16.

Current Sinking Outputs

Typical of some PLCs that have current sourcing inputs.

Current Sinking Outputs with Separate Power Supplies

Typical of a system using loop powered displays with external loop supplies.

Current Sourcing Outputs

DRSP-I provides power to each loop. Typical of a system or PLC using current sinking inputs.

External Contacts For Test Function

Closing the contact provides the same function as pressing the Test button for each channel. May be used as a manual override.

Output LEDs: Variable brightness red LED indicates output level for each channel

Test Cal.: Output test level adjustment

Test: Push to test output. Sets each output to level determined by Test Cal. potentiometer.

Span: Output span calibration for each channel

Input LED: Variable brightness green LED indicates input level

Zero: Output zero calibration for each channel

Current Sourcing Input

DRSP-I provides power to input loop. Typical when using a passive or unpowered transmitter or sensor.

Current Sinking Input


Typical of a system using a transmitter that is externally powered and provides power to the loop.

Current Sinking Input with Separate Power Supply

Typical of a system using a passive transmitter that uses a loop power supply to power to the loop.

Module Power

DRSP-I: 685-265 VAC, 50/60 Hz or 60-300 VDC
DRSP-I-DC: 9-30 VDC or 10-32 VAC 50/60 Hz

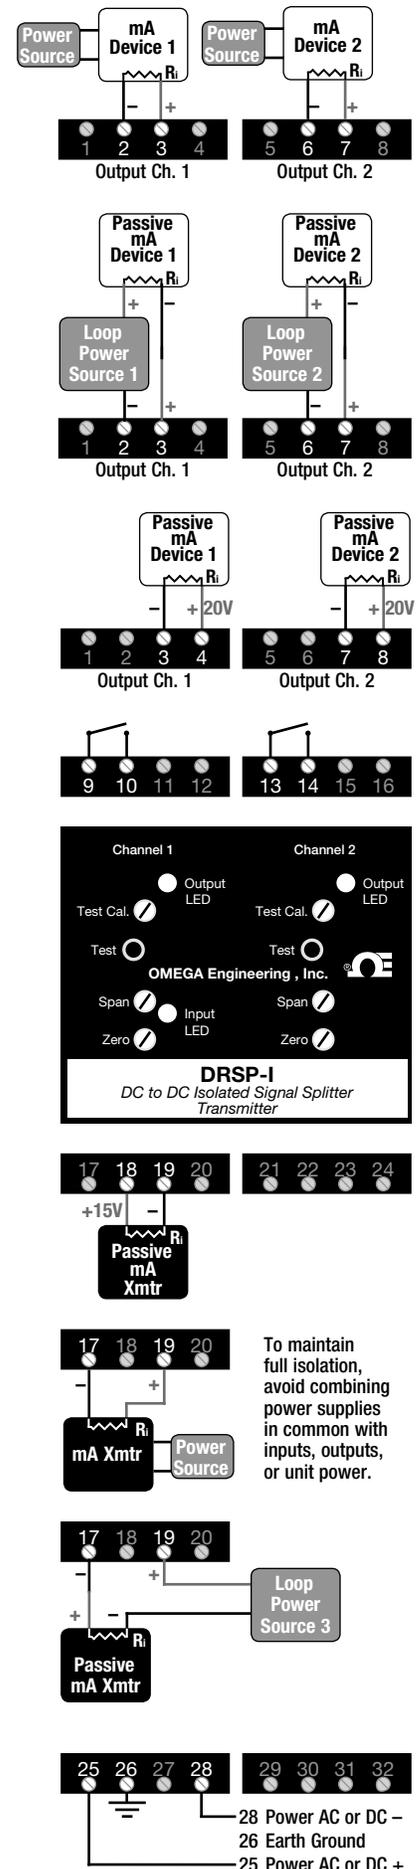

Mounting


The housing clips to a standard 35 mm DIN rail. The housing is IP40 rated and should be mounted inside a panel or enclosure. See illustration below.

Avoid shock hazards! Turn signal input, output, and power off before installing or removing module.

1. Tilt front of module downward and position the lower mounts and spring clips against the bottom edge of DIN rail.
2. Push front of module upward until upper mount snaps into place.

Removal

1. Push up on bottom back of module.
2. Tilt front of module downward to release upper mount from top edge of DIN rail.
3. The module can now be removed from the DIN rail.

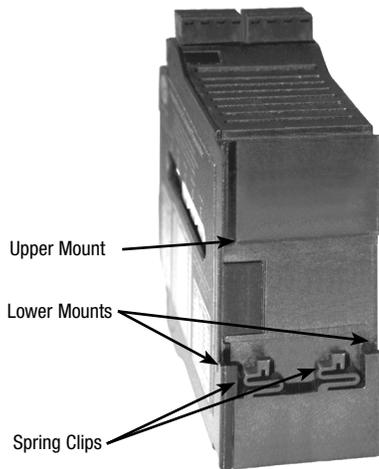

Calibration

Front-mounted Zero and Span potentiometers for each channel can be used to compensate for load and lead variations.

1. Apply power to the module and allow a minimum 30 minute warm up time.
2. Using an accurate calibration source, provide an input to the module equal to the minimum input required for the application.
3. Using an accurate measurement device for the output, adjust the Zero potentiometer for the exact minimum output desired. The Zero control should only be adjusted when the input signal is at its minimum. This will produce the corresponding minimum output signal. The Zero control will provide adjustment for the 4 mA or low end of the signal.
4. Set the input at maximum, and then adjust the Span pot for the exact maximum output desired. The Span control should only be adjusted when the input signal is at its maximum. This will produce the corresponding maximum output signal. The Span control will provide adjustment for the 20 mA or high end of the signal.
5. Repeat adjustments for maximum accuracy.
6. Repeat adjustments for second channel.

Output Test Function

When the Test button is depressed it will drive the output with a known good signal that can be used as a diagnostic aid during initial start-up or troubleshooting. When released, the output will return to normal.

The Test Cal. potentiometer is factory set to approximately 50% output. It can be adjusted to set the test output from 0 to 100% of the output span.

Press and hold the Test button and adjust the Test Cal. potentiometer for the desired output level.

The output test function for each channel may be externally wired for remote test operation or a manual override. See wiring diagram.

Operation

The DRSP-I accepts a 4-20 mA current input and provides two optically isolated 4-20 mA current outputs that are linearly related to the input.

The green input LED provides a visual indication that a signal is being sensed by the input circuitry of the module. It also indicates the input signal strength by changing in intensity as the process changes from minimum to maximum.

If the LED fails to illuminate, or fails to change in intensity as the process changes, check the module power or signal input wiring.

The two red output LEDs provide a visual indication that the output signals are functioning. They become brighter as the input and each corresponding output change from minimum to maximum.

The red LED will only light if the output loop current path is complete. Failure to illuminate or a failure to change in intensity as the process changes may indicate a problem with the module power or signal output wiring.

Note that it may be difficult to see the LEDs under bright lighting conditions and low I/O levels.



OMEGAnet® Online Service www.omega.com	Internet e-mail info@omega.com
---	-----------------------------------

Servicing North America:

USA: One Omega Drive, Box 4047
Stamford CT 06907-0047
Tel: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1, Canada
Tel: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico: En Español: (001) 203-359-7803 e-mail: espanol@omega.com
FAX: (001) 203-359-7807 info@omega.com.mx

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: +31 (0)20 3472121 FAX: +31 (0)20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: sales@omegaeng.nl

Czech Republic: Frystatska 184, 733 01 Karviná, Czech Republic
Tel: +420 (0)59 6311899 FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342 e-mail: info@omegashop.cz

France: 11, rue Jacques Cartier, 78280 Guyancourt, France
Tel: +33 (0)1 61 37 2900 FAX: +33 (0)1 30 57 5427
Toll Free in France: 0800 466 342
e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom: One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5BD United Kingdom
Tel: +44 (0)161 777 6611
FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. WARNING: These products are not designed for use in, and should not be used for, human applications.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 13 months from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

PATENT NOTICE: U. S. Pat. No. 6,074,089; 5,465,838 / Canada 2,228,333; 2,116,055 / UK GB 2,321,712 / Holland 1008153 / Israel 123052 / France 2 762 908 / EPO 0614194. Other patents pending.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2004 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.