

1 YEAR
WARRANTY

Ω OMEGA™

User's Guide



**Shop online at
omega.com**

**e-mail: info@omega.com
For latest product manuals:
www.omegamanual.info**

DRST-FR Programmable Converter



omega.com info@omega.com
Servicing North America:

**U.S.A.
Headquarters:**

Omega Engineering, Inc.
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378 (USA & Canada only)
Engineering Service: 1-800-872-9436 (USA & Canada only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide



Table of Contents

Section	Page
Section 1 Warning	4
Section 2 Symbol Identification	5
Section 3 Safety Instructions	6
Section 4 How to demount	7
Section 5 In General	8
Section 6 Applications	8
Section 7 Technical Characteristics	9
Section 8 Analogue output	9
Section 9 Digital Ouput(s).....	9
Section 10 Relay Outputs	9
Section 11 Status indication	9
Section 12 Electrical specifications	10
Section 13 Inputs	11
Section 14 Order	14
Section 15 DRST-FR connection to Loop Link	14
Section 16 Block diagram DRST-FR/A	15
Section 17 Block diagram DRST-FR/B	16

WARNING**GENERAL**

This device is designed for connection to hazardous electric voltages. Ignoring this warning can result in severe personal injury or mechanical damage. To avoid the risk of electric shock and fire, the safety instructions of this manual must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following. Prior to the commissioning of the device, this manual must be examined carefully. Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

**HAZARDOUS
VOLTAGE****WARNING**

Until the device is fixed, do not connect hazardous voltages to the device. The following operations should only be carried out on a disconnected device and under ESD safe conditions:

- Dismantlement of the device for setting of DIP-switches and jumpers.
- General mounting, connection and disconnection of wires. Troubleshooting the device.



Repair of the device and replacement of circuit breakers must be done by Omega A/S only.

WARNING**INSTALLATION**

To keep the safety distances, the device must neither be connected to hazardous nor non-hazardous voltages on the same device's relay contacts. DRST-FR must be mounted on DIN rail according to DIN 46277. The communication connector of DRST-FR is connected to the input terminals on which dangerous voltages can occur, and it must only be connected to the programming unit Loop Link by way of the enclosed cable.

Section 2 - Symbol Identification



Triangle with an exclamation mark: Warning/demand. Potentially lethal situations.



The CE mark proves the compliance of the device with the essential requirements of the directives.



The double insulation symbol shows that the device is protected by double or reinforced insulation.



Ex devices have been approved acc. to the ATEX directive for use in connection with installations in explosive areas.

Section 3 - Safety instructions

Definitions

Hazardous voltages have been defined as the ranges: 75 to 1500 Volt DC, and 50 to 1000 Volt AC.

Technicians are qualified persons educated or trained to mount, operate, and also troubleshoot technically correct and in accordance with safety regulations.

Operators, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

Receipt and unpacking

Unpack the module without damaging it. The packing should always follow the module until this has been permanently mounted. Check at the receipt of the module whether the type corresponds to the one ordered.

Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation. All devices fall under Installation Category II, Pollution Degree 1, and Insulation Class II.

Mounting

Only technicians who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these should connect the device. Should there be any doubt as to the correct handling of the device, please contact Omega Engineering Tech Support.

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in the block diagram and side label.

The following apply to fixed hazardous voltages-connected devices:

The max. size of the protective fuse is 10 A and, together with a power switch, it should be easily accessible and close to the device. The power switch should be marked with a label telling it will switch off the voltage to the device.

Year of manufacture can be taken from the first two digits in the serial number.

Calibration and Adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

Normal operation

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.

Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

Liability




To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against Omega A/S that would otherwise exist according to the concluded sales agreement.

Section 4 - How to Demount DRST-FR

First, remember to demount the connectors with hazardous voltages. By lifting the bottom lock, the device is detached from the DIN rail as shown in picture 1.

Then, by lifting the upper lock and pulling the front plate simultaneously, the PCB is removed as shown in picture 2.

Switches and jumpers can now be adjusted. By opening the front, the programming connector is accessible as shown in picture 3.

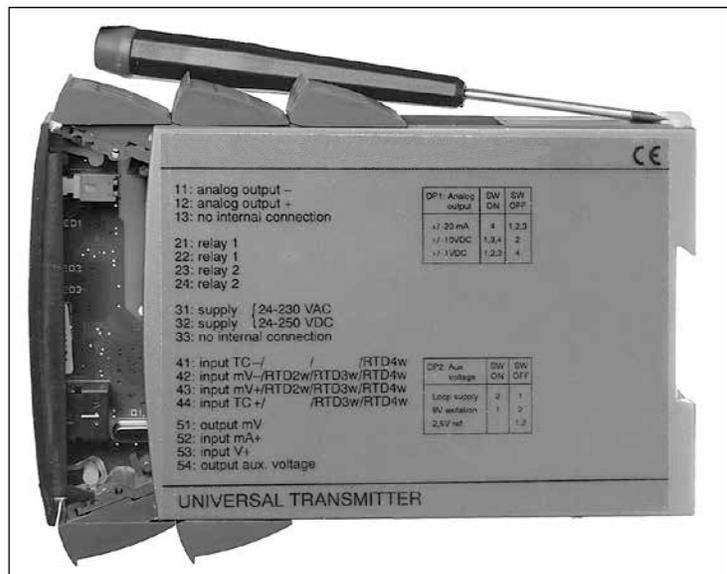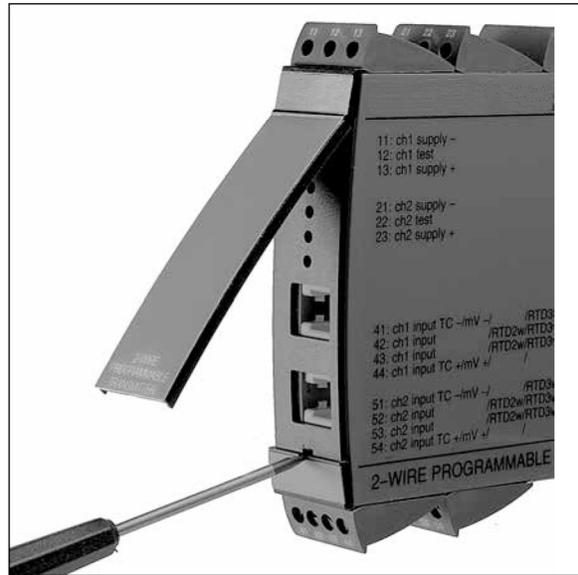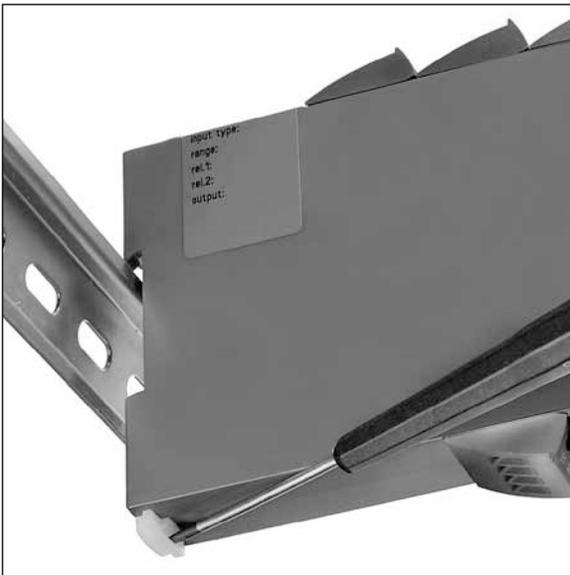

Section - Programmable f/I - f/f Converter DRST-FR

- Pulse calculator
- Frequency generator
- Galvanic isolation, optional ATEX Ex
- Analogue current and voltage output
- PNP / NPN output, optional relays
- Universal supply

Supply voltage: 24...250 VDC
24...230 VAC

INPUT RANGE:

Frequency: 0...20000 Hz
Sensor types: Namur, tacho,
NPN, PNP, TTL, S0

OUTPUT RANGE:

Current and voltage output: 0...20 mA / 0...10 V
Relay outputs: 0...20 Hz
NPN and PNP output as f/f: 0...1000 Hz
NPN and PNP output as generator: 0...20000 Hz

Section 5 - In general

By way of a standard PC and the Loop Link programming kit, the OMset Software with DRST-FR f/I - f/f converter is configured acc. to the requested function.

Alternatively, the DRST-FR may be delivered fully-configured acc. to your specifications, see the options index in the data sheet. Typical pulse sources are flow meters, tacho generators, mechanical switches, or inductive proximity sensors.

Section 6 - Applications

The f/I function performs frequency to current and voltage conversion. The output can be programmed to show period, meaning that the input frequency can be converted to a linear time signal. The digital outputs are used as e.g. a frequency watch for speed control or as a window comparator having one status between 2 limits and the opposite status outside these limits.

The f/f function can be used for pulse division or multiplication and as a buffer collecting fast pulse trains. The input pulses are calculated, counted in a buffer, and sent to the output as a pulse train with the programmed pulse width. A scale factor may be entered in all functions. Using both digital inputs, pulse addition or subtraction are possible. This function permits readout of the actual consumption at measurement of e.g. liquid flows forward and backward.

The frequency generator function is used as e.g. a time base or clockgenerator.

The 2-phase encoder, or directional f/I conversion, converts 2 90°-phased digital inputs to an analogue speed signal with digital output for directional indication.

ATEX Ex units have input for mechanical contact and NAMUR inductive proximity sensor.

Section 7 - Technical characteristics

Inputs

2 programmable inputs for standard pulse generator connection. Normally, the auxiliary supply and trigger level follow the sensor type, but these can be programmed to other values.

At contact input, the 50 Hz filter should be applied. The DRST-FR is protected against polarity reversal on input and supply.

Section 8 - Analogue output

The current and voltage signals are galvanically separated from the supply and the inputs.

The analogue current and voltage output can be scaled acc. to your choice in relation to the digital input. Max. zero offset is 50% of selected measurement range. Programmable response time.

Short-circuit-protected output.

When both current and voltage signals are used simultaneously, the mA loop to ground must pass through the internal shunt.

Standard voltage output (pin 12) is obtained by leading the current signal (pin 13) through an internal shunt resistor (pin 12). At voltage signals in the ranges 0...1 VDC, a 50 Ω shunt (JP1) is applied; in the ranges 0...10 VDC, a 500 Ω shunt (JP2) is applied.

Section 9 - Digital output(s)

The action on the outputs can be inverted, and the hysteresis can be set acc. to your specifications.

At power up, shifts on the outputs can be delayed for up to 999 s.

NPN and PNP outputs for external relay, electromechanical counter, PLC input, or equivalent load.

The outputs are current-limited by way of PTC resistors.

Section 10 - Relay outputs

The DRST-FR can be delivered with 2 relay outputs that are programmed individually.

Section 11 - Status indication

The DRST-FR is equipped with 5 front LEDs.

f1 and f2 in:	Indicates an active input (non-active at NPN input).
Dig. out. 1 and 2:	Indicates active output.
Error:	Programmable by use of OMeSet to indicate sensor errors.

Electrical specifications

Specifications range -20°C to +60°C

Common specifications:

Supply voltage	19.2...300 VDC
	21.6...253 VAC
Frequency	50...60 Hz
Fuse	400 mA T / 250 VAC
Internal consumption	3 W
Max. consumption	3.5 W
Isolation, test / operation	3.75 kVAC / 250 VAC
Power up delay	0...999 s
Warm-up time1 min.
Communications interface	Loop Link
Signal / noise ratio	Min. 60 dB
Response time, analogue	< 60 ms + period
Response time, digital output	< 50 ms + period
Signal dynamics, output	16 bit
Calibration temperature	20...28°C
Temperature coefficient	< ± 0.01% of span / °C
Linearity error	< ± 0.1% of span
Effect of supply voltage change	< 0.005% of span / VDC

Auxiliary voltages:

NAMUR supply	8.3 VDC ± 0.5 VDC / 8 mA
NAMUR supply EEx	8.5 VDC ± 0.5 VDC / 8 mA
S0 supply	17 VDC / 20 mA
NPN / PNP supply	17 VDC / 20 mA
Special supply (programmable)	5...17 VDC / 20 mA

EMC immunity influence

	< ± 0.5%
--	----------

Max. wire size	1 x 2,5 mm ² stranded wire
Screw terminal torque	0.5 Nm
Air humidity	<95% RH (non cond.)
Dimensions (HxWxD)	109 x 23.5 x 130 mm
DIN rail type	DIN 46277
Protection degree	IP20
Weight	250 g

Input:**General:**

Measurement range	0...20 kHz
Min. measurement range	0.001 Hz
Max. offset	90% of selected max. frequency
Min. pulse width (without filter)	25 μ s
Min. period (without filter)	50 μ s
Max. frequency (without filter)....	20 kHz
Min. pulse width (with filter)	10 ms
Min. period (with filter)	20 ms
Max. frequency (with filter)	50 Hz
Programmable trig level	0.025...6.5 V (nom.)
	1...8 mA (nom.)

NAMUR input acc. to DIN 19234:

Trig-level LOW	≤ 1.2 mA
Trig-level HIGH.....	≥ 2.1 mA
Input impedance	1000 Ω

Sensor error detection (only for NAMUR):

Breakage	≤ 0.1 mA
Short-circuit.....	≥ 7.0 mA
Response time.....	≥ 400 ms

Tacho input:

Trig-level LOW	≤ -40 mV
Trig-level HIGH.....	≥ 40 mV
Input impedance	≥ 100 k Ω
Max. input voltage.....	80 VAC pp

NPN / PNP input:

Trig-level LOW	≤ 4.0 V
Trig-level HIGH.....	≥ 7.0 V
Input impedance, standard	3.48 k Ω
Input impedance, special version	3.48...12 k Ω

2-phase encoder:

Min. pulse width (without filter)	1 ms
Min. period (without filter).....	2 ms
Max. frequency (without filter)....	500 Hz

TTL input:

Trig-level LOW ≤ 0.8 VDC
 Trig-level HIGH..... ≥ 2.0 VDC
 Input impedance ≥ 100 k Ω

S0 input acc. to DIN 43 864:

Trig-level LOW ≤ 2.2 mA
 Trig-level HIGH ≥ 9.0 mA
 Input impedance 800Ω

Analogue output:

Current output:

Signal range $0..20$ mA
 Min. signal range 5 mA
 Max. offset..... 50% of selected max. value
 Updating time..... 20 ms
 Load (max.)..... 20 mA / 600Ω / 12 VDC
 Load stability $< \pm 0.01\%$ of span / 100Ω
 Current limit ≤ 23 mA

Voltage output through internal shunt:

Signal range $0..10$ VDC
 Min. signal span 250 mV
 Max. offset..... 50% of selected max. value
 Load (min.)..... 500 k Ω

Active outputs (NPN / PNP):

I_{max} , source 10 mA
 I_{max} , sink 130 mA
 V_{max} 28 VDC

f/f converter output:

Signal range $0..1000$ Hz
 Min. pulse width..... $500 \mu s$
 Max. pulse width 999 ms
 Max. duty cycle 50%


Frequency generator:

Min. period $50 \mu s$
 Max. frequency 20 kHz
 Duty cycle..... 50%


Section 14 - ORDER

Type	Version	Output
DRST-FR	Standard : A	Analogue + NPN / PNP : 1
		Analogue + relay output : 2

Section 15 - DRST-FR connection to Loop Link

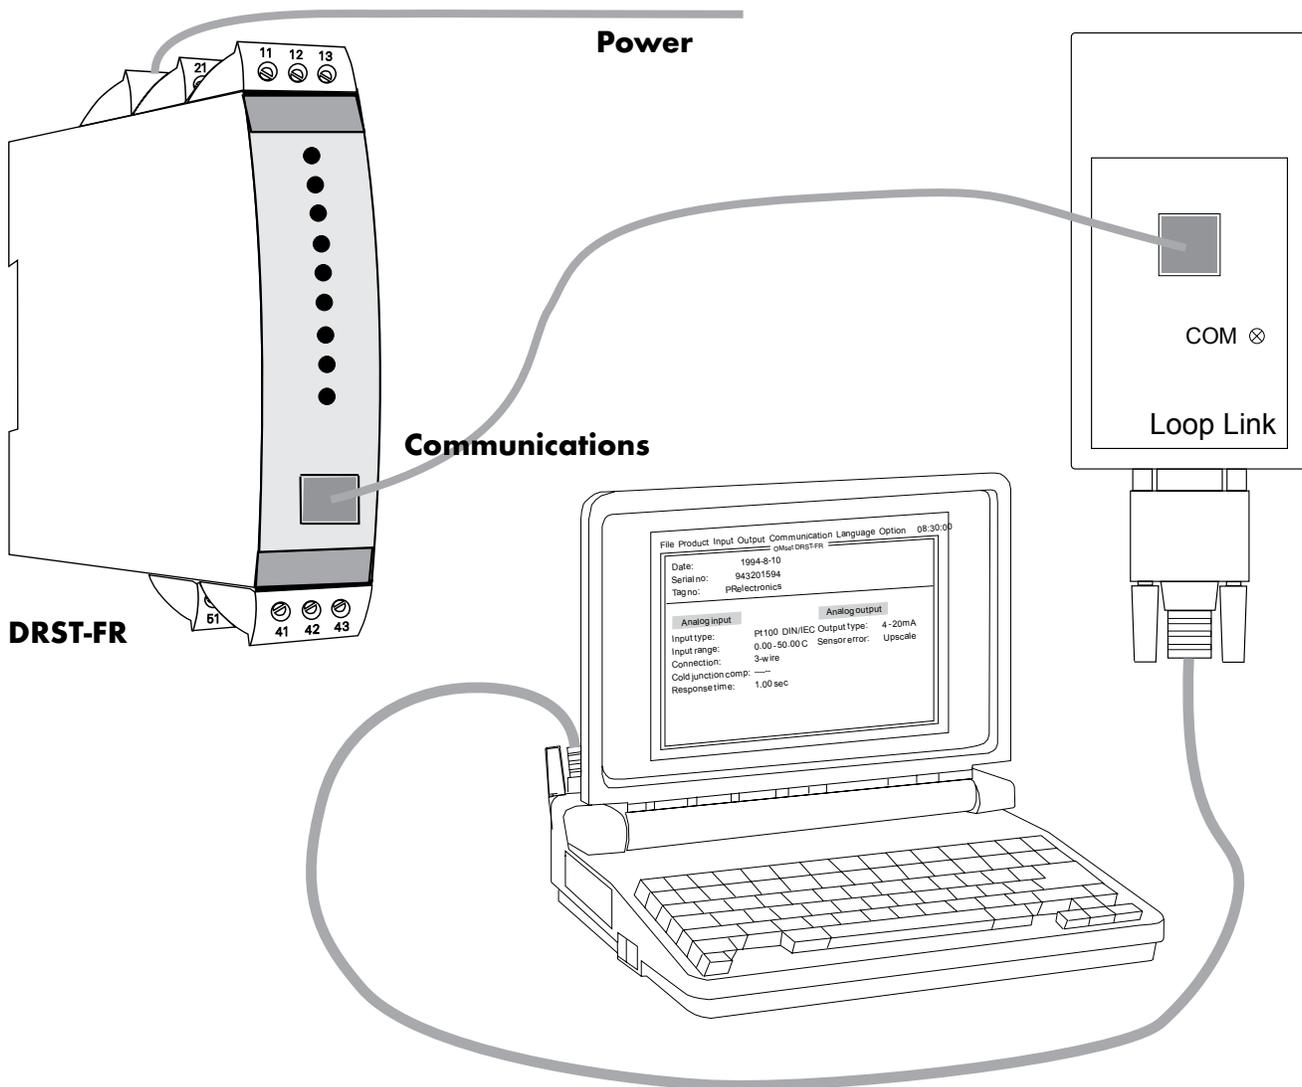

Section 16 - Block Diagram DRST-FR / A

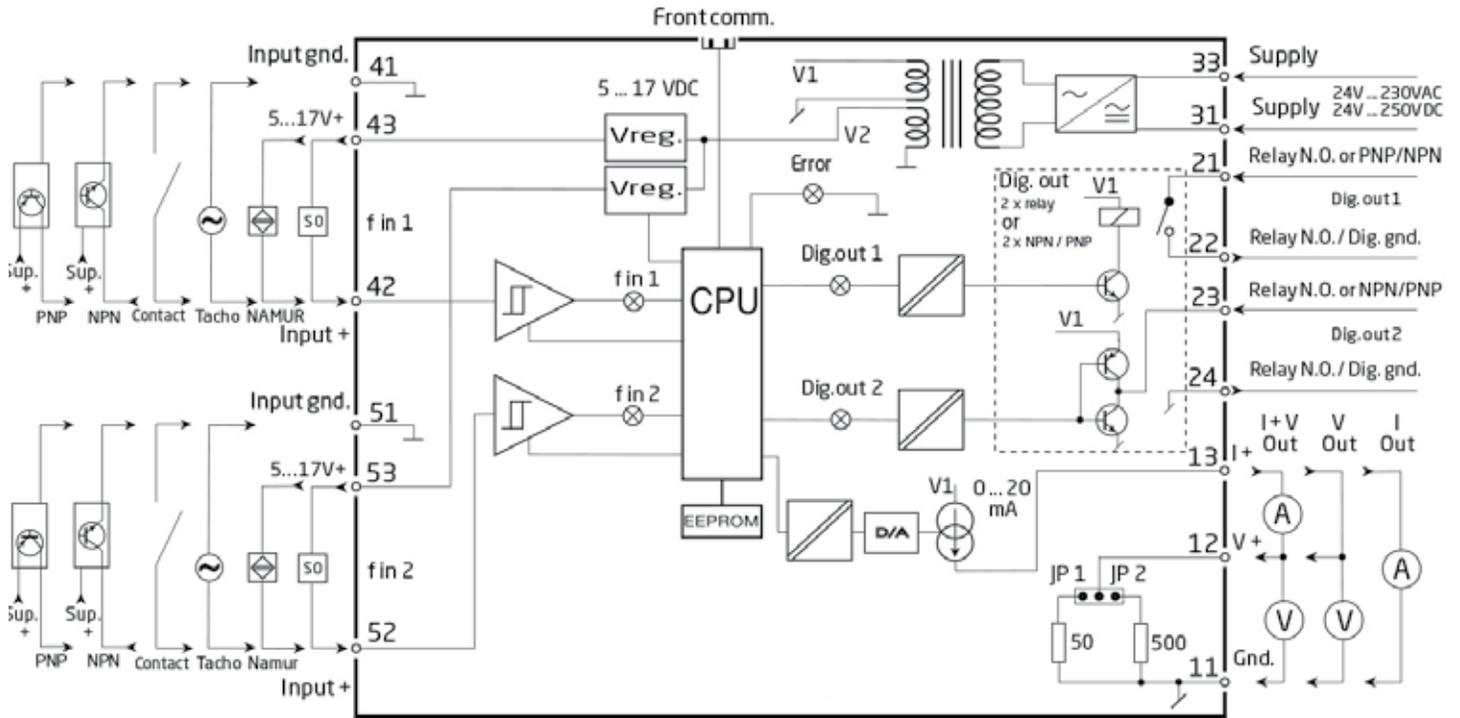

NOTES

Section 6.1 - Displays

Programmable displays with a wide selection of inputs and outputs for display of temperature, volume and weight, etc. Feature linearization, scaling, and difference measurement functions for programming via OMeSet software.




6.2 - EX Interfaces

Interfaces for analog and digital signals as well as HART[®] signals between sensors/I/P converters / frequency signals and control systems in Ex zone 0, 1 & 2 and for some devices in zone 20, 21 & 22.




6.3 - Isolation

Galvanic isolators for analog and digital signals as well as HART[®] signals. A wide product range with both loop powered and universal isolators featuring linearization, inversion, and scaling of output signals.

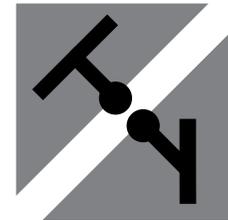


6.4 - Temperature

A wide selection of transmitters for DIN form B mounting and DIN rail devices with analog and digital bus communication ranging from application-specific to universal transmitters.

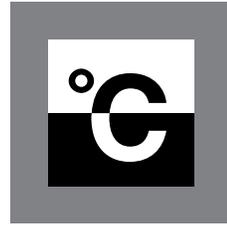

6.5 - Universal

PC or front programmable devices with universal options for input, output and supply. This range offers a number of advanced features such as process calibration, linearization and auto-diagnosis.

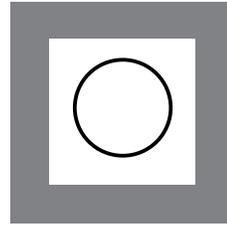

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2018 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Communications-Based Acquisition Systems
- ☑ Data Logging Systems
- ☑ Wireless Sensors, Transmitters, & Receivers
- ☑ Signal Conditioners
- ☑ Data Acquisition Software

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments