

**1 YEAR**  
WARRANTY



**Ω OMEGA™**

# User's Guide

*Shop online  
at  
**omega.com***

*e-mail: [info@omega.com](mailto:info@omega.com)  
For latest product  
manuals:  
[www.omegamanual.info](http://www.omegamanual.info)*

## **OS310-Series** **High Performance Infrared Thermometer**



omega.com info@omega.com

**Servicing North America:**

**U.S.A.**

**Headquarters:**

Omega Engineering, Inc.

800 Connecticut Ave. Suite 5N01, Norwalk, CT 06854

Toll-Free: 1-800-826-6342 (USA & Canada only)

Customer Service: 1-800-622-2378 (USA & Canada only)

Engineering Service: 1-800-872-9436 (USA & Canada only)

Tel: (203) 359-1660

Fax: (203) 359-7700

e-mail: info@omega.com

# Table of Contents

Table of Contents .....	Error! Bookmark not defined.
1) Introduction .....	Error! Bookmark not defined.
1.1 How it works.....	Error! Bookmark not defined.
1.2 Caution .....	Error! Bookmark not defined.
2) Specifications .....	Error! Bookmark not defined.
3) Operating Instructions .....	Error! Bookmark not defined.
3.1 Battery Installation: .....	Error! Bookmark not defined.
3.1.1 Changing Units.....	6
3.1.2 Back Lighting.....	6
3.1.3 Adjusting Laser.....	6
3.1.4 Adjusting Temperature Assistant.....	6
3.1.5 Changing Emissivity and Alarm Values.....	6
3.2 LCD Display: .....	7
3.3 Locating a Hotspot: .....	7
3.4 Keypad and components: .....	7
4) Maintenance .....	Error! Bookmark not defined.

# 1) Introduction

The OS310-series handheld digital IR thermometer is used for non-contact temperature measurement of metals, ceramics, graphite, etc. in temperature ranges between -50°C (-58 °F) and 1650°C (3002°F). This portable battery powered unit displays current temperature as well as minimum, maximum, average and differential temperatures. Other features include an adjustable emissivity, alarm settings and a single laser dot to help locate the target.

## 1.1 How it works


The sensor determines temperature by focusing the infrared energy that is radiated from an object. The focused energy is converted into an electrical signal proportional to the energy emitted. A clean line of sight free of dust or mist is needed between the sensor and the object. For increased ease and accuracy, the laser pointer makes aiming even more precise.

### Measurement:

When taking measurement, point thermometer toward the object to be measured and hold the trigger. The object under test should be larger than the spot size calculated by the field of view diagram below.

### Field of View:

Field of view, or distance to spot ratio, is the size of an area that can be measured from a specified distance. As the distance from the object increases, the spot size of the measuring area becomes larger. Make sure the target is larger than the unit's spot size. When accuracy is critical, make sure the target is at least twice as large as the spot size. Please see field of view diagram for the OS310-Series below.

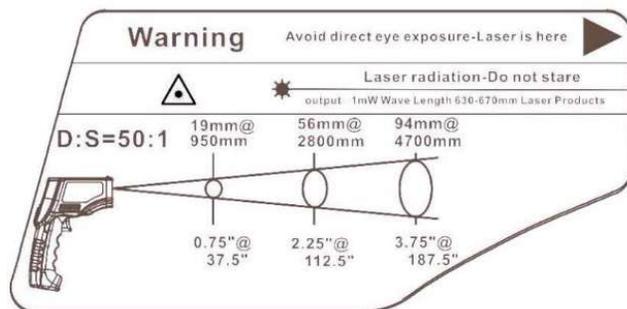

### Emissivity:

Most organic materials and painted or oxidized surfaces have an emissivity of 0.95. Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate adjust the emissivity setting to match the material using the emissivity table. Another option is to set the emissivity to 0.95 and cover the measured surface with masking tape or flat black paint. Then measure the tape or painted surface when it reaches the material temperature.

### Emissivity Table:


Material	Emissivity	Material	Emissivity
Aluminum	0.30	Iron	0.70
Asbestos	0.95	Lead	0.50
Asphalt	0.95	Limestone	0.98
Basalt	0.70	Oil	0.94
Brass	0.50	Paint	0.93
Brick	0.90	Paper	0.95
Carbon	0.85	Plastic	0.95
Ceramic	0.95	Rubber	0.95
Concrete	0.95	Sand	0.90
Copper	0.95	Skin	0.98
Dirt	0.94	Snow	0.90
Frozen Food	0.90	Steel	0.80
Hot food	0.93	Textiles	0.94
Glass (plate)	0.85	Water	0.93
Ice	0.98	Wood	0.94

## 1.2 Caution

Infrared thermometer should be protected for the following:

- EMF (electro-magnetic fields) from arc welders and induction heaters.
- Thermal shock (caused by large or abrupt ambient temperature changes allow 30 minutes for unit to stabilize before use).
- Do not leave the unit on or near objects of high temperature.

Warning: Do not point laser directly at eye or indirectly off reflective surfaces!

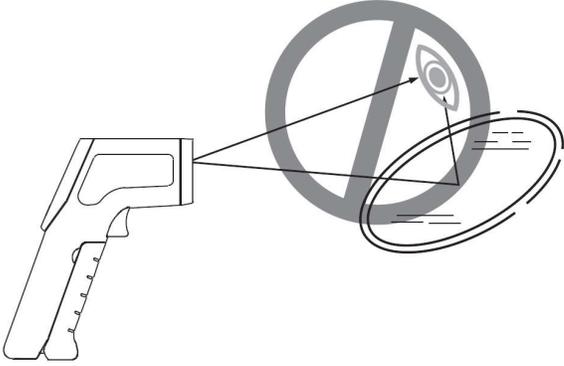

## 2) Specifications

<b>Temperature Range</b>	-50 to 1650°C (-58 to 3002°F)
<b>Accuracy</b>	±1.5% rdg or ±1.5°C (2.7°F), whichever is better
<b>Field of View</b>	50:1
<b>Resolution</b>	0.1°C or 0.1°F
<b>Response Time</b>	<250 ms
<b>Spectral Response</b>	8 – 14 μm
<b>Emissivity</b>	Adjustable 0.10 to 1.00
<b>Operating Temperature</b>	0 - 40°C (32 - 104°F)
<b>Weight</b>	270 g (9.5 oz) including battery
<b>Dimensions</b>	141 x 200 x 60 mm (5.6 x 7.9 x 2.4")
<b>Power</b>	9V Battery (included)
<b>Relative Humidity</b>	10% to 95% non-condensing

## 3) Operating Instructions

### 3.1 Battery Installation and Basic Operation

Locate the notches on the side of the unit's handle and pull the front of the handle forwards as shown below (1,2). Attach a 9V battery (provided) to the black connector inside, be sure to connect the positive and negative sides to the corresponding terminals (3). Swing the front of the handle back upwards to close the unit (4).



Pull the trigger and LCD display will turn on and display reading. Release the trigger to hold last measured temperature reading. The display will shut off after 30 seconds of inactivity.

#### 3.1.1 Changing units

- 1) Press the C/F key to toggle between Celsius and Fahrenheit

#### 3.1.2 Back lighting

- 1) Press back light key to toggle the back light on and off

#### 3.1.3 Adjusting Laser

- 1) Press laser key to toggle the laser dot on and off

#### 3.1.4 Adjusting the temperature assistant


- 1) Press MODE key to scroll through Minimum, Maximum, Average and Differential temperatures as well as Low Alarm and High Alarm values.

#### 3.1.5 Changing Emissivity and Alarm values

- 1) Press and hold MODE key for 3 seconds to change emissivity and alarm values
- 2) Press the MODE key once to change emissivity, twice to change the low alarm value and three key presses to change the high alarm value
- 3) Press the ▲ key to increase the value and ▼ key to decrease the value
- 4) Press the MODE key to store the new value
- 5) Press and hold the MODE key for 3 seconds to return

### 3.2 LCD Display

- a: temperature measuring reading
- b: measuring unit
- c: laser on icon
- d: back light on icon
- e: battery power icon
- f: scanning icon
- g: data hold icon
- h: mode indicator
- i: emissivity indicator
- j: low temperature alarm icon
- k: high temperature alarm icon
- l: temperature assistant

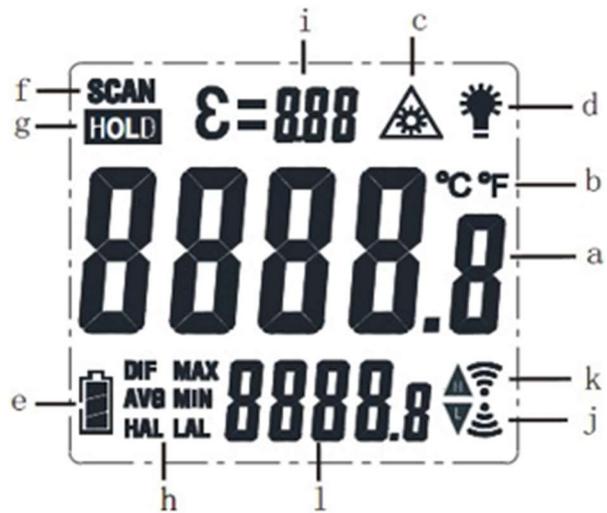

### 3.3 Locating a Hotspot

To find a hot spot aim the thermometer outside the area of interest, then scan across with up and down motions until you locate the hot spot. (turn on the laser for accurate measuring)

### 3.4 Keypad and components

- (1) Trigger
- (2) Back light key
- (3) Mode key
- (4) Laser light key
- (5) Function keys
- (6) Celsius / Fahrenheit key
- (7) Display
- (8) Laser
- (9) Model Identification
- (10) Battery Cover



## 4) Maintenance

- 1) Lens cleaning : blow off loose particles using clean compressed air. Gently brush remaining debris away with a moist cotton cloth.
- 2) Case cleaning: clean the case with a damp sponge/cloth and mild soap.

Note: Do not use solvent to clean lens and do not submerge the unit into water or any other liquid

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF**

**LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2019 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course! *Shop online at [omega.com](http://omega.com)*

## TEMPERATURE

- ✓ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ✓ Wire: Thermocouple, RTD & Thermistor
- ✓ Calibrators & Ice Point References
- ✓ Recorders, Controllers & Process Monitors
- ✓ Infrared Pyrometers

## PRESSURE, STRAIN AND FORCE

- ✓ Transducers & Strain Gages
- ✓ Load Cells & Pressure Gages
- ✓ Displacement Transducers
- ✓ Instrumentation & Accessories

## FLOW/LEVEL

- ✓ Rotameters, Gas Mass Flowmeters & Flow Computers
- ✓ Air Velocity Indicators
- ✓ Turbine/Paddlewheel Systems
- ✓ Totalizers & Batch Controllers

## pH/CONDUCTIVITY

- ✓ pH Electrodes, Testers & Accessories
- ✓ Benchtop/Laboratory Meters
- ✓ Controllers, Calibrators, Simulators & Pumps
- ✓ Industrial pH & Conductivity Equipment

## DATA ACQUISITION

- ✓ Communications-Based Acquisition Systems
- ✓ Data Logging Systems
- ✓ Wireless Sensors, Transmitters, & Receivers
- ✓ Signal Conditioners
- ✓ Data Acquisition Software

## HEATERS

- ✓ Heating Cable
- ✓ Cartridge & Strip Heaters
- ✓ Immersion & Band Heaters
- ✓ Flexible Heaters
- ✓ Laboratory Heaters

## ENVIRONMENTAL MONITORING AND CONTROL

- ✓ Metering & Control Instrumentation
- ✓ Refractometers
- ✓ Pumps & Tubing
- ✓ Air, Soil & Water Monitors
- ✓ Industrial Water & Wastewater Treatment
- ✓ pH, Conductivity & Dissolved Oxygen Instruments