



# User's Guide

*Shop online at*

**omega.com®**

Ω OMEGA®

*omega.com*

*e-mail: info@omega.com*

*For latest product manuals:*

*omegamanual.info*

ISO 9001  
CERTIFIED  
CORPORATE QUALITY  
STAMFORD, CT

ISO 9002  
CERTIFIED  
CORPORATE QUALITY  
MANCHESTER, UK



**DPG7000**  
**Digital Test Gauge**



**OMEGAnet® Online Service**  
[www.omega.com](http://www.omega.com)

**Internet e-mail**  
[info@omega.com](mailto:info@omega.com)

### **Servicing North America:**

**USA:** One Omega Drive, Box 4047  
ISO 9001 Certified Stamford CT 06907-0047  
Tel: (203) 359-1660 FAX: (203) 359-7700  
e-mail: [info@omega.com](mailto:info@omega.com)

**Canada:** 976 Bergar  
Laval (Quebec) H7L 5A1, Canada  
Tel: (514) 856-6928 FAX: (514) 856-6886  
e-mail: [info@omega.ca](mailto:info@omega.ca)

### **For immediate technical or application assistance:**

**USA and Canada:** Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®  
Customer Service: 1-800-622-2378 / 1-800-622-BEST®  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®  
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico:** En Español: (001) 203-359-7803 e-mail: [espanol@omega.com](mailto:espanol@omega.com)  
FAX: (001) 203-359-7807 [info@omega.com.mx](mailto:info@omega.com.mx)

### **Servicing Europe:**

**Benelux:** Postbus 8034, 1180 LA Amstelveen, The Netherlands  
Tel: +31 (0)20 3472121 FAX: +31 (0)20 6434643  
Toll Free in Benelux: 0800 0993344  
e-mail: [sales@omegaeng.nl](mailto:sales@omegaeng.nl)

**Czech Republic:** Frystatska 184, 733 01 Karvina, Czech Republic  
Tel: +420 (0)59 6311899 FAX: +420 (0)59 6311114  
Toll Free: 0800-1-66342 e-mail: [info@omegashop.cz](mailto:info@omegashop.cz)

**France:** 11, rue Jacques Cartier, 78280 Guyancourt, France  
Tel: +33 (0)1 61 37 2900 FAX: +33 (0)1 30 57 5427  
Toll Free in France: 0800 466 342  
e-mail: [sales@omega.fr](mailto:sales@omega.fr)

**Germany/Austria:** Daimlerstrasse 26, D-75392 Deckenpfronn, Germany  
Tel: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29  
Toll Free in Germany: 0800 639 7678  
e-mail: [info@omega.de](mailto:info@omega.de)

**United Kingdom:** One Omega Drive, River Bend Technology Centre  
ISO 9002 Certified Northbank, Irlam, Manchester  
M44 5BD United Kingdom  
Tel: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622  
Toll Free in United Kingdom: 0800-488-488  
e-mail: [sales@omega.co.uk](mailto:sales@omega.co.uk)

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.


**WARNING:** These products are not designed for use in, and should not be used for, human applications.

Congratulations on your purchase of the Omega® DPG 7000 digital test gauge with total error band full-scale accuracy and the largest display readout in the industry of .66" high. Other industry-leading features include twelve selectable engineering units, seven languages, and password-protected disable and calibration functions. With the range printed on the keypad, the Omega DPG 7000 digital gauge meets the ASME B40.7 digital gauge specification. See a complete listing of product features and specifications on pages 16 & 17.

## TABLE OF CONTENTS

	<i>Page</i>
<b>Quick Reference Guide</b>	4-5
<b>Keypad Functions</b>	6
• ON/OFF KEY	
• BACKLITE KEY	
• MIN/MAX KEY	
• ZERO/CLEAR KEY	
• ENTER KEY	
• CONFIG KEY	
<b>Configurable Functions (CONFIG Mode)</b>	7-14
• Units (Engineering)	7
• Update Rate	7
• Auto Off	8
• Backlite	8
• Languages	8
• Damping	9
• Contrast	9
• Calibrate (Gauge Calibration)	9-11
• Zero Span	12
• Zero Disable	12-13
• Disable	14
<b>Available Ranges</b>	15
<b>Specifications</b>	16-17
<b>Installation &amp; Battery Replacement</b>	18
• Mounting	
• Battery Replacement & Installation	

# QUICK RE

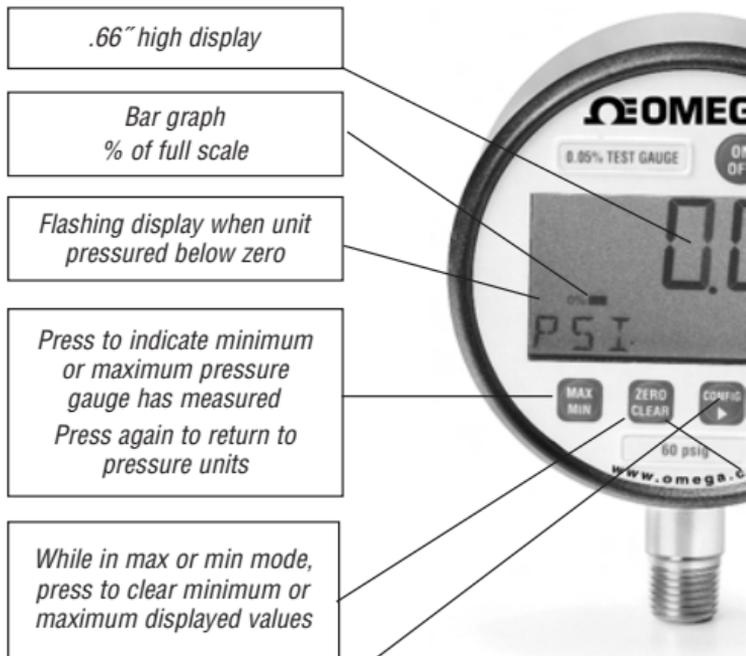

**UNITS (Pressure)**  
ENGLISH  
PSI  
INHG  
INH2O  
with Temperature  
(Options: 60°F,  
4°C, 20°C)  
FTSW

METRIC  
BAR  
MBAR  
KPA  
MPA  
mmHG  
CMH2O  
mmH2O  
KG/CM2

**BACKLITE**  
(Off options)  
**ON/OFF\***  
10 SEC  
30 SEC  
1 MIN  
5 MIN

**UPDATE RATE**  
(Pressure measurement  
per second)  
**10x\***  
5x  
2x  
1x

**DAMPING**  
(averages gauge reading)  
**None\***  
AVG 2  
AVG 4  
AVG 6  
AVG 8

**LANGUAGE(s)**  
**English\***  
French  
Spanish  
German  
Italian  
Portuguese  
Dutch

# REFERENCE



Press to turn unit on or off

Press to turn backlight on or off

Flashing display when unit pressured beyond full-scale

This bar graph indicates battery level; the more segments, the closer the battery is to full charge

Range on keypad; complies with ASME B40.7

While in unit of measurement mode (eg: psi), press the ZERO CLEAR button to rezero the gauge. This feature functions when displayed pressure is within  $\pm 5\%$  of zero value

**AUTO OFF**  
(Turns unit off after option selected)  
**Never\***  
2 minutes  
5 minutes  
15 minutes  
30 minutes

**CALIBRATE**  
Zero and span adjustments, password protected

**CONTRAST**  
(Customizes display readout)  
7 available  
**Selection 4 is Default\***

**DISABLE**  
Allows for "lockout" of CONFIG options

**\*Indicates Default**

## KEYPAD FUNCTIONS



Turns the gauge on and off. When pressing the ON/OFF key while in the off position, gauge start-up display first indicates the software version followed by the model number and gauge pressure range. The gauge will then display indicated pressure and be ready for use.



Manually turns backlight on and off. (See **CONFIG** mode for options).



Allows review of minimum and maximum pressure values since unit start-up or last push of the clear button. Press key to:

- 1) Indicate maximum pressure.
- 2) Indicate minimum pressure.
- 3) Exit MAX/MIN mode and return to unit of pressure measurement mode. To clear minimum and maximum values press ZERO/CLR button. Must be in MAX/MIN mode.

**Note:** MIN/MAX data is lost when unit is turned off.



Press this key prior to gauge usage to rezero any initial offset less than  $\pm 5\%$  of the rated gauge range. If indicated pressure is greater than 5% of range, the rezero feature becomes inoperable. This prevents accidental tare of a pressurized gauge.

To clear minimum and maximum values, press ZERO/CLR button (when min/max values are indicated).



Used in conjunction with CONFIG key, see next page.



This key allows for customization of the gauge. Pressing the CONFIG key allows cycling through the main menu items; UNITS, UPDATE, AUTO OFF, BACKLITE, LANGUAGE, DAMPING, CONTRAST & CALIBRAT.

## KEYPAD FUNCTIONS

**UNITS:** 12 units of measurement are available, both English and metric, by cycling through the UNITS key; psi, "Hg, "H<sub>2</sub>O (with three temperature options, 60°F, 4°C and 20°C), ftSw, Bar, mBar, kPa, mPa, mmHg, cmH<sub>2</sub>O, mmH<sub>2</sub>O, kg/cm<sup>2</sup>.

**Step 1:** Press the CONFIG key until the word UNITS appears.

**Step 2:** Press the ENTER key.

**Step 3:** Press the CONFIG key once to select ENGLISH or again to select METRIC.

**Step 4:** Press the ENTER key with selection of ENGLISH or METRIC.

**Step 5:** Press CONFIG key to select unit of measurement.

**Step 6:** Press ENTER key to finalize unit of measurement.

**UPDATE:** this option allows for changing the rate at which pressure is updated on the display screen. The default rate measures pressure at the maximum rate of **10\*** updates per second or 100 milli-seconds. Optional rates of measurement are measured in updates per second. The options are **10\***, 5, 2 or 1 update of pressure measurement per second.

*Since customer processes vary, update rates should be selected based on the application.*

**To use the UPDATE option:**

**Step 1:** Press the CONFIG key until the word UPDATE appears.

**Step 2:** Press the ENTER key.

**Step 3:** Press the CONFIG key to select the desired update rate.

**Step 4:** Press ENTER key to finalize **UPDATE** rate.

**AUTO OFF:** this option sets the amount of time before the gauge will turn itself off after no activity. Offerings are **Never\***, 2, 5, 15, or 30 minutes.

## KEYPAD FUNCTIONS

### To use the **AUTO OFF** option:

**Step 1:** Press the CONFIG key until the word AUTO OFF appears.

**Step 2:** Press the ENTER key.

**Step 3:** Press the CONFIG key to select the desired AUTO OFF rate.

**Step 4** Press the ENTER key to finalize the AUTO OFF rate.

**BACKLITE:** 5 options are available. They include **ON/OFF\***, 10 seconds, 30 seconds 1 or 5 minutes. With the ON option pressed, the gauge backlite will remain lit whenever the gauge is in the ON mode or until the backlite button is pushed again. Options allow the backlite to automatically turn-off after a selected period of time. **Note:** leaving backlite button on will decrease battery life.

### To use the **BACKLITE** option:

**Step 1:** Press the CONFIG key until the word BACKLITE appears.

**Step 2:** Press the ENTER key.

**Step 3:** Press the CONFIG key to select one of the available time options.

**Step 4:** Press the ENTER key to finalize your choice of BACKLITE options.

**LANGUAGE:** available in seven different languages, this option allows the user to change the default language in the CONFIG mode. The languages include **English\***, French, Spanish, German, Italian, Portuguese and Dutch.

**Step 1:** Press the CONFIG key until the word LANGUAGE appears.

**Step 2:** Press the Enter key.

**Step 3:** Press the CONFIG key to select one of the available LANGUAGE options.

**Step 4:** Press the ENTER key to finalize your LANGUAGE option.

## KEYPAD FUNCTIONS

**DAMPING:** with six different options, this mode allows for taking process pressure readings and averaging them. This option is particularly useful when there is pulsation in the process. The options are **NONE\***, AVG 2, 4, 6 or 8.

**Step 1:** Press the CONFIG key until the word DAMPING appears.

**Step 2:** Press the ENTER key.

**Step 3:** Press the CONFIG key to select one of the available DAMPING options.

**Step 4:** Press the ENTER key to finalize your DAMPING option.

**CONTRAST:** this mode allows for BACKLITE contrast level. Seven options are available, 1, 2, 3, **4\***, 5, 6 and 7.

**Step 1:** Press the CONFIG key until the word CONTRAST appears.

**Step 2:** Press the ENTER key.

**Step 3:** Press the CONFIG key to select one of the available CONTRAST options.

**Step 4:** Press the ENTER key to finalize your CONTRAST selection.

**Note:** setting high contrast levels will decrease battery life.

### **CALIBRAT.:**

**Gauge Calibration:** Both zero and span adjustments are available. This gauge has been configured with a default password of 000000. This factory password does not allow access to calibration. To access the calibration mode, it is necessary to configure a *user password*. Once the user password is configured, it will become the default password that allows access to gauge calibration.

## KEYPAD FUNCTIONS

### To access the factory default password:

**Step 1:** Press the CONFIG key until the word CALIBRAT appears.

**Step 2:** Press the ENTER key.

**Step 3:** The letters/asterisks... PW\*\*\*\*\* appear.

**Step 4:** Press the CONFIG key. An Ø appears in the first position.

**Step 5:** Press the ENTER key once.

**Step 6:** Press the CONFIG key until Ø appears. Ø will appear in the second position.

**Step 7:** Press ENTER.

**Step 8:** Use this format until all the asterisks are replaced with Ø.

*There now should be a total of five Ø's on the keyboard display. The zero in the fifth position should be blinking.*

**Step 9:** Press the ENTER key. You are now prompted to SET PW (or set password).

**Step 10:** Press the ENTER key.

**Step 11:** Decide on a five number user password, then follow the procedure above inserting a number in the flashing display until all five numbers are inserted.

**Step 12:** A SAVE prompt will then appear. If the selected user password is acceptable, press ENTER. If the selected user password is not acceptable press ZERO CLEAR to refigure the user password.

After the password is configured, the default factory password will be replaced with the user password. Once configured, the factory password is no longer accessible.

If an incorrect password is entered, the system will display WRONG. Press the CONFIG key to reenter the correct password.

**Step 13:** Press ENTER again to begin calibration.

## KEYPAD FUNCTIONS

**Note:** Calibration feature allows recalibration of zero and span.

### **Zero Calibration:**

**Step 14:** Press the CONFIG key once and the word CALIBRA appears. Press ENTER. (This mode allows for 0 and full-scale adjustment of span.) The gauge will now display 0.00. Ensure the gauge is not pressurized; then press ENTER to zero the gauge. Zero calibration is now complete.

### **Full Scale Calibration**

**Step 15:** The gauge will now display full-scale range (e.g. 100.00 psi). Pressurize the gauge to 100% of the range (which is equal to the displayed value) utilizing a pressure standard with accuracy four times greater than the unit being calibrated. Press ENTER. Full-scale calibration is now complete.

### **Notes:**

1. If the digital gauge under test is not pressurized while in span adjustment of full-scale range, an ERROR message will be displayed when the ENTER button is pressed. If this occurs, press the ZERO CLEAR button on the keypad to return to the previous screen.
2. ASME B40.7-1998, section 6.1.1.1 recommends the working standard for the gauge being tested is 4X better than the digital gauge under test. This means the pressure standard measuring the full-scale pressure being applied to the gauge should have an accuracy four times greater than the unit being spanned.

## KEYPAD FUNCTIONS

### **Zero SP (span):**

This feature allows setting *the % of span in which the zero button will operate. Span is limited to prevent accidental tare of process pressures.* Options are 5%, 10% or DISAB (5% is the factory default and means the unit can be rezeroed between  $\pm 5\%$  of span). If DISAB is selected, the zero button is deactivated and no display change will occur when the zero button is pushed.

**Step 1:** Press the CONFIG key until the word ZERO SP appears.

**Step 2:** Press ENTER.

**Step 3:** Enter user five digit password (PW). This is the same password established to access the CONFIG mode in the menu.

**Step 4:** Press the CONFIG key to select the desired option.

**Step 5:** Press ENTER to finalize the selection.

### **Notes:**

Selecting the DISAB feature does not disable the CLEAR button on the keypad for the MAX/MIN feature. If the DISAB feature is selected, pressing the ZERO button on the keypad will cause the display to read DISAB for two seconds. The gauge will then revert back to the unit of measure of the gauge. The DISAB feature disables the zero feature of the gauge.

### **Zero Disable Feature:**

This feature allows disabling the Zero/Clear button on the keypad. It also allows for a zero tolerance of either 5% (default) or 10% of the gauge range.

**Step 1:** *Press the CONFIG key until the word ZERO SP appears.*

**Step 2:** *Press ENTER.*

## KEYPAD FUNCTIONS

- Step 3:** *A prompt appears to enter PW (enter password). The ZERO SP password is the same password as discussed on page 10 and the heading CALIBRAT:, Gauge Calibration. Follow the instructions on page 10 to enter a password.*
- Step 4:** *Press the CONFIG key to select the zero tolerance, either 5% or 10% of range, or press the CONFIG key again and the word DISAB appears. Press ENTER to select the new default setting.*

## KEYPAD FUNCTIONS

If the user password is lost or stolen, contact Ashcroft Inc., customer service at 203-378-8281 for a new factory password that will allow the user to establish a new user password.

**DISABLE:** allows “lockout” of *individual* CONFIG options. The default is ENABLE for all options in the CONFIG mode.

**Step 1:** Press the CONFIG key until the word DISABLE appears.

**Step 2:** Press the ENTER key.

**Step 3:** Insert the *user* password following the procedure as described in steps 3 through 13 above.

**Note:** This is the same user password as in the CALIBRAT mode.

**Step 4:** Press the ENTER key.

**Step 5:** The first option in the CONFIG menu will now be displayed (UNITS).

**Step 6:** To DISABLE the UNITS option press the ENTER key until the word DISABLE appears.

**Step 7:** Press the CONFIG key. The UNITS option is now DISABLED.

**Step 8:** Proceed through the balance of the CONFIG menu options by pressing the CONFIG key. Follow steps 6-8.

## DIGITAL TEST GAUGE RANGES:

psi	Compound (psi)	kPa	Bar/KSC	Compound (bar)
vac.	15# & vac.	25	1	-1 to 3
5	30# & vac.	40	1.6	-1 to 30
10	30# & vac.	40	1.6	-1 to 30
15		60	2.5	
30		100	4	
60		160	6	
100		250	10	
160		400	16	
200		600	25	
300		1000	40	
500			60	
600				
800			160	
1000			250	
1500			400	
2000			500	
2500				
3000				
5000				
7000				

mmH <sub>2</sub> O	MPa	mBar/cmH <sub>2</sub> O	Absolute (psia)
3000	1	250	15
5000	1.6	300	25
10,000	2.5	400	50
	6	500	
	100	600	
	160	1000	
	250	1600	
	400	2000	
	500	2500	
		4000	
		5000	
		6000	
		10,000	

## SPECIFICATIONS

<b>Type</b>	DPG 7000 (0.05% accuracy) DPG 7010 (0.10% accuracy) DPG 7025 (0.25% accuracy)
<b>Accuracy</b>	0.05%, 0.10%, 0.25% all Full Scale Terminal Point Total Error Band (TEB) Accuracy Including Hysteresis, Linearity, Repeatability & Temperature (-18/65°C) (0/150°F)
<b>Dial Size</b>	3"
<b>Case Material</b>	300 Series SS
<b>Case Finish</b>	Electropolished
<b>Case Enclosure Rating</b>	Weatherproof, IP65
<b>Socket Material</b>	316 SS
<b>Socket Size</b>	¼ NPT Male (others on application)
<b>Connection Location</b>	Lower, 3:00, 9:00
<b>Ranges</b>	Vac thru 7000 psi (see engineering units below for other units of measurement)
<b>Operating Temperature</b>	0/150°F
<b>Storage Temperature</b>	-40/180°F
<b>DISPLAY:</b>	
<b>Type</b>	LCD
<b>Display Digits</b>	4½
<b>Character Height</b>	.66"
<b>Backlit</b>	Off By Default
<b>Bar Graph</b>	Yes
<b>Battery Life</b>	1000 Hrs.
<b>Agency Approvals</b>	CE, FM (FM approval not available on vacuum range & vacuum/15 psi range only)
<b>KEYPAD FUNCTIONS:</b>	
<b>On/Off</b>	Manually Turns Unit On & Off (auto off options in config menu)
<b>Backlit</b>	Manually Turns Backlit On & Off (auto off options in config menu)
<b>Min/Max</b>	Stores Min & Max Values
<b>Zero/Clear</b>	Zeros Display or Clears Min/Max Values When Displayed

## SPECIFICATIONS

<b>Enter</b>	Selects Items In CONFIG Menu
<b>Config Mode</b>	Allows Scrolling Through CONFIG Menus
<b>Engineering Units</b>	Psi, °Hg, °H <sub>2</sub> O (with three temperature options, 60°F, 4°C and 20°C), ft.SW, bar, mbar, kPa, mPa, mmHg, cmH <sub>2</sub> O, mmH <sub>2</sub> O, kg/cm <sup>2</sup>
<b>Update Rate</b>	4 Options: 10x/sec, 5x/sec, 2x/sec, 1x/sec
<b>Auto Off</b>	6 Options: Never, 2 Min., 5 Min., 15 Min., 30 Min.,
<b>Dampening</b>	6 Options: None, Average 2, 4, 6, 8 x update rate
<b>Languages</b>	7 Languages: English, Spanish, French, Italian, German, Portuguese, Dutch
<b>Backlite</b>	5 Options: On/Off, 10 Sec., 30 Sec., 5 Min., 15 Min.
<b>Field Recalibration</b>	Zero & Span (password protected)
<b>Contrast</b>	7 Available Options
<b>Disable Config Options</b>	Allows disabling of Config Options (password protected)
<b>Calibration Chart</b>	10 Point Individual NIST Traceable Calibration Chart, Standard
<b>Standard Accessories</b>	300 Series SS Protective Cover Nylon Protective Carrying Pouch

## WARNING AND ERROR MESSAGES

Display	Description
Flashing 0% or 100%	Gauge over/underpressured beyond 105% of range
LOW BAT	Low battery, replace
ERROR	Internal error, call customer service (203) 359-1660
RES ERROR	Pressure unit conversion exceeds display resolution or gauge pressured beyond resolution


## GAUGE INSTALLATION

**Pipe Mount** – The Omega digital test gauge comes standard with a ¼ NPT connection. Good piping practices recommend using teflon tape or a pipe sealant on the gauge threads. Utilize a 7/16" wrench on the wrench flat of the gauge to tighten the gauge to the process.

NEVER TIGHTEN GAUGE THREADS BY HOLDING THE BODY OF THE GAUGE. DOING SO MAY DAMAGE THE GAUGE AND MAKE THE GAUGE INOPERABLE.

**Panel Mount** – The lower connected Omega digital test gauge is available with an optional flange for panel mounting. Please refer to illustration and dimensions below.

### Battery Installation and Replacement:

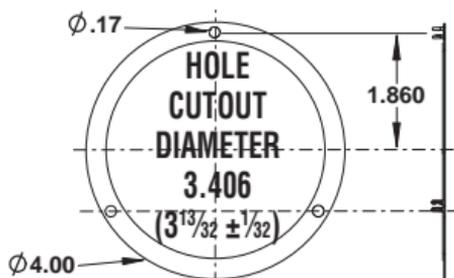

The gauge comes standard with a quantity of three AAA alkaline batteries (installed). Use either Duracell MN2400, MX2400 or Energizer E92BP, X92RP AAA alkaline, non-rechargeable batteries.

Batteries have a life of approximately 1000 hours. Battery life is dependent on gauge usage, backlite settings and power off settings. When the display flashes LOW BAT, batteries should be replaced.

### To replace the batteries:

- 1) Remove the single screw on the back of the gauge case.
- 2) Hold the keypad in the palm of hand.
- 3) Carefully remove the three batteries from the holder and replace the batteries. Use only AAA alkaline non-rechargeable batteries.



Pipe to which gauge is attached must be properly grounded.

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2004 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

## TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

## PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

## FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

## pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

## DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

## HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

## ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments