

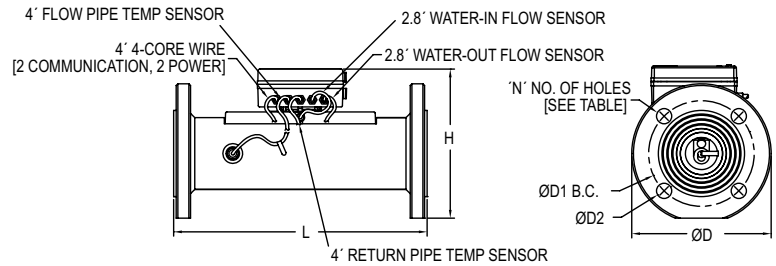


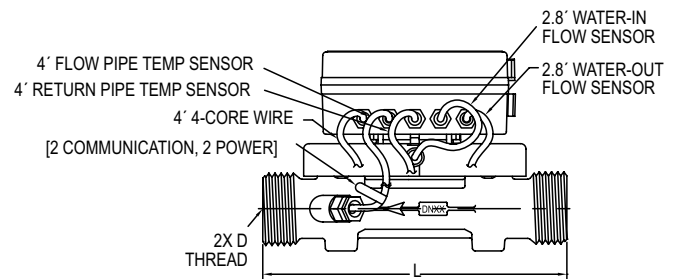

Series TUF Ultrasonic Energy Meter with BACnet Communication

Specifications - Installation and Operating Instructions

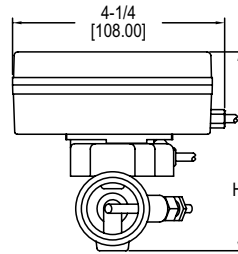

Model	Dimensions in [mm]			Flow Rate GPM [LPM]			Weight lb [kg]
	L	D	H	Max Flow (Qs)	Nominal Flow Range (Qp)	Min Flow (Qi)	
TUF-150-XX	4-21/64 [110.00]	G3/4B	3-31/32 [101.00]	13 [50]	6.6 [25]	0.1 [0.5]	3.1 [1.4]
TUF-200-XX	5-1/8 [130.00]	G1B	3-31/32 [101.00]	22 [83]	11 [42]	0.2 [0.8]	3.1 [1.4]
TUF-250-XX	6-19/64 [160.00]	G11/4B	4-11/64 [106.00]	31 [117]	15 [58]	0.3 [1.2]	4.1 [1.8]
TUF-320-XX	7-3/32 [180.00]	G11/2B	4-29/64 [113.00]	53 [200]	26 [100]	0.5 [2]	5.2 [2.3]
TUF-400-XX	7-7/8 [200.00]	G2B	4-49/64 [121.00]	88 [333]	44 [167]	0.9 [3.3]	6.6 [3.0]

Model	Dimensions in [mm]					Flow Rate GPM [LPM]			Weight lb [kg]	
	L	ØD	H	ØD1	ØD2	N	Max Flow (Qs)	Nominal Flow Range (Qp)		Min Flow (Qi)
TUF-500-XX	11-13/16 [300.00]	6-1/2 [165.00]	6-57/64 [175.00]	4-59/64 [125.00]	45/64 [18.00]	4	132 [500]	66 [250]	0.7 [2.5]	30.8 [14]
TUF-650-XX	11-13/16 [300.00]	7-9/32 [185.00]	7-23/32 [196.00]	5-45/64 [145.00]	45/64 [18.00]	4	220 [833]	110 [417]	1.1 [4.2]	30.2 [13.7]
TUF-800-XX	13-25/32 [350.00]	7-7/8 [200.00]	8-1/2 [216.00]	6-19/64 [160.00]	45/64 [18.00]	8	352 [1333]	176 [667]	1.8 [6.7]	37.5 [17]
TUF-1000-XX	13-25/32 [350.00]	8-21/32 [220.00]	9-11/64 [233.00]	7-3/32 [180.00]	45/64 [18.00]	8	528 [2000]	264 [1000]	2.6 [10]	41.8 [19]
TUF-1250-XX	13-25/32 [350.00]	9-27/32 [250.00]	10-25/64 [264.00]	8-17/64 [210.00]	45/64 [18.00]	8	881 [3333]	440 [1667]	4.4 [17]	57.3 [26]
TUF-1500-XX	11-13/16 [300.00]	11-7/32 [285.00]	11-29/64 [291.00]	9-29/64 [240.00]	55/64 [22.00]	8	1321 [5000]	660 [2500]	6.6 [25]	70.5 [32]
TUF-2000-XX	11-13/16 [350.00]	13-25/64 [340.00]	13-21/32 [347.00]	11-39/64 [295.00]	55/64 [22.00]	12	2202 [8333]	1101 [4167]	11 [42]	141 [64]

MODEL CHART

Model	Process Connection	Corresponding Pipe Fitting	Power	Model	Process Connection	Corresponding Pipe Fitting	Power
TUF-150-XX	G-3/4	1/2" NPT or BSPT	24 VAC/VDC	TUF-150-XX-DC	G-3/4	1/2" NPT or BSPT	24 VDC
TUF-200-XX	G1	3/4" NPT or BSPT	24 VAC/VDC	TUF-200-XX-DC	G1	3/4" NPT or BSPT	24 VDC
TUF-250-XX	G1-1/4	1" NPT or BSPT	24 VAC/VDC	TUF-250-XX-DC	G1-1/4	1" NPT or BSPT	24 VDC
TUF-320-XX	G1-1/2	1-1/4" NPT or BSPT	24 VAC/VDC	TUF-320-XX-DC	G1-1/2	1-1/4" NPT or BSPT	24 VDC
TUF-400-XX	G2	1-1/2" NPT or BSPT	24 VAC/VDC	TUF-400-XX-DC	G2	1-1/2" NPT or BSPT	24 VDC
TUF-500-XX	GB9119 flange	2" DN 50 PN 16 flange	24 VAC/VDC	TUF-500-XX-DC	GB9119 flange	2" DN 50 PN 16 flange	24 VDC
TUF-650-XX	GB9119 flange	2-1/2" DN 65 flange	24 VAC/VDC	TUF-650-XX-DC	GB9119 flange	2-1/2" DN 65 flange	24 VDC
TUF-800-XX	GB9119 flange	3" DN 80 flange	24 VAC/VDC	TUF-800-XX-DC	GB9119 flange	3" DN 80 flange	24 VDC
TUF-1000-XX	GB9119 flange	4" DN 100 flange	24 VAC/VDC	TUF-1000-XX-DC	GB9119 flange	4" DN 100 flange	24 VDC
TUF-1250-XX	GB9119 flange	5" DN 125 flange	24 VAC/VDC	TUF-1250-XX-DC	GB9119 flange	5" DN 125 flange	24 VDC

The Series TUF Ultrasonic Energy Meter is a highly accurate and stable energy meter that utilizes ultrasonic technology to measure heating and cooling energy consumption. The Series TUF is a compact meter with a flowmeter and energy calculator in one, making it great for installation on chillers and boilers.

BENEFITS/FEATURES

- Lower maintenance costs with local parameter display and no moving parts
- Serial communication output allows for easy transfer of data
- Flow and temperature monitor in one unit eliminates the need for multiple units

APPLICATIONS

- Heat metering
- Utilities billing
- Tenant billing
- Monitoring of water heating or cooling: radiators, fan coils

INSTRUCTIONS FOR ORDERING

- Choose 1 ultrasonic energy meter model
- Choose 2 pipe fitting models given the appropriate fitting size (for DN15 to DN40 only)

Example: TUF-150-MD, Fitting Size: A, select pipe fitting Model WM-ACC-C01 or WM-ACC-C11.

Note: Series TUF units are factory set for supply line installation. (Can be modified in the field via communication protocol.)

SPECIFICATIONS

<p>Service: Clean, compatible liquids.</p> <p>Wetted Materials: Brass and 316L SS.</p> <p>Range: See chart.</p> <p>Display: 8-digit LED.</p> <p>Accuracy: BTU: EN1434/CJ128 Class 2; Flow: $\pm(2+(0.02 Q_p / Q))\%$; Temperature: $\pm 0.1^\circ\text{C}$.</p> <p>Power Requirements: 24 VAC/VDC (model dependent)* or 3.6 V ER26500 lithium metal battery, user supplied and installed, battery acts as back-up if power is lost.</p> <p>Power Consumption: 1 W.</p> <p>Temperature Limits: Ambient: 41 to 131°F (5 to 55°C); Process: 36 to 203°F (2 to 95°C).</p> <p>Humidity Limit: < 93%.</p>	<p>Pressure Limits: 232 psi (16 bar) for DN15 to DN40; 362 psi (25 bar) for >DN50.</p> <p>Pressure Drop: < 1.5 psi (10 kPa).</p> <p>Process Connection: See chart.</p> <p>Serial Communications: Modbus® RTU or BACnet MSTP (model selectable)**.</p> <p>Enclosure Rating: IP65.</p> <p>Enclosure Material: Plastic.</p> <p>Repeatability: Flowmeter: 1%.</p> <p>Electrical Connections: 3 ft (0.91 m) 4x0.2 mm2 cable with terminal block.</p> <p>Flow Direction: Unidirectional.</p> <p>Mounting Orientation: Horizontal or vertical.</p> <p>Weight: See chart.</p> <p>Compliance: CE.</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

*Power supply must be floating, not grounded. Model numbers ending in "-DC" are for DC only applications.

**M-BUS available upon request.

ELECTRICAL WIRING

NOTICE Wiring should comply with *Electrical Characteristics of Generators and Receivers for Use in Balanced Digital Multipoint Systems, TIA/EIA-485-A-1998*, Telecommunications Industry Association, 1998.

NOTICE Wiring should comply with *ANSI/ASHRAE Standard 135-2010 BACnet A Data Communication Protocol for Building Automation and Control Networks*, American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc., 2010.

NOTICE Communications wiring must be in a daisy-chain fashion. Star connections are not permitted.

Figure 1 shows how to connect the TUF in a network containing a common power supply. Use a cable containing two twisted pairs. One pair is to be used for RS 485/BACnet [+] and [-]. The other pair is used for power and common. This configuration is suitable for AC and DC supplies. Care should be taken that there are not too many devices powered from the same supply as voltage drops will occur in the wiring. If you have many devices, or have long cable runs, the local supply configuration may be a better choice.

Figure 2 also shows how to connect the TUF in a network containing individual local supplies. Use a cable containing a twisted pair and a single conductor. The pair is to be used for [+] and [-]. The single conductor is to be used for common.

All devices in the network should be daisy chained. Star connections and T connections are not permitted.

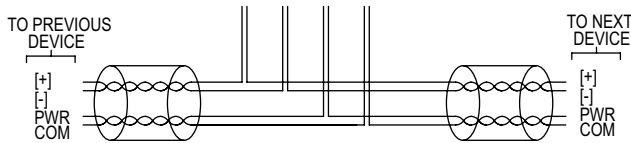


Figure 1: Common local power supply

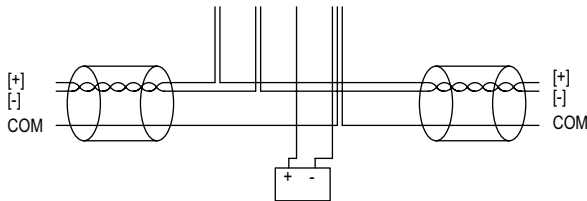


Figure 2: Local power supply

The TUF meter is provided standard with a 3 ft (0.91 m) cable with 4 x 0.2 mm² wires that are Red, Black, Green and Yellow. As displayed in Figure 3, the Red wire is Power [+], Black wire is Common [-], and the Green and Yellow wires are for RS 485 BACnet Communication where Green is [-] and Yellow is [+].

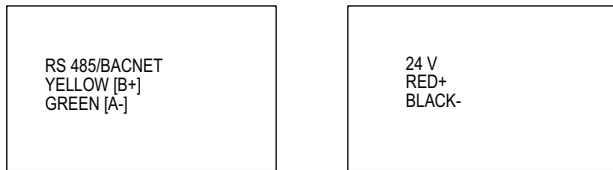


Figure 3: Cable labels

PROGRAMMING MENUS

Programming Via BACnet MS/TP Communication Protocol

Supported BACnet Communication Protocol MS/TP Configuration

Supported Baud Rates	Data Size	Parity	Stop Bits
38400	8	None	1

BACnet Communication Protocol Object Overview
The device Supports the following objects

Object Type	Dynamically Creatable	Dynamically Deletable	Object Identifier	Object Name
Device	No	No	32001	TUF
Analog Input	No	No	A10	Flow Temperature
Analog Input	No	No	A11	Return Temperature
Analog Input	No	No	A12	Volume Flow
Analog Input	No	No	A13	Power
Analog Input	No	No	A14	Total Volume
Analog Input	No	No	A15	Total Heat Energy
Analog Input	No	No	A16	Total Cool Energy
Analog Input	No	No	A17	FL Status
Analog Input	No	No	A18	PTIN Status
Analog Input	No	No	A19	PTOUT Status
Analog Input	No	No	A110	SSU Version
Analog Input	No	No	A111	SSU Type
Analog Input	No	No	AV0	Backup Date
Analog Value	No	No	AV1	Local Date
Analog Value	No	No	AV2	Local Time
Analog Value	No	No	AV3	SSU Address
Analog Value	No	No	AV4	Volume Flow Threshold
Analog Value	No	No	AV21	Temperature Compensation Mode
Analog Value	No	No	AV24	Baudrate
Analog Value	No	No	AV25	Parity

Device Information

The default device object identifier is 32001. The object identifier will change as the MS/TP MAC address changes.

NOTICE Changes to Max Master and Max Info frames require a power cycle/reset to take effect.

Accessing the Measurements

The analog input object A11 through A14 are for viewing the flow measurements in the desired engineering units. The object property tables for these analog input objects can be found in Appendix II.

Analog value object AV1 through AV3 are for viewing the TUF system parameters. The object property tables for the analog value objects can be found in Appendix III and IV.

Accessing the Measurements

The analog input object A10 through A12 and A15 through A16 are for viewing unit measurements in specific engineering units. The object property tables for these analog input objects with appropriate engineering units can be found in Appendix II.

Analog value object AV0 through AV21 are for viewing additional information such as meter mode, local date and time. The object property table for the analog value objects with appropriate units and formats can be found in Appendix III and IV.

ADDITIONAL NOTES:

1. The communication write status features a power off save, where the last communicated information will be saved upon powering off the unit.
2. Information is accessed at a rate of 1 per minute.
3. Communication time is linked to the meter clock, and will automatically reset on power on. If the time needs to be corrected and is updated via the communications the meter clock will automatically update.
4. With respect to the accumulative heating capacity, accumulative cooling capacity and accumulative flow in the variable table, when this information is transferred via communication only whole numbers will be uploaded. The decimal portion of the reading will only be displayed on the TUF meter LCD screen.

INSTALLATION INSTRUCTIONS

1. Install the meter as shown in either Figure 1 or Figure 2.
 2. Mount the temperature sensor with the blue tag on the corresponding return pipe on application. The sensor with the red tag has already been installed in the meter.
 3. Flush the system in the proper direction until:
 - No impurities remain in the filter and pipe.
 - No water leaks when pressure is added to the system.
 - The humidity inside the enclosure containing the meter does not exceed 93%.
 4. After flushing for a period of time; close the ball valves on either side of the meter and flush the impurities out of all filters.
- *3.6 V ER26500 battery may be purchased separately to power display only.

INSTALLATION REQUIREMENTS

- NOTICE** If the following requirements are not followed, then large air particles and impurities in the pipe could influence the meter's measuring accuracy.
1. Ensure that there is a 10 diameter straight run of pipe upstream and a 5 diameter straight run of pipe downstream from the meter.
 2. See the installation positions in Figure 3, in which A and B are the proper installation positions, while C and D are the improper positions.
 3. If the meter is installed on the horizontal pipe, it must be oriented at least 45° from horizontal (see Figure 4). If the meter's face is horizontal, then debris accumulation can increase inaccuracies (see figure 5 for correct and incorrect orientations). There is no special requirement when installing on the vertical pipe work.
- Note:** the meter can be installed on the return pipe or the supply pipe according to user's needs, but it should be selected in advance.

INSTALLATION NOTES

- NOTICE** If not specified at time of order, refer to appendix III to change from supply to return programming. Change from supply to return, and vice-versa, is only possible using digital communication protocols.
- NOTICE** Do not directly weld the meter on to the pipe; the extreme heat will damage the BTU meter's internal elements.
- CAUTION** Do not install the meter near a high temperature heat source such as during electro gas welding. Doing so after installing an optional battery could cause the battery to explode and cause injury to people and damage the meter.
1. Avoid tugging on the temperature probe's cables.
 2. Ensure the water is flowing in the direction indicated by the arrow on the meter's body.
 3. If several meters are installed on the same vertical pipe work, each meter should be separated from the others to avoid pipe leakage or fallen debris that could affect the other meters' operation.

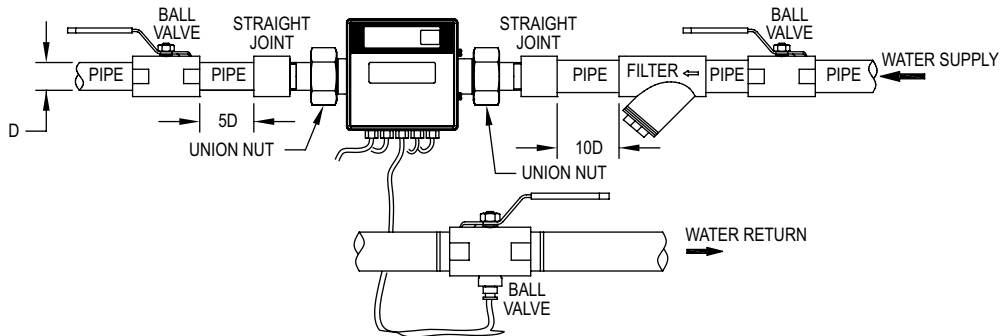


Figure 1: Installation diagram for TUF-150 to TUF-400

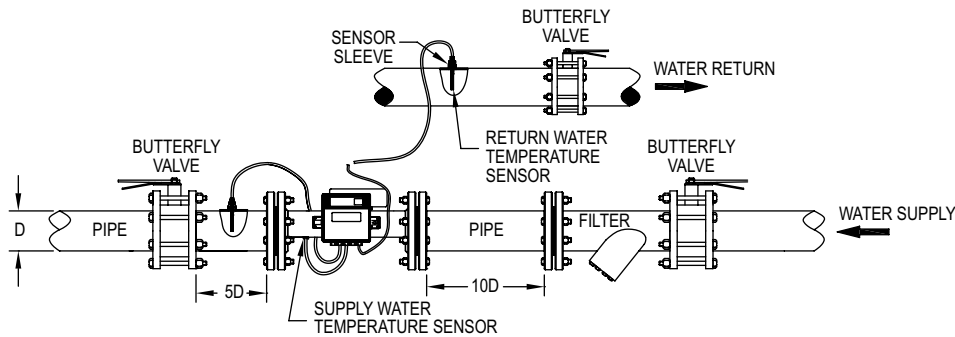


Figure 2: Installation diagram for TUF-500 to TUF-2000

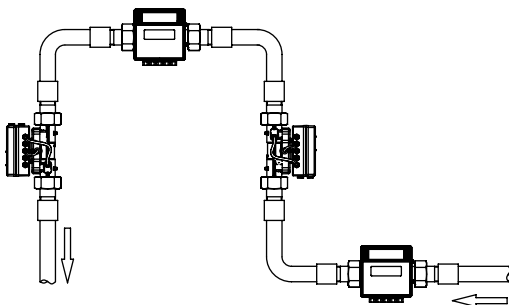


Figure 3: Installation positions


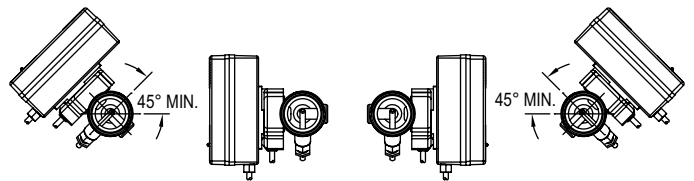



Figure 4: Mounting rotation

FEATURES

- Works with both heating and cooling systems
- High accuracy
The high quality ultrasonic transducer and advanced electronic measurement technology work together to ensure the meter's high accuracy and stability
- No moving parts
This decreases the maintenance cost and ensures that the meter is resistant to dirty water
- PT1000 platinum thermistors
- Low starting flow-rate
The U-shaped acoustic path widens the dynamic flow-rate measurement range and increases the accuracy of low and high end measurements where other, more narrow ranged, devices are inaccurate
- Horizontal or vertical installation
- Communication output ports can be used for automated meter reading
- Automatic diagnostic function. An error code will be displayed on the screen to indicate the problem
- Ability to install an optional 3.6 V battery that can last up to 6 years

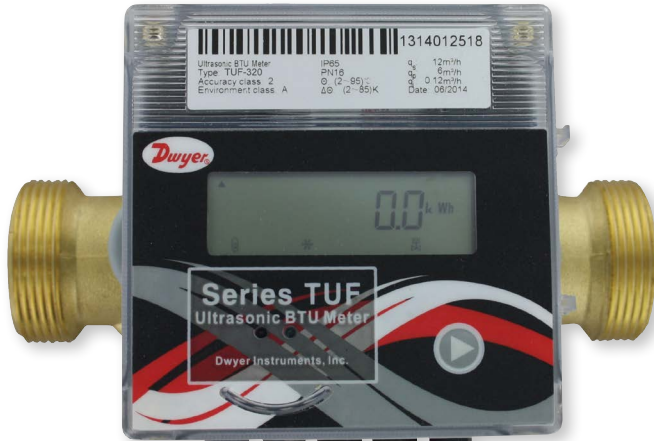

- Flow Sensor Out
- Flow Sensor In
- Temp Sensor Out
- Temp Sensor In
- Yellow A+ (BACnet or Modbus)
- Green B- (BACnet or Modbus)
- Black- (DC24V)
- Red+ (DC24V)

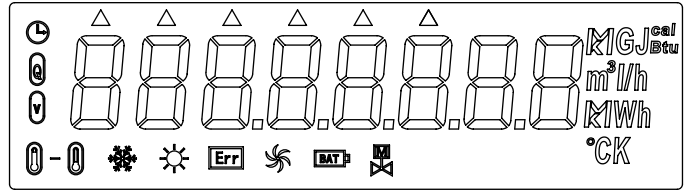

DISPLAY


1. **Switching Between Information**
Holding down the button for > 1s will switch the sections from current information ▲, to monthly information ▲▲, and then to other information ▲▲▲. Once in the desired section, pressing the key will switch the information shown for the given section.
2. **Display Units**
Energy is displayed in kW•h, power is displayed in kW, flow volume is displayed as m³, and flow-rate is displayed in m³/h.
3. **Display Details**
 - a. "Monthly Reading Date" is displayed as "Pd= XX", in which XX is the end date of the current month's energy summation. The factory default value is 31, meaning that the monthly recording period ends at midnight on the 31st day of the month. At this time the current month's cumulated energy will be stored and the system will begin to record the next month's energy.
 - b. The meter can store and display the recordings from the past 18 months.
 - c. The units for "Sum of Working Time" (hours) is displayed as h.
 - d. "Software and Protocol Editions" are displayed as "UEr.X.X X.X". The first X.X is the software edition code and the second X.X is the communication protocol edition code.
 - e. "Leaving-factory serial number" is the meter's identification number, which is the same as the one in the external label. This serial number is a unique number set by the factory; it is also the secondary address in M-BUS system.
 - f. Battery Voltage displays "UCC=X.XX" (the default unit is Volts). When the battery's voltage capacity is lower than 2.9±0.1 V, "BAT" will appear on the display. This symbol will not appear if no battery is installed.
 - g. If there are any unresolved errors, the start date will display as normal but the end date will display "00-00-00", and then the error message will be displayed.

Error Message Table	
Error Messages	Explanation
IN—CLOSE	Temperature sensor of water supply is in closed state
IN—OPEN	Temperature sensor of water supply is in open state
OU—CLOSE	Temperature sensor of return water is in closed state
OU—OPEN	Temperature sensor of return water is in open state
FL—OPEN	Flow sensor failure. (Could be caused by air in the meter, the absence of water, or water flowing in the wrong direction)
COD=XXXX	There is an error in malfunction record. "XXXX" is the error code

NOTES

1. If meter is not in use during freezing conditions, drain all water from the connecting pipe. Low temperatures will cause the water to freeze in the pipe and damage the meter.
2. This device is intended to be used with clean water. While dirty water will not damage the meter, it will cause errors in the reading.
3. A filter should be mounted near the meter and cleaned regularly.
4. If the heat exchanging system is operating normally, but the instantaneous flow-rate of the heat meter reduces significantly, then there is too much dirt in the filter. This will narrow the pipe and reduce the flow. Cleaning the filter will fix the problem.
5. To protect the meter and avoid damage from harsh conditions, it is recommended that the meter be encased in an enclosure.
6. Primary Address: first 2 digits of Manufacturer ID
7. Secondary Address: later 8 digits of Manufacturer ID
8. Company Code: BAS (08 33)
 - Version: 54

4. Display Menus

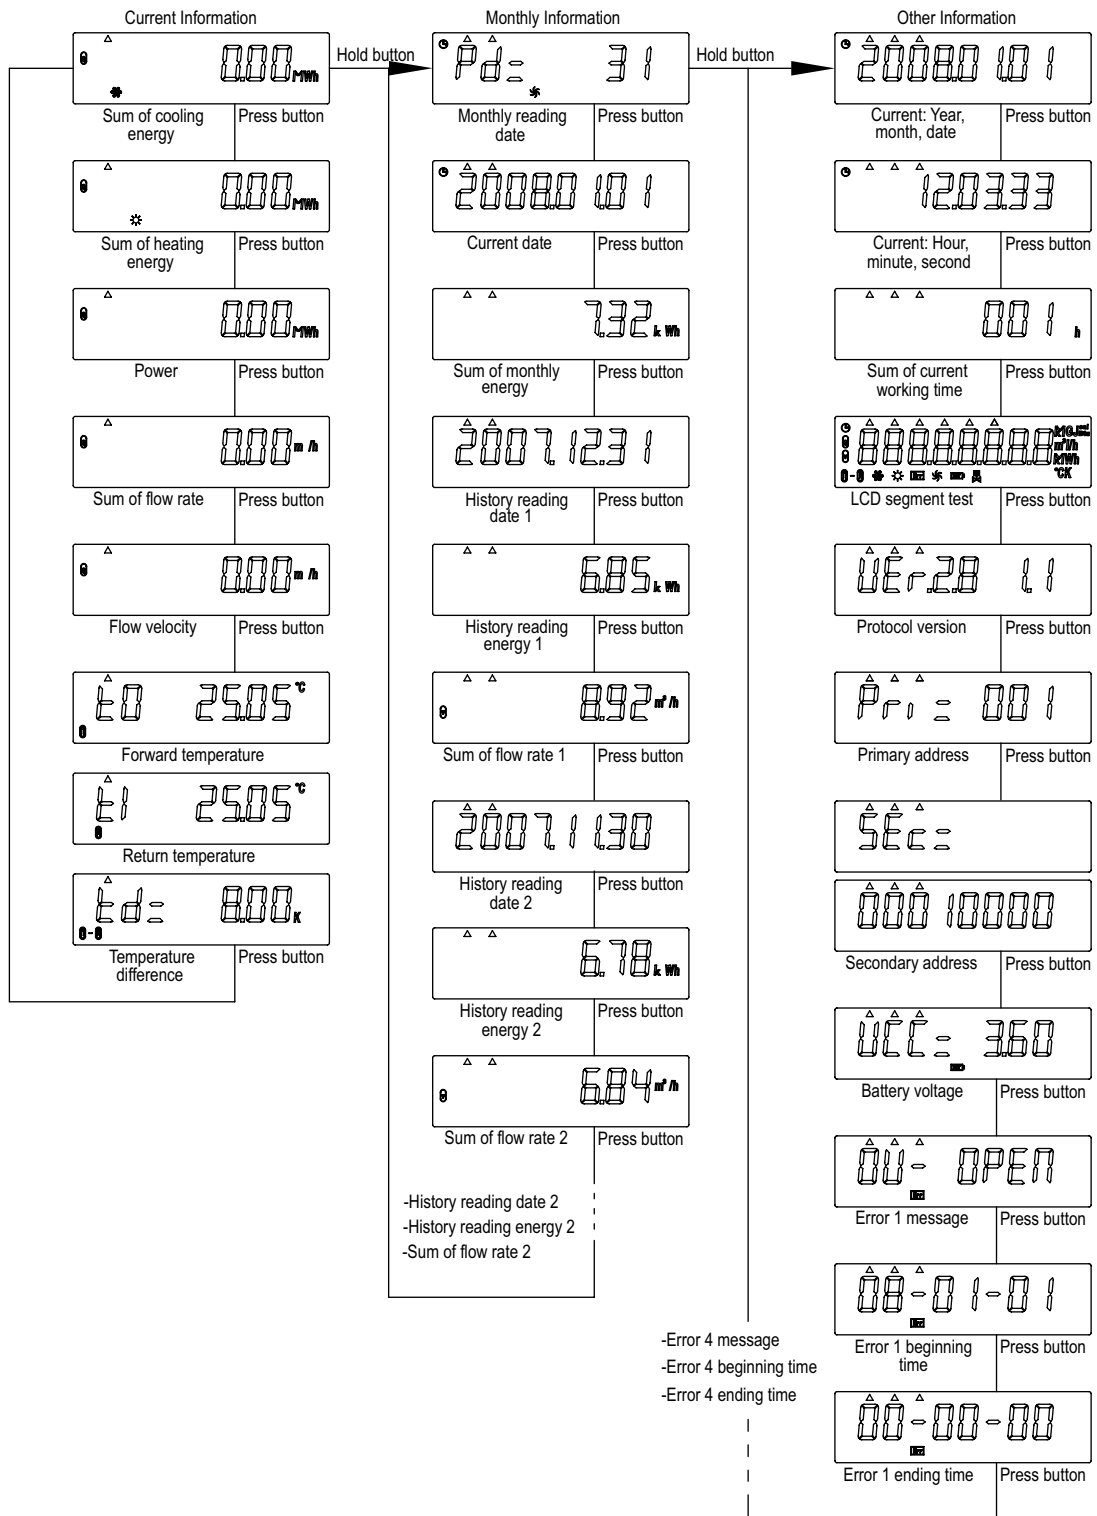

WARRANTY/RETURN

Refer to "Terms and Conditions of Sale" in our catalog and on our website. Contact customer service to receive a Return Goods Authorization number before shipping the product back for repair. Be sure to include a brief description of the problem plus any additional application notes.

APPENDIX I: DEVICE OBJECT PROPERTY TABLE

Property	Default Value	Property Data Type	Access
Object Identifier	32001	BACnetObjectIdentifier	Read/Write
Object Name	Ultrasonic BTU Meter	CharacterString (32)	Read/Write
Object Type	DEVICE (8)	BACnetObjectiveType	Read
System Status	Operation (0)	BACnet Device Status	Read
Vendor Name	Dwyer Instruments, Inc.	CharacterString	Read
Vendor Identifier	607	Unsigned	Read
Model Name	TUF-XX-BN	CharacterString	Read
Firmware Revision	"X.X"	CharacterString	Read
Application Software Version	"X.X"	CharacterString	Read
Description	Basic Protocol Converter	CharacterString (32)	Read/Write
Protocol Version	1	Unsigned	Read
Protocol Revision	5	Unsigned	Read
Protocol Services Supported	Read Property; write property; who-is	BACnet ServicesSupported	Read
Protocol Object Types Supported	Analog Input, Analog Value, Device	BACnetObjectTypes Supported	
Object List	See Table on page 3	BACnetArray	Read
Maximum APDU Length Accepted	50	Unsigned	Read
Segmentation Supported	NO_SEGMENTS (3)	BACnet Segmentation	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A10	BACnetObjectIdentifier	Read
Object Name	Flow Temperature	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Celsius (62)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A16	BACnetObjectIdentifier	Read
Object Name	Total Cool Energy	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Megawatt Hours (146)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A11	BACnetObjectIdentifier	Read
Object Name	Return Temperature	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Celsius (62)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A17	BACnetObjectIdentifier	Read
Object Name	FL Status	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No Units (95)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A12	BACnetObjectIdentifier	Read
Object Name	Volume Flow	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Cubic meter per hour (135)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A18	BACnetObjectIdentifier	Read
Object Name	PTIN Status	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A13	BACnetObjectIdentifier	Read
Object Name	Power	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Kilowatts (48)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A19	BACnetObjectIdentifier	Read
Object Name	PTOUT Status	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A14	BACnetObjectIdentifier	Read
Object Name	Total Volume	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Cubic Meters (80)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A110	BACnetObjectIdentifier	Read
Object Name	SSU Version	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A15	BACnetObjectIdentifier	Read
Object Name	Total Heat Energy	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	Megawatt Hours (146)	BACnetEngineeringUnits	Read

APPENDIX II: ANALOG INPUT OBJECT PRODUCT TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	A111	BACnetObjectIdentifier	Read
Object Name	SSU Type	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current Reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV0	BACnetObjectIdentifier	Read
Object Name	Backup Date	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	31	Real	Read/Write
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV24	BACnetObjectIdentifier	Read
Object Name	Baudrate	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	38400	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No Units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV1	BACnetObjectIdentifier	Read
Object Name	Local Date	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	Current Date	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV25	BACnetObjectIdentifier	Read
Object Name	Parity	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	0	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No Units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV2	BACnetObjectIdentifier	Read
Object Name	Local Time	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	Current Time	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV3	BACnetObjectIdentifier	Read
Object Name	SSU Address	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	2	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV4	BACnetObjectIdentifier	Read
Object Name	Volume Flow Threshold	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	0	Real	Read/Write
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX III: ANALOG VALUE OBJECT PROPERTY TABLE			
Property	Default Value	Property Data Type	Access
Object Identifier	AV21	BACnetObjectIdentifier	Read
Object Name	Temperature Compensation Mode	CharacterString	Read
Object Type	ANALOG_VALUE (2)	BACnetObjectType	Read
Present Value	0	Real	Read/Write
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Units	No units (95)	BACnetEngineeringUnits	Read

APPENDIX IV: VARIABLE TYPE/FORMAT		
Object Identifier	Description	Type/Format
AI0	Flow Temperature	Forward flow temperature (temperature forward)
AI1	Return Temperature	Return flow temperature (temperature return)
AI2	Volume Flow	Flow rate of TUF
AI3	Power	Power of TUF
AI4	Total Volume	Accumulative flow of TUF
AI5	Total Heat Energy	Total heat quantity of TUF
AI6	Total Cool Energy	Total cool quantity of TUF
AI7	FL Status	Flow sensor status: 0: Normal 1: Open circuit
AI8	PTIN Status	Inlet Platinum Resistance Status: 0: Normal 1: Open circuit 2: Short circuit
AI9	PTOUT Status	Outlet Platinum Resistance Status: 0: Normal 1: Open circuit 2: Short circuit
AI10	SSU Version	SSU Software/Hardware/Communication Version [Example: 355711, Software Version: v3.5; Hardware Version: v5.7; Communication Version: v1.1]
AI11	SSU Type	SSU Type [Example: 4006, Meter Type: 40; Pipe Type: 6]
AV0	Backup Date	Backup Date: 1~31
AV1	Local Date	Year/Month/Date [Example: 111213 stands for 13, Dec 2011]
AV2	Local Time	Week/Hour/Minute/Second [Example: 7125630 stands for Sunday 12:56:30 (Monday: 1...Sunday: 7)]
AV3	SSU Address	SSU Address Range: 1~127
AV4	Volume Flow Threshold	Valid minimum flow rate range: 0~60.00, Unit: m3/h
AV21	Temperature Compensation Mode	0: Unit installed on supply 1: Unit installed on return 2,3: Reserved for factory use only
AV24	Baudrate	Baudrate of the TUF
AV25	Parity	Parity of the TUF

Modbus® is a registered trademark of Schneider Automation, Inc.