

**Step 10. Enter to the Thermocouple Input Submenu**  
Press **➡** to store Thermocouple Input. The display will stop flashing and show the top menu for Thermocouple types. If you press **➡** controller will step to next menu item (Skip to Step 14).

**Step 11. Enter to the Thermocouple Type Input Submenu**  
Press **➡** to display flashing, previously selected Thermocouple type.

**Step 12. Scroll through available selection of TC types**  
Press **⬅** to sequence thru flashing Thermocouple types, (select k -for type "K" CHROMEGA®/ALOMEGA®)

J K T E N DIN J R S B C - TC types  
J k t E N dN J R S b C - Display

**Step 13. Store TC type**  
After you have selected the Thermocouple type press **➡** to store your selection, the instrument automatically advances to the next menu item.

**Step 14. Enter to Reading Configuration Menu**  
The display shows **RdC** Reading Configuration, which is the top menu for 4 submenus: Decimal Point, Degree Units, Filter Constant and Input/Reading Submenus.

**Step 15. Enter to Decimal Point Submenu**  
Press **➡** to show **dEC** Decimal Point.

**Step 16. Display the Decimal Point position**  
Press **➡** again to display the flashing Decimal Point position.

**Step 17. Select the Decimal Point position**  
Press **⬅** to select **FFF.F** Decimal Point position.

**Step 18. Store selected Decimal Point position**  
By pressing **➡** momentarily the Decimal Point position will be stored and the instrument will go to the next menu item.

**Step 19. Enter to Temperature Unit Submenu**  
Display shows **TEMP** Temperature Unit.

**Step 20. Display available Temperature Units**  
Press **➡** to display the flashing Degree **°F** or **°C**.

**Step 21. Scroll through Temperature Units selection**  
Press **⬅** to select **°F** Degree.

**Step 22. Store the Temperature Unit**  
Press **➡** to display momentarily that the Degree Unit has been stored and the instrument will go automatically to the next menu item.

**Step 23. Enter the Filter Constant Submenu**  
Display shows **FLtR** Filter Constant Submenu.

**Step 24. Display the Filter Constant Value Submenu**  
Press **➡** to display the flashing, previously selected Filter Constant.

**Step 25. Scroll through available Filter Constants**  
Press **⬅** to sequence thru Filter Constants **000.1**, **0002**, **0004**, **0008**, **0016**, **0032**, **0064** and **0128**.

**Step 26. Store the Filter Constant**  
Press **➡** momentarily to store **0004** Filter Constant and the instrument will automatically go to the next menu item.

**Step 27. Enter Alarm 1 Menu**  
The display will show **ALR.1** the top menu for Alarm 1. In the following steps we are going to enable Alarm 1, Deviation, Unlatch, Normally Open, Active Above, Enable at power on and +2°F High Alarm i.e. Process Value > Setpoint 1 Value +2°F will activate Alarm 1.

**Step 28. Enter Alarm 1 Enable/Disable Submenu**  
Press **➡** to display flashing **dSbL** / **ENbL**.

**Step 29. Enable Alarm 1 Submenu**  
If flashing **ENbL** is displayed, press **➡**, if **dSbL** is displayed, press **⬅** until **ENbL** is displayed, then press **➡** to store and go to the next menu item.

**Step 30. Select the Deviation Control Type Submenu**  
Press **➡**. If flashing **dDEV** Deviation is displayed press **➡**, otherwise press **⬅** until flashing **dEN** is shown. Now press **➡** to store and go to next menu item.

**Step 31. Select the Latched Type Submenu**  
Press **➡**. If flashing **UNLE** Unlatched is displayed press **➡**, otherwise press **⬅** until **UNLE** is displayed. Press **➡** to store and advance to next menu item.

**Step 32. Select the Normally Open Type of Contact Closure Submenu**  
Press **➡**. If flashing **N.o.** Normally Open is displayed, press **➡**, otherwise press **⬅** until **N.o.** is displayed. Press **➡** to store and advance to next menu item.

**Step 33. Select the Above Type of Active Submenu**  
Press **➡**. If flashing **AbsoN** Above is displayed, press **➡**, otherwise press **⬅** until **AbsoN** is displayed. Press **➡** to store and advance to next menu item.

**Step 34. Enable Alarm 1 at Power On (A.P.oN)**  
Press **➡**. If flashing **ENbL** is displayed, press **➡**, otherwise press **⬅** until **ENbL** is displayed. Press **➡** to store and advance to next menu item.

**Step 35. Enter Alarm 1 High Submenu**  
Press **➡** twice to skip **ALR.L** Alarm 1 Low value. **ALR.L** is for below & **ALR.H** for above.

**Step 36. Set the Alarm 1 High value (ALR.H)**  
Press **➡**. Press **⬅** or **➡** until value to set the display to **002.0**. Press **➡** to save.

**Step 37. Enter the Alarm 2 Menu**  
The display will show **ALR2** the top menu for Alarm 2. Repeat steps from 28 to 36 to set for Alarm 2 the same conditions as for Alarm 1.


**Step 38. Configuration of Display Color Selection**  
Press **➡** until the **COLR** Display Color Selection Menu appears on the Display. Configure **COLR** as **W.CLR** / **GRN** (green), **I.CLR** / **RED** (red), **P.CLR** / **AMbR** (amber). Please refer to the operator's manual if needed.

**Step 39. Run a Test**  
Press **➡** until reset the controller and return to **RUN** Mode to display **075.0** (Ambient Temperature). Now you are ready to observe temperature as it rises 10°F higher than displayed. Touch the tip of the Thermocouple to raise the temperature above the Alarm 2 High value **082.0**, and AL2 will turn on, and Display Color will change from Green to Amber. Continue touching the tip to raise the temperature above the Alarm 1 High value **087.0** and Display Color will change from Amber to Red.

SPECIFICATION

<b>Accuracy:</b> +0.5°C temp; 0.03% rdg. process typical	<b>Output 1':</b> Relay 250 Vac @ 3 A Resistive Load, SSR, Pulse
<b>Resolution:</b> 1°/0.1°; 10 µV process	<b>Output 2':</b> Relay 250 Vac @ 3 A Resistive Load, SSR, Pulse <sup>†</sup> Only with -AL Limit Alarm option
<b>Temperature Stability:</b> 0.04°C/°C RTD; 0.05°C/°C TC @ 25°C (77°F); 50 ppm/°C process	<b>Options: Communication:</b> RS-232 / RS-422 / RS-485 or <b>Excitation:</b> 24 Vdc @ 25 mA <u>Exc. not available for Low Power Option</u>
<b>Display:</b> 4-digits, 9-segments LED, 10.2 mm (0.40") with red, green and amber programmable colors	<b>Line Voltage/Power:</b> 90 - 240 Vac ±10%, 50 - 400 Hz*, or 110 - 300 Vdc, <b>4 W</b> <i>* No CE compliance above 60 Hz</i>
<b>Input Types:</b> Thermocouple, RTD, Analog Voltage and Current	<b>Low Voltage Power Option:</b> 12 - 36 Vdc, <b>3 W**</b> <i>** Units can be powered safely with 24 Vac but No Certification for CE/UL are claimed.</i>
<b>TC:</b> (ITS90) J, K, T, E, R, S, B, C, N, L	<b>Dimensions:</b> 254 H x 48 W x 126.3 D mm (1.0 x 1.89 x 5")
<b>RTD:</b> (ITS68) 100/500/1000 ohm Pt sensor 2-, 3-, or 4-wire; 0.00385 or 0.00392 curve	<b>Weight:</b> 127 g (0.28 lb)
<b>Voltage:</b> 0 to 100 mV, 0 to 1 V, 0 to 10 Vdc	<b>Approvals:</b> UL, C-UL, UKCA, CE per 2014/35/EU
<b>Current:</b> 0 to 20 mA (4 to 20 mA)	

**WARNING:** These products are not designed for use in, and should not be used for, patient-connected applications.

	This device is marked with the international caution symbol. It is important to read the Setup Guide before installing or commissioning this device, as the guide contains important information relating to safety and EMC.
---	--

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OEMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

TRADEMARK NOTICE:

 , *omega.com* <sup>™</sup>,  **OMEGA** <sup>™</sup>, and  are Trademarks of OMEGA ENGINEERING, INC.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

<b>FOR WARRANTY RETURNS</b> , please have the following information available BEFORE contacting OMEGA: 1. Purchase Order number under which the product was PURCHASED, 2. Model and serial number of the product under warranty, and 3. Repair instructions and/or specific problems relative to the product.	<b>FOR NON-WARRANTY REPAIRS</b> , consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA: 1. Purchase Order number to cover the COST of the repair, 2. Model and serial number of the product, and 3. Repair instructions and/or specific problems relative to the product.
--	--

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2019 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

QUICK START







DPi32  
Temperature & Process Monitor  
CNi32-AL  
Temperature & Process Limit Alarm



omega.com info@omega.com

**Omega Engineering, Inc:**  
  
800 Connecticut Ave. Suite 5N01, Norwalk, CT 06854, USA  
Toll-Free: 1-800-826-6342 (USA & Canada only)  
Customer Service: 1-800-622-2378 (USA & Canada only)  
Engineering Service: 1-800-872-9436 (USA & Canada only)  
Tel: (203) 359-1660 Fax: (203) 359-7700  
e-mail: info@omega.com

**Omega Engineering, Limited:**  
1 Omega Drive, Northbank, Irlam  
Manchester M44 5BD  
United Kingdom

**Omega Engineering, GmbH:**  
Daimlerstrasse 26 75392  
Deckenpfronn, Germany

**For Other Locations Visit [omega.com/worldwide](https://omega.com/worldwide)**

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

This Quick Start Reference provides information on setting up your instrument for basic operation. The latest complete Communication and Operational Manual as well as free Software and ActiveX Controls are available at [www.omega.com/specs/series](http://www.omega.com/specs/series).

SAFETY CONSIDERATION



This device is marked with the international Caution symbol.

The instrument is a panel mount device protected in accordance with 2014/35/EU, electrical safety requirements for electrical equipment for measurement, control and laboratory. Remember that the unit has no power-on switch. Building installation should include a switch or circuit-breaker that must be compliant to IEC 947-1 and 947-3.


SAFETY:

- Do not exceed voltage rating on the label located on the top of the instrument housing.
- Always disconnect power before changing signal and power connections.
- Do not use this instrument on a work bench without its case for safety reasons.
- Do not operate this instrument in flammable or explosive atmospheres.
- Do not expose this instrument to rain or moisture.

EMC:

- Whenever EMC is an issue, always use shielded cables.
- Never run signal and power wires in the same conduit.
- Use signal wire connections with twisted-pair cables.
- Install Ferrite Bead(s) on signal wire close to the instrument if EMC problems persist.

MOUNTING

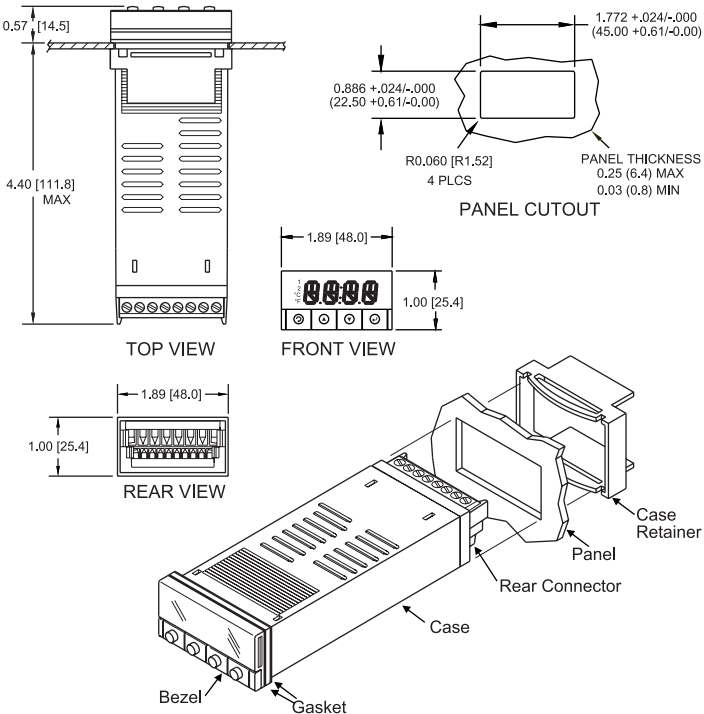

Panel Mounting Instruction:

- Using the dimensions from the panel cutout diagram shown above, cut an opening in the panel.
- Insert the unit into the opening from the front of the panel, so the gasket seals between the bezel and the front of the panel.
- Slide the retainer over the rear of the case and tighten against the backside of the mounting panel.

Disassembly Instruction:

If necessary, the unit may be removed from the panel and opened.



Warning: Disconnect all ac power from the unit before proceeding.


- Make sure the AC power is disconnected.
- Remove all wiring connections from the rear of the meter. To remove power and input connectors bend the side panel detents on the case outward to release the connectors, then pull connectors from the meter.
- To remove meter from the case, squeeze left and right sides of the bezel to release, then pull from case.

WIRING


Wire the instrument according to the figure shown below.



Warning: Do not connect ac power to your device until you have completed all input and output connections. This device must only be installed by a specially trained electrician with corresponding qualifications. Failure to follow all instructions and warnings may result in injury!

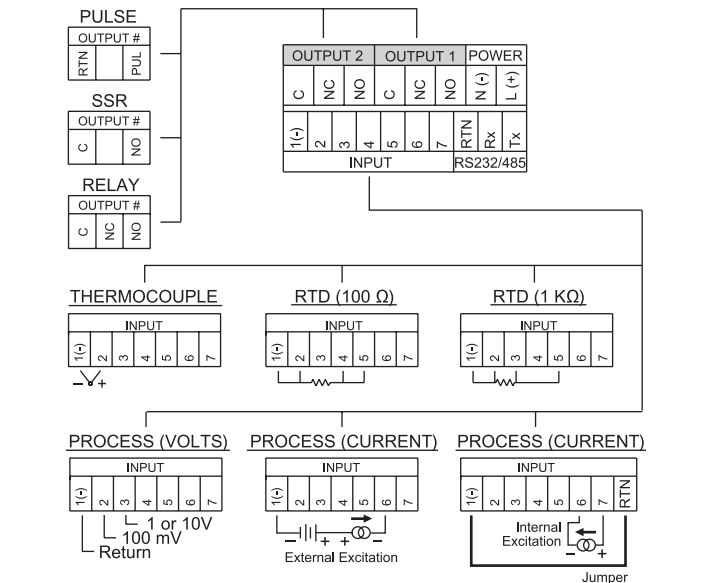

Connect the main power connections as shown in the figure below.

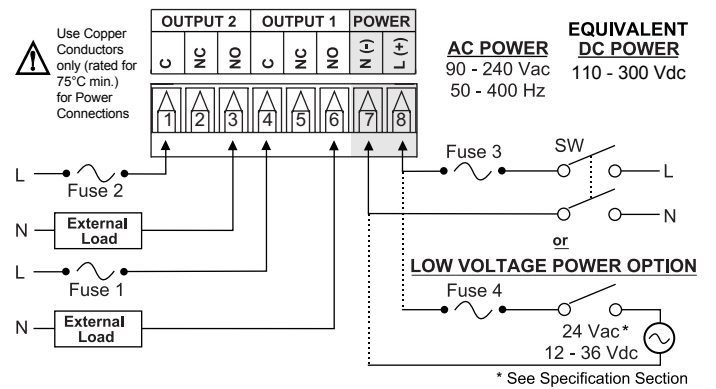

FUSE	Connector	Output Type	For 115Vac	For 230Vac	DC
FUSE 1	Output 1	Relay	3 A(T)	3 A(T)	-
FUSE 2	Output 2	Relay	3 A(T)	3 A(T)	-
FUSE 3	Power	N/A	100 mA(T)	100 mA(T)	100 mA(T)
FUSE 4	Power	N/A	N/A	N/A	400 mA(T)

Output 1 and 2 are for -AL Limit Alarm Option only.

CONFIGURATION

MENU Mode:

Flashing display in MENU Mode means you can make your selection by pressing **▲** button. If the flashing display is not a four digit value, pressing **▼** button will always direct the instrument one step backward of the top menu item. The second push on the **▼** button will reset the instrument except after the setpoint and the alarms, that will go to the RUN Mode without resetting the instrument. The **▶** button will always sequence the instrument thru the menu items.

The **▶** button has two functions:

- To save a selected flashing display
- To direct the instrument to the next submenu level

RUN Mode:

- ▲** causes the display to flash the PEAK with the corresponding value. Press again to go back to RUN Mode.
- ▼** causes the display to flash VALLEY with the corresponding value. Press again to go back to RUN Mode.
- ▶** causes flashing PEAK or VALLEY to reset corresponding values. Press **▶** one more time to go back to RUN Mode.

FLOW CHART

