


1 YEAR
WARRANTY

CE



Ω OMEGA® User's Guide

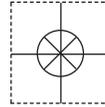

Shop online at



www.omega.com

e-mail: info@omega.com

For latest product manuals:

www.omegamanual.info



MADE IN
USA

PHTX-100 pH/ORP Meter & Transmitter



omega.com info@omega.com

Servicing North America:

U.S.A.:

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA

Toll-Free: 1-800-826-6342 (USA & Canada only)

Customer Service: 1-800-622-2378 (USA & Canada only)

Engineering Service: 1-800-872-9436 (USA & Canada only)

Tel: (203) 359-1660

Fax: (203) 359-7700

e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

PHTX-100 pH/MV Transmitter ESSENTIAL INSTRUCTIONS

READ THIS BEFORE USING YOUR PHTX-100 pH/mV TRANSMITTER!

Thank you for choosing the PHTX-100 pH/mV transmitter. This transmitter is a user-friendly microprocessor based transmitter for pH and mV measurement. As with all electronic instruments, it is essential to follow all directions for optimal performance. In particular, you must properly install, use and maintain the PHTX-100 to ensure that it will continue to operate within its specifications.

- Follow all warnings, cautions and instructions marked on and supplied with the transmitter. Please contact your supplier with any product questions or concerns.
- Install the transmitter as specified in this manual, following all applicable local and national codes.
- Do not attempt to repair your PHTX-100 transmitter or use any replacement parts from any other supplier.
- If you find any errors in this manual, please report them to www.omega.com

Table of Contents

Part 1	Introduction	
1.1	General	1
1.2	Features	1
1.3	PHTX-100 Specifications	2
1.4	Quick Start Guide	3
Part 2	Transmitter Mounting	
2.1	Cord Grip Installation	5
2.2	Wall Mounting	6
2.3	Panel Mounting	7
2.4	DIN Rail Mounting	8
2.5	Pipe Mounting	9
Part 3	Sensor Mounting	
3.1	General	10
Part 4	Transmitter Electrical Installation	
4.1	General	11
4.2	Power	11
4.3	4-20mA Loop wiring	12
Part 5	Sensor Electrical Connection	
5.1	General	13
5.2	Direct Sensor Connection	13
Part 6	Keypad Function and LCD Display	
6.1	Keypad Function	14
6.2	LCD Display	15
Part 7	Transmitter Programming	
7.1	General	16
Part 8	Calibration	
8.1	Getting Started	17
8.2	2-Point pH calibration	17
8.3	Temperature Calibration (with ATC)	19

Table of Contents

Part 9 Setup Functions

9.1	Probe Select Menu	20
9.2	Calibration Offset	21
9.3	Range Menu	22
9.4	Limit Menu	23
9.5	Hold Menu	24
9.6	Clean Probe Menu	25
9.7	Factory Reset	26
9.8	Manual Temperature Compensation(without ATC)	27
9.9	Temperature Unit Menu	28

Part 10 Troubleshooting

10.1	General	29
10.2	Troubleshooting Guidelines	29
10.3	Troubleshooting Chart	29

Part 11 Maintenance

11.1	Overview	30
11.2	Replacement Parts	30

Part 12 Warranty and Product Returns

12.1	Product Warranty	34
12.2	Return of Items	34

Diagrams and Illustrations

Figure 2-1	Conduit port Knockout removal	5
Figure 2-2	Cord grip Mounting	5
Figure 2-3	Wall Mount	6
Figure 2-4	Panel Mount	7
Figure 2-5	DIN RAIL Mount	8
Figure 2-6	3/4" Pipe Mount	9
Figure 4-1	Power connections (schematic)	11
Figure 4-1a	4-20mA loop wiring (schematic)	12
Figure 5-1	Electrode connections (TBM1)	13
Figure 6-1	Transmitter Keypad	14
Figure 6-2	LCD Definition	15
Figure 7-1	Transmitter Main Menu	16
Figure 8-1	2-Point pH Calibration	18
Figure 8-2	Temperature Calibration	19
Figure 9-1	Probe Select Menu	20
Figure 9-2	Calibration Offset	21
Figure 9-3	Range Menu	22
Figure 9-4	Limit Menu	23
Figure 9-5	Hold Menu	24
Figure 9-6	Clean Probe Menu	25
Figure 9-7	Factory Reset Menu	26
Figure 9-8	Manual Temperature Compensation	27
Figure 9-9	Temperature Unit Menu	28
Figure 10-1	Troubleshooting Chart	29
Figure 11-1	Wall Mount Parts - Exploded View	30
Figure 11-2	Panel Mount Parts - Exploded View	31
Figure 11-3	DIIN- Rail Mount Parts - Exploded View	32
Figure 11-4	Pipe Mount Parts - Exploded View	33

Part 1 Introduction

1.1 General

The Model PHTX-100 is a microprocessor-based, loop-powered monitoring system, designed for the continuous measurement of pH, mV (ORP) and temperature. The full scale operating range of the transmitter may be user adjusted to any value between 0-14 pH or -1999 to + 1999mV. All transmitter features are selectable via the silicone keypad. Please read this manual thoroughly before operating the transmitter. For quick use, please read the "Quick Start" Instructions supplied with your transmitter.

1.2 Features


- The PHTX-100 is designed to be a fully isolated, loop powered pH/mV instrument for two-wire DC applications.
- Can be user-adjusted for specific application span from 0-14pH or -1999mV to + 1999mV.
- Automatic temperature compensation via Pt1000 RTD.
- Instrument supplied in rugged NEMA 4X (IP65) enclosure.
- Built-in programmable sensor cleaning reminder.
- Probe select menu allows user to scale in pH or mV units.
- Calibration Offset menu allows user to calibrate transmitter to match another reference pH meter.
- Several preprogrammed pH buffer selections available for calibration.

1.3 PHTX-100 Specifications

Measuring Range (pH)	0.00 to 14.00pH, 0.01 pH resolution, +/- 0.01 accuracy										
Measuring Range (ORP/mV)	-1999mV to 1999mV, 1mV resolution, +/- 2mV accuracy										
Measuring Temperature Range	-20 degC to 110 degC /-4 degF to 230degF, 0.1degC/F resolution										
Current Output Range	2.00mA to 24mA (4-20mA galvanically isolated) , 0.01mA resolution,+/-0.005mA accuracy										
Enclosure	NEMA 4X, IP65, ABS case with silicone keypad HWD: 3.8" (96.52 mm) x 3.8" (96.52 mm) x 2.8" (71.5mm)										
Weight	approx. 1lb (.45kg)										
Mounting Options	Wall mount, panel mount, pipe mount and DIN rail (rail not included)										
Conduit Openings	Standard: 2 - 3/8" openings cordgrips included.										
Ambient Temperature	Transmitter Service, 0 degC to 60 degC / 32 degF to 140 degF Sensor Service – Refer to Sensor specifications										
Ambient Humidity	0 to 95% (non-condensing)										
Location	Designed for non-hazardous areas										
Temperature Input	2-wire Pt1000 RTD with automatic compensation										
Max. Sensor-to-Transmitter Distance	30 feet (9.1 meters)										
Power	12-24 V .DC, 8 amp maximum current										
	<table border="1"> <thead> <tr> <th>Supply Voltage (V DC)</th> <th>Max Resistance Load (Ohms)</th> </tr> </thead> <tbody> <tr> <td>12</td> <td>150</td> </tr> <tr> <td>16</td> <td>350</td> </tr> <tr> <td>20</td> <td>550</td> </tr> <tr> <td>24</td> <td>750</td> </tr> </tbody> </table>	Supply Voltage (V DC)	Max Resistance Load (Ohms)	12	150	16	350	20	550	24	750
Supply Voltage (V DC)	Max Resistance Load (Ohms)										
12	150										
16	350										
20	550										
24	750										
EMI/RF	EN 61326-1 										

1.4 PHTX-100 pH/MV Transmitter - QUICK START GUIDE

- a. Refer to Section 2 for installation instructions.
- b. Connect electrode to transmitter as shown below.

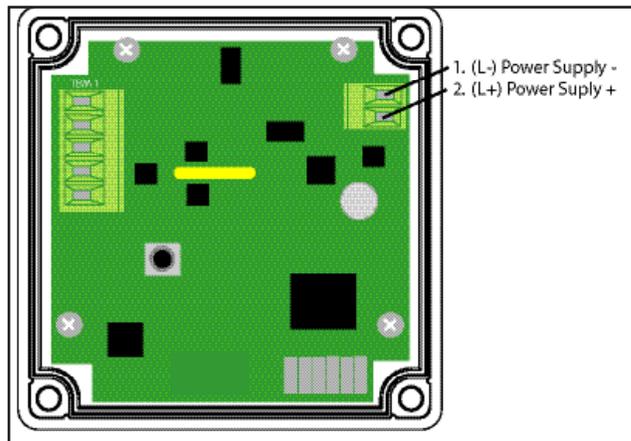

- c. Remove front cover from transmitter case by unscrewing four screws in rear corners of transmitter. Connect a 12-24V DC, 8 amp maximum power supply as shown above. See page 6 for resistance load vs. voltage.

d. Transmitter Programming/Setup

The PHTX-100 is supplied with the following preset programming:

Factory Calibrated Values

pH Manual Offset = 0

mV Manual Offset = 0

Temperature Manual Offset = 0

Without TC, Default 25°C or 77°F

Range Mode [-] OFF

Range Mode Lo mV reset to -999 mV

Range Mode Hi mV reset to 999 mV

Range Mode Lo pH reset to 0.00

Range Mode Hi pH reset to 13.99

Hold Mode HLd Lr

Limit Mode O.r. OFF

Clean Probe Timer C.P. OFF

To change any of these parameters, please refer to the specific section in this manual (See Table of Contents).

- e. If installed electrode is pH, move to step f.
If ORP/mV electrode is installed see Section 9.1 for Probe Selection programming.
- f. Temperature Calibration is done at the factory before shipping. For temperature recalibration follow steps shown in Section 9.8.
- g. Factory preset temperature units are °C. To change to °F, follow instructions in Section 9.9.
- h. For pH, perform Two-Point pH calibration as outlined in Section 8.2.
First buffer is pH 7.00 or 6.86 (NIST), second buffer choices are 4.01, 10.00 or 9.18 (NIST). A two-point calibration must be performed. Three-point calibration is not necessary with the PHTX-100.

Part 2 Transmitter Mounting

2.1 Cord Grip Installation

Turn transmitter upside down with display facing you. Punch out either one or two conduit knockouts with a small hammer and punch as shown below for cord grip mounting. Ensure back cover is installed to provide mechanical support for the enclosure walls. **BE CAREFUL NOT TO DAMAGE THE INTERNAL ELECTRONICS OR CRACK THE TRANSMITTER CASE** while performing this action.

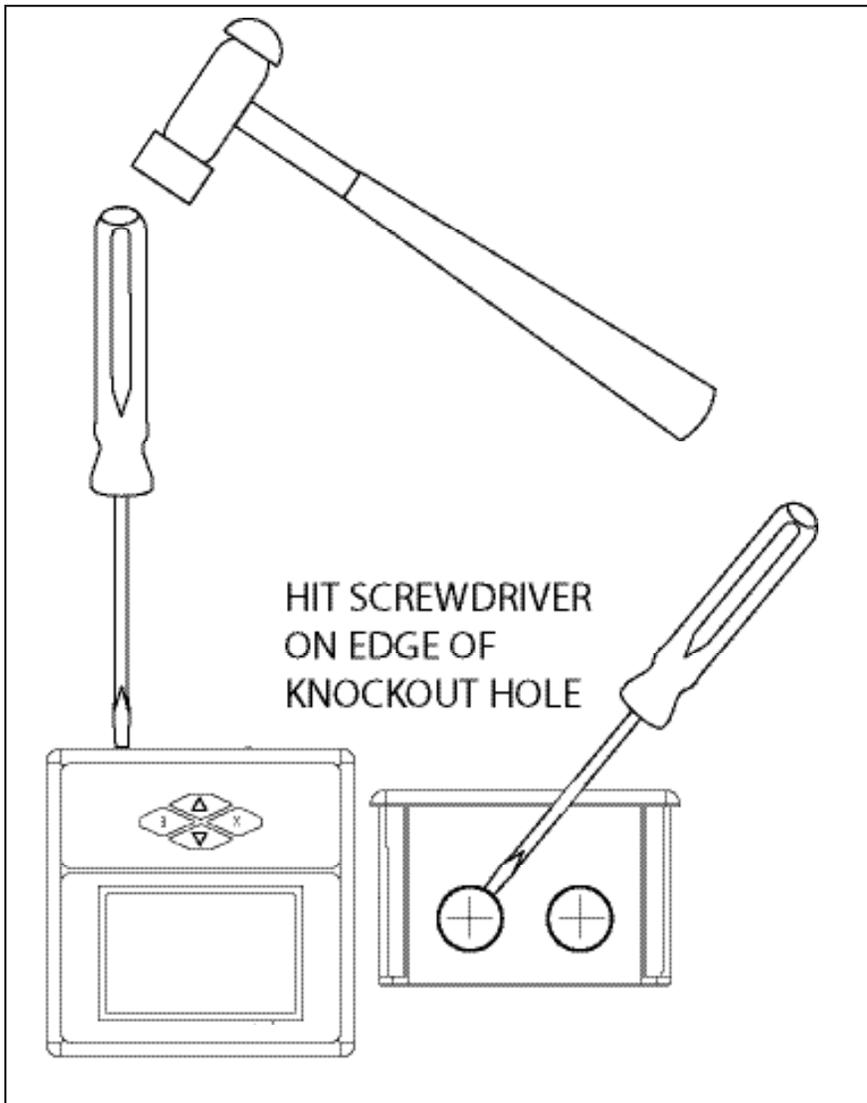


Figure 2.1

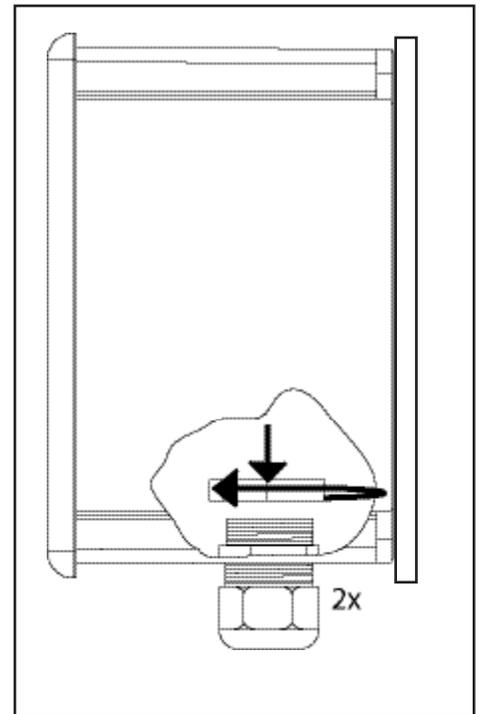


Figure 2.2

2.2 Wall Mounting

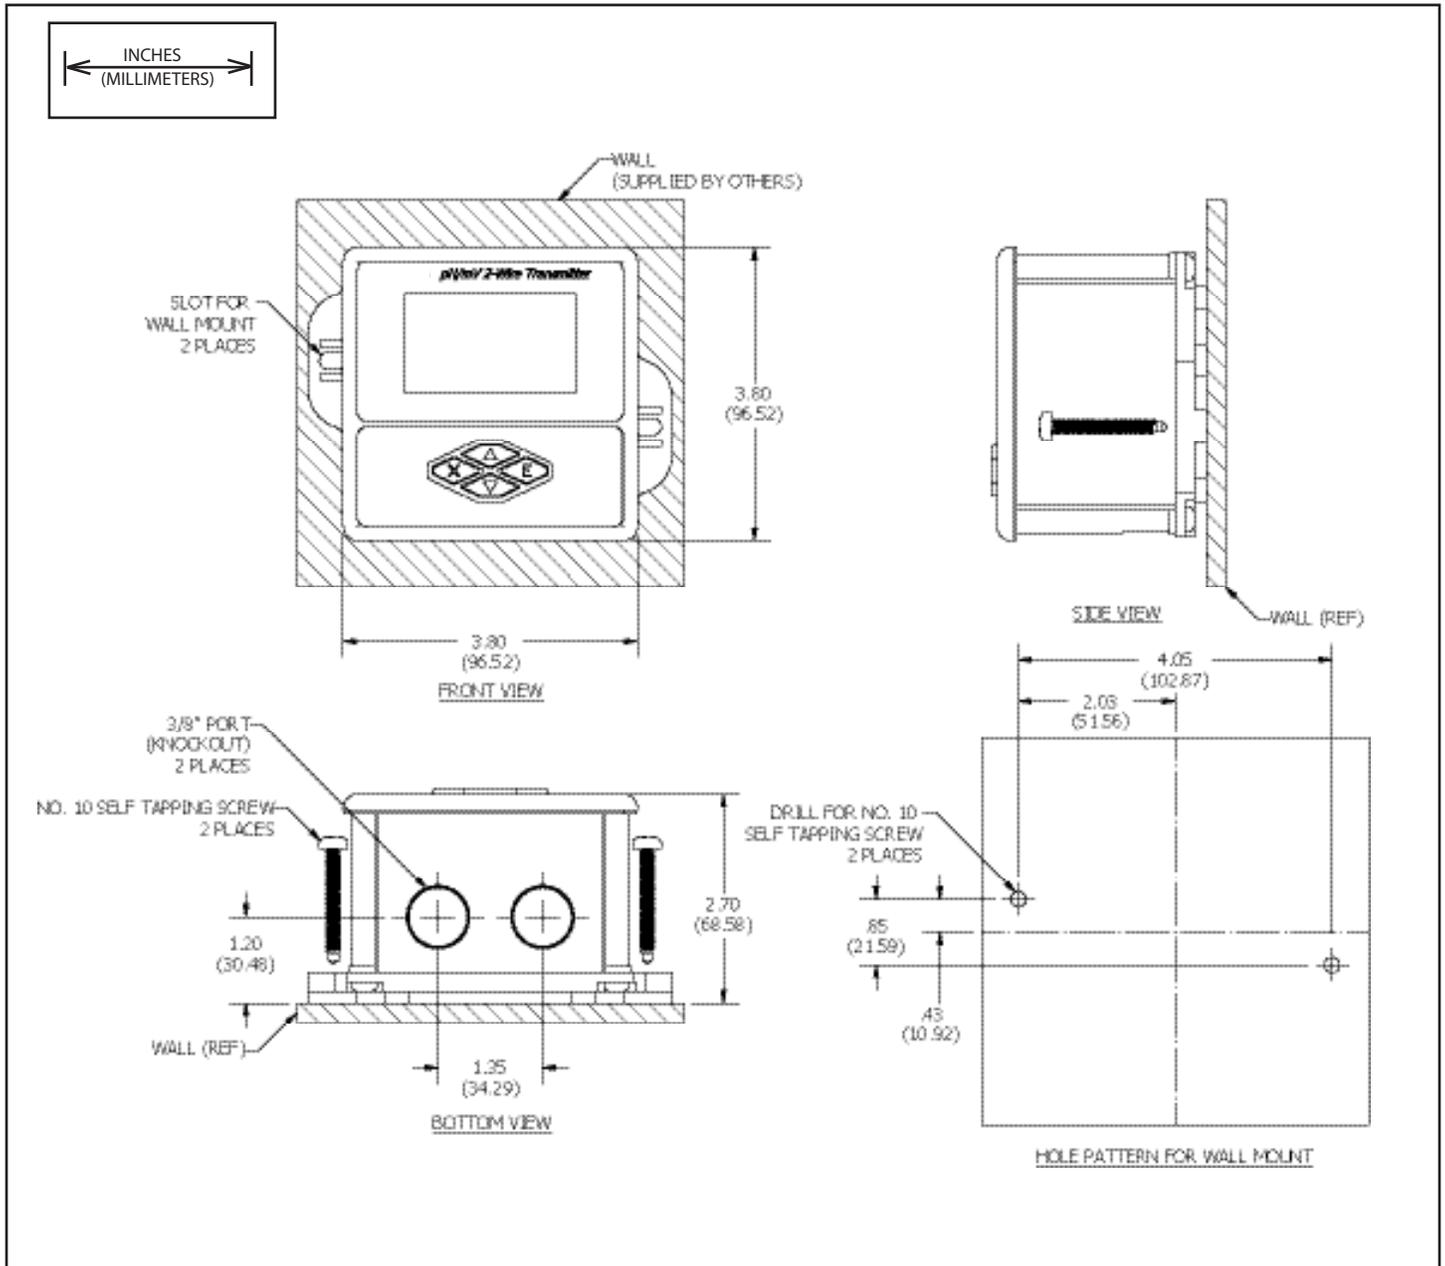


Figure 2.3

2.3 Panel Mounting

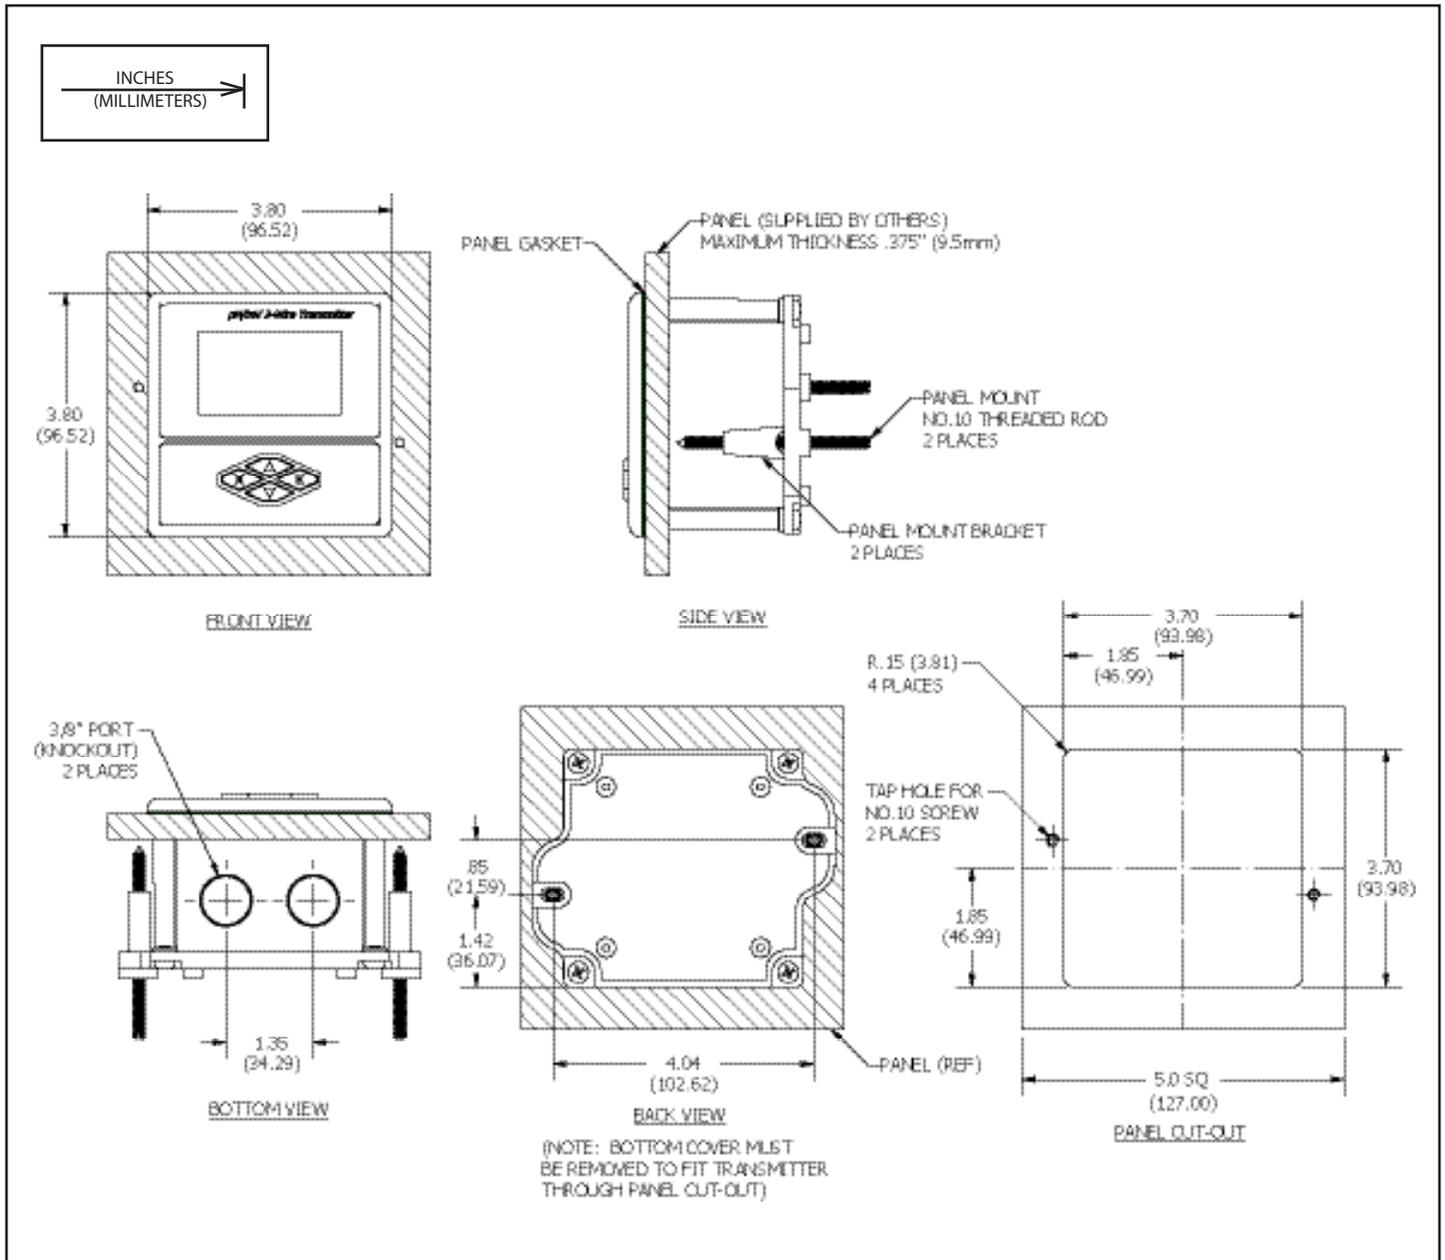


Figure 2.4

2.4 DIN Rail Mounting

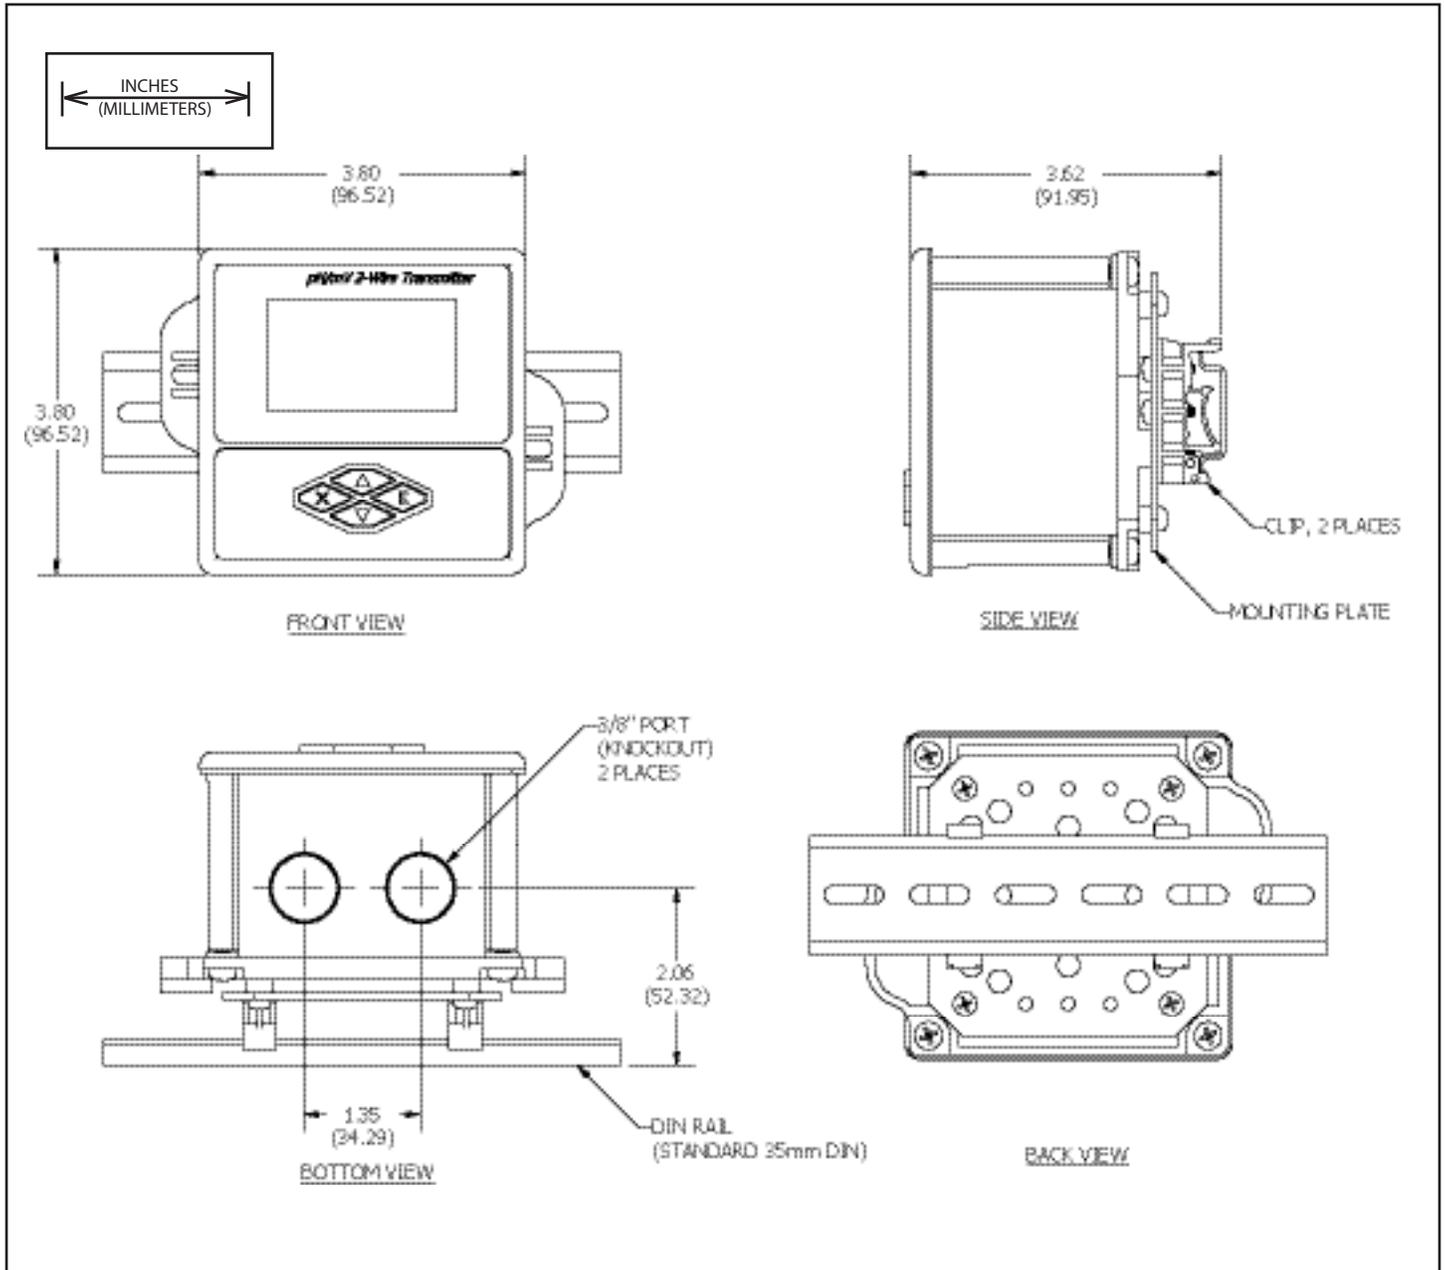


Figure 2.5

2.5 Pipe Mounting

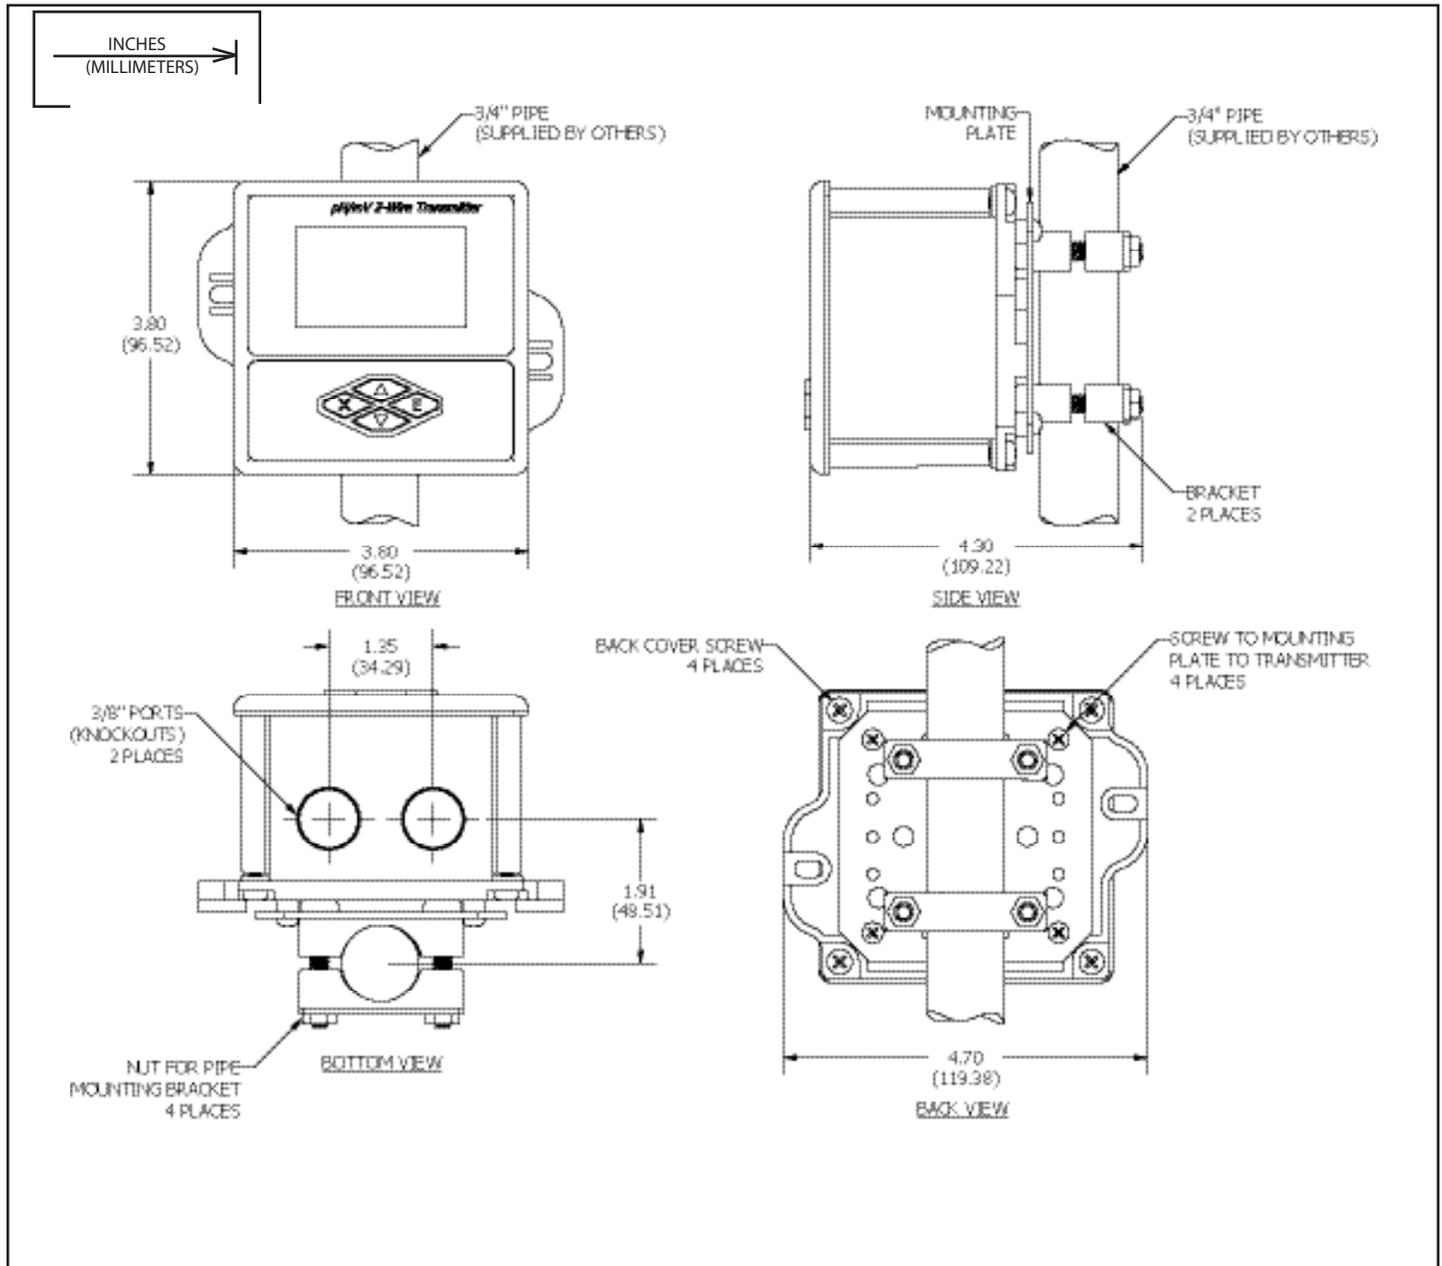


Figure 2.6

Part 3 Sensor Mounting

3.1 General

Select a location within the maximum sensor cable length (30 ft) for mounting of the sensor flow cell. Locate sensor away from pumps, adjustable frequency drive systems, or other sources of high frequency EMI if possible. Refer to the installation manual for your electrode for mounting requirements.

Part 4 Transmitter Electrical Installation

4.1 General

The PHTX-100 loop-powered instrument is a 12-24 VDC loop-powered pH/mV transmitter.

WARNING: Do not connect AC line power to the 2-wire module. Severe damage will result.

Important Notes:

1. Use wiring practices that conform to all national, state, and local electrical codes.
2. DO NOT run sensor cables or instrument 4-20 mA output wiring in the same conduit that contains AC power wiring. AC power wiring should be run in a dedicated conduit to prevent electrical noise from coupling with the instrumentation signals.
3. DO NOT remove dessicant pack from inside transmitter case. This is necessary to control moisture.

4.2 Power

A 12-24VDC power supply, eight amp maximum current must be used to power the instrument. See chart below for Maximum load. The exact connection of this power supply is dependent on the control system into which the instrument will connect. See Figure 4.1 for further details. Any twisted pair shielded cable can be used for connection of the instrument to the power supply. Route signal cable away from AC power lines, adjustable frequency drives, motors, or other noisy electrical signal lines. Do not run sensor or signal cables in conduit that contains AC power lines or motor leads. The PHTX-100 is supplied with a lightning protective component.

Note: Terminal block labels for power, electrode and temperature sensor connections are marked on the PCB next to their respective terminal.

Supply Voltage(V DC)	Max Resistance Load (Ohms)
12	150
16	350
20	550
24	750


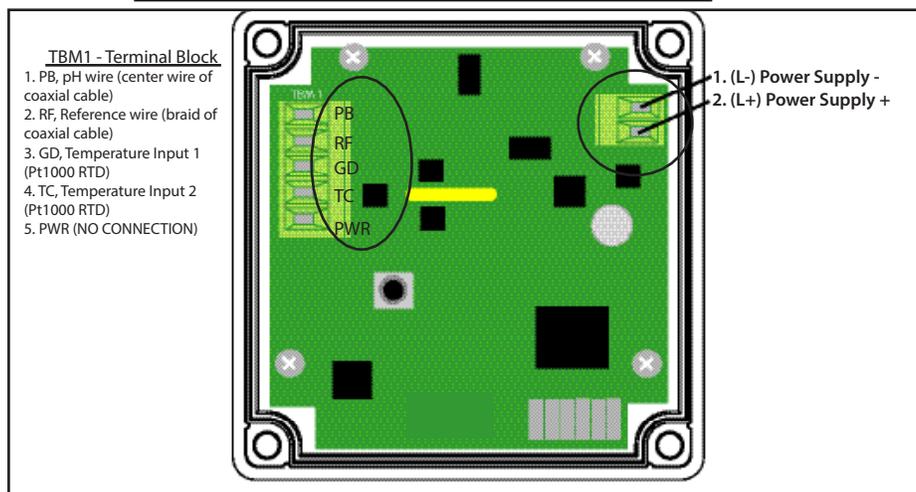


Figure 4.1

Part 4 Transmitter Electrical Installation

4.3 4-20mA loop connection to PLC or other 4-20mA load device

Install loop wiring as shown below in diagram 4.1A, paying particular attention to maximum resistance load shown in the chart. Note that PLC or 4-20mA device and power supply are customer supplied components.

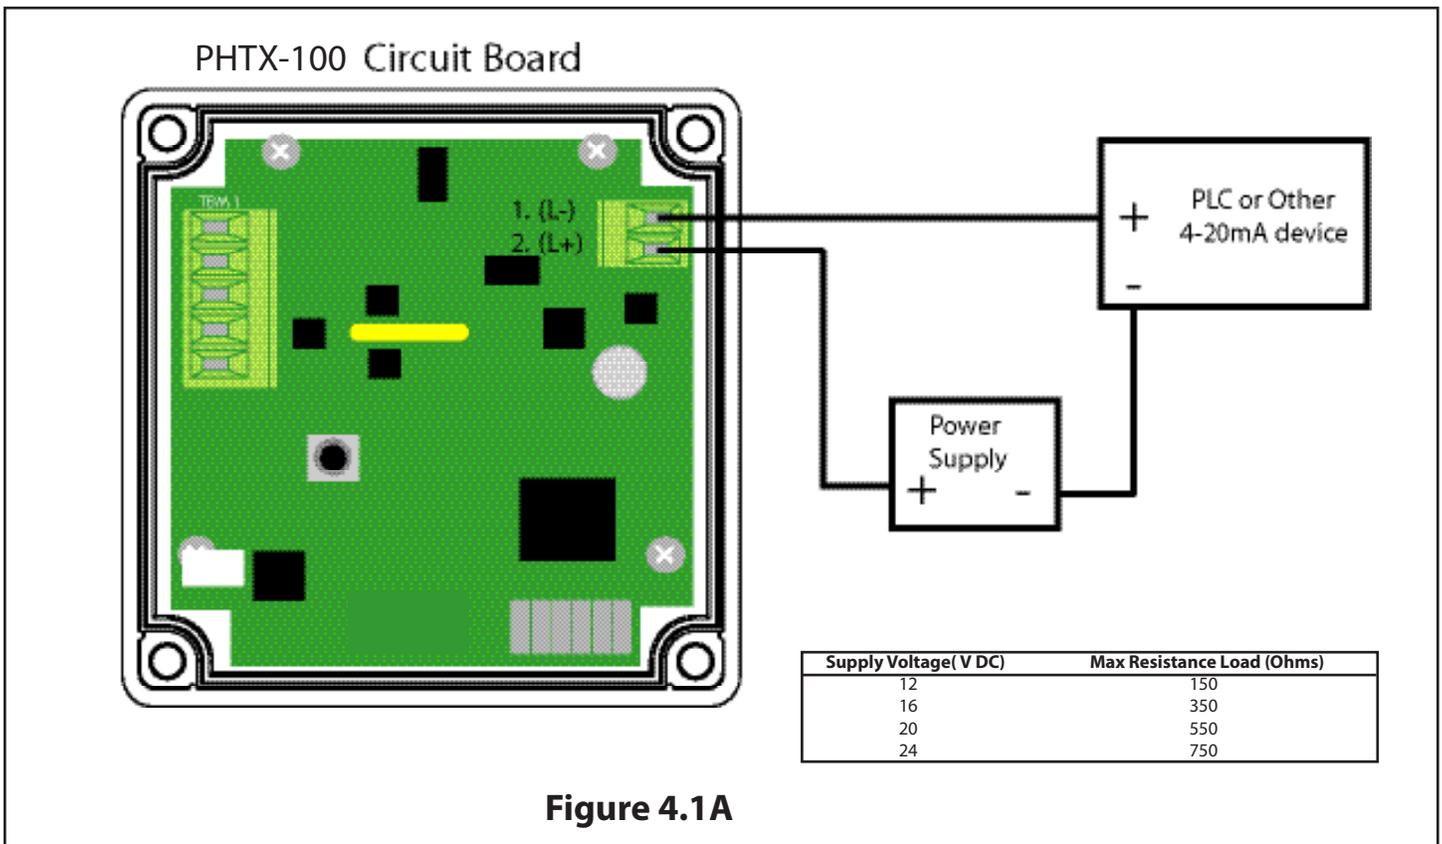

Part 5 Electrode Electrical Connection

5.1 General

The electrode cable can be quickly connected to the PHTX-100's terminal strip by matching the wire colors on the cable conductors. Route signal cable away from AC power lines, adjustable frequency drives, motors, or other noisy electrical signal lines. Do not run sensor or signal cables in conduit that contains AC power lines or motor leads.

5.2 Direct Sensor Connection

The sensor cable can be routed into the enclosure through one of the provided cord-grip retainers, or through a properly sized conduit connection. Connect electrode wires as shown below.

If the cord-grip devices are used for sealing the cable, ensure the cord-grips are snugly tightened after electrical connections have been made to prevent moisture incursion.

Note: Terminal block labels for power, electrode and temperature sensor connections are marked on the PCB next to their respective terminal.

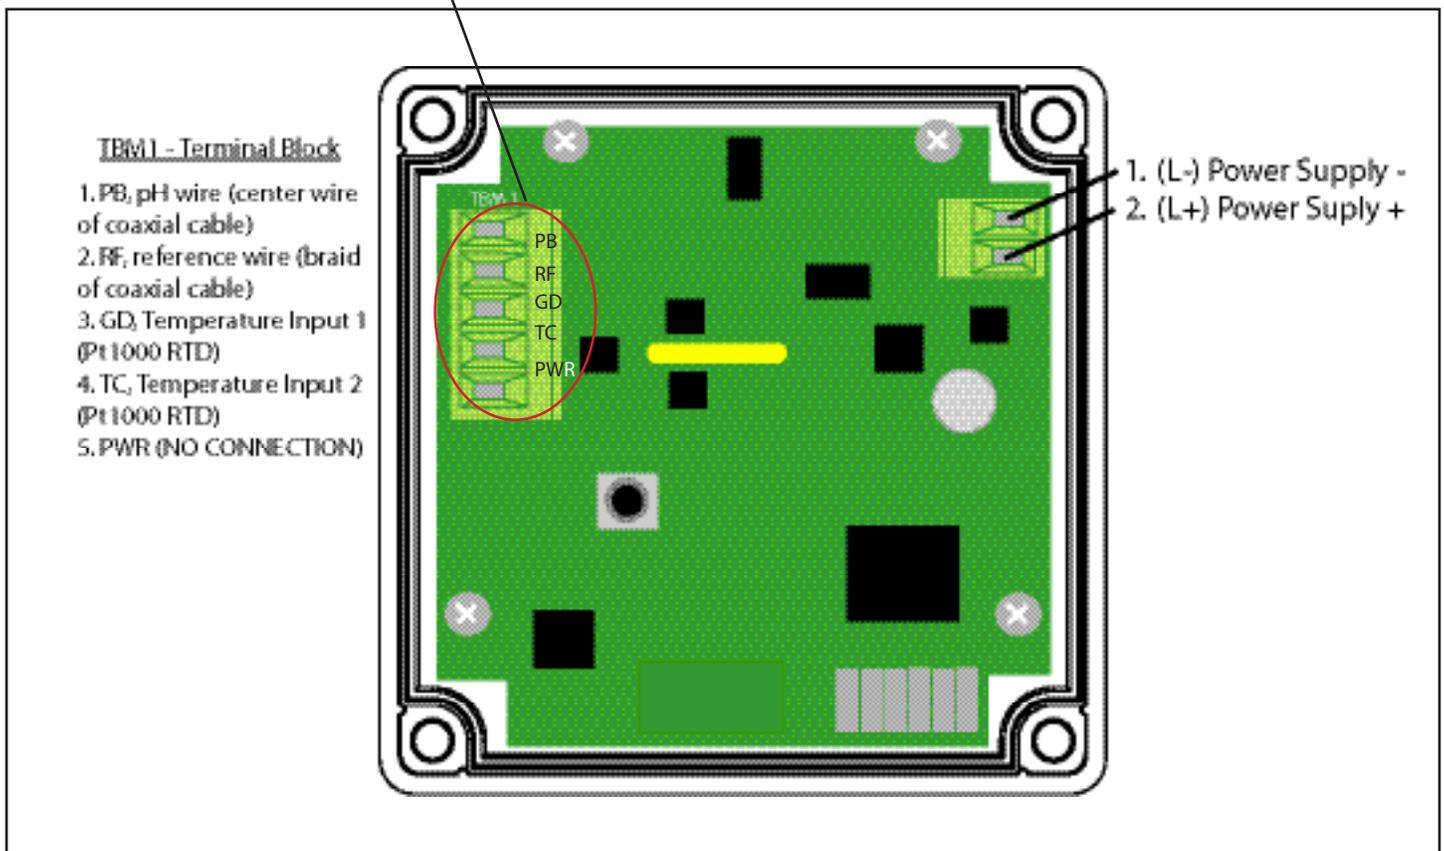


Figure 5.1

Part 6 Keypad Function and LCD

6.1 Keypad

The PHTX-100 keypad is designed for ease-of-use. See graphic below for keypad function.

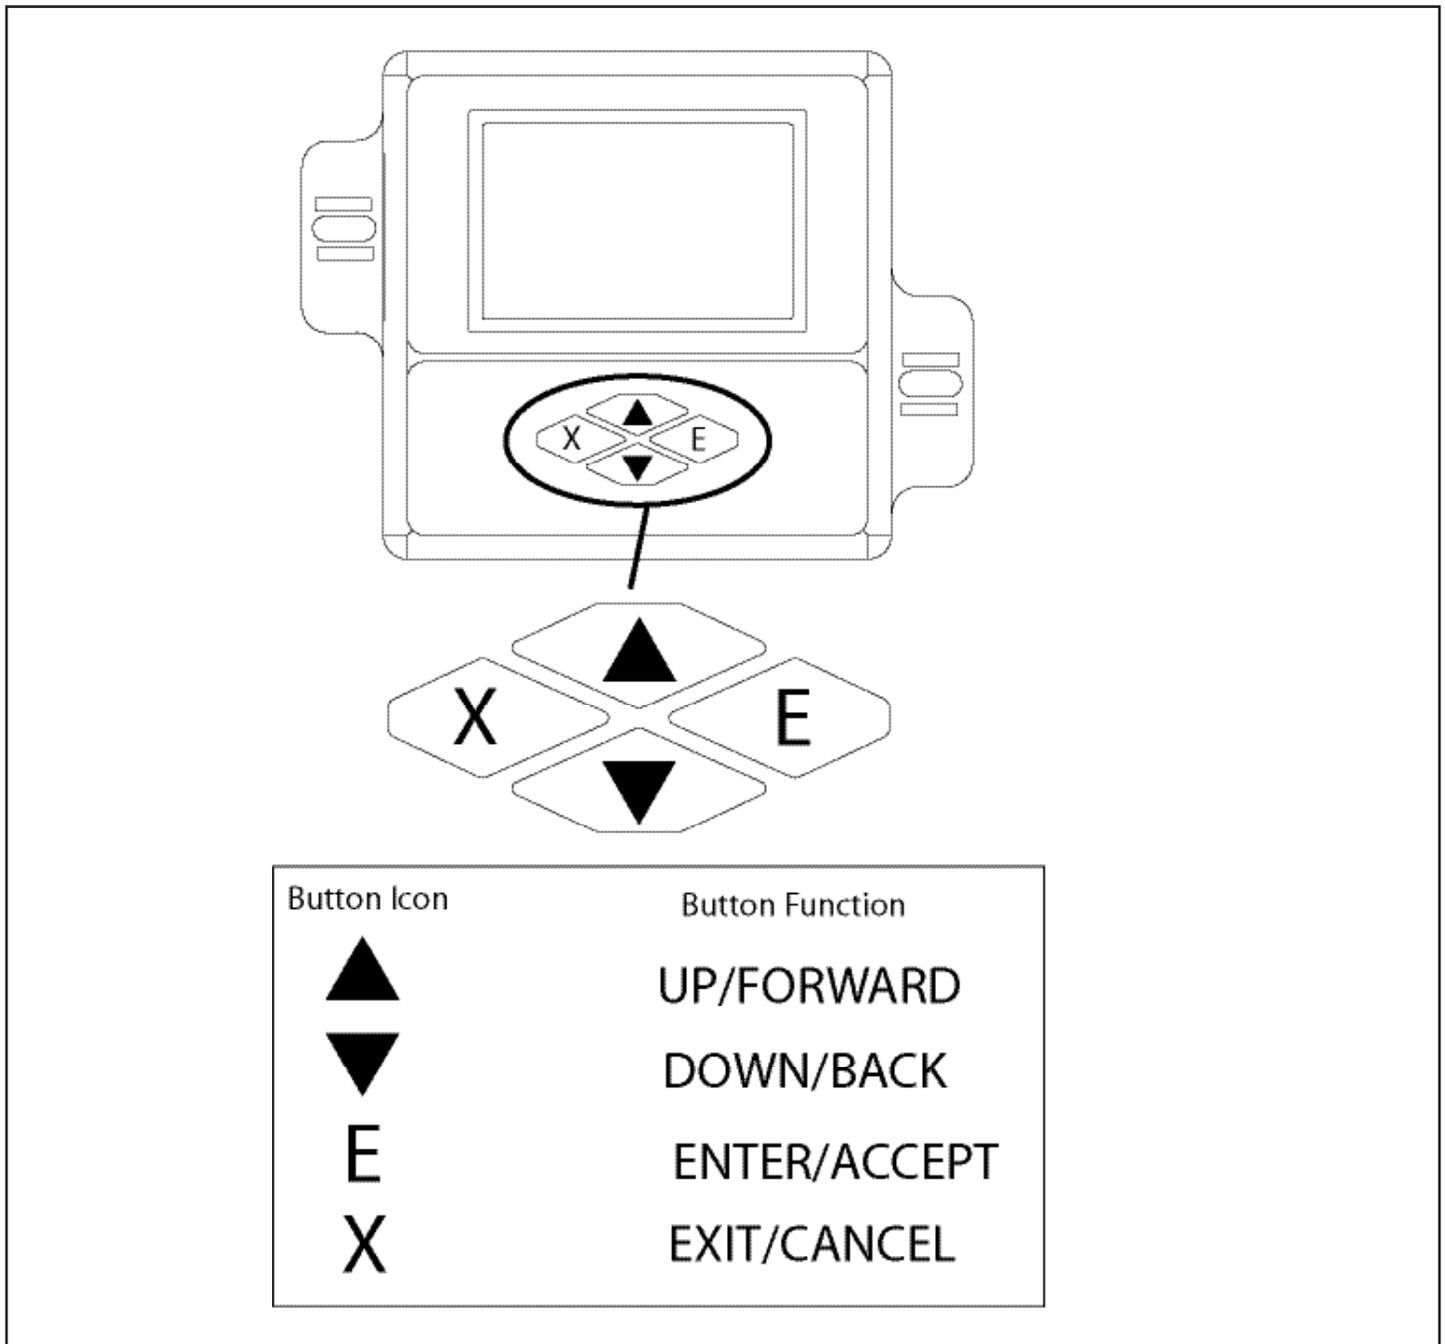


Figure 6.1

6.2 LCD Screen

The PHTX-100's LCD display contains a number of useful indicators which let the user know which mode is active. In addition, all values to be changed will flash. The silicone keypad is designed for ease-of-use. See graphic below for display features.



Figure 6.2

Part 7 Programming Menu

7.1 Menu

The PHTX-100 pH/ORP transmitter menu flow chart below shows a quick view of navigation basics. For detailed submenu programming, please refer to the appropriate menu subsection.

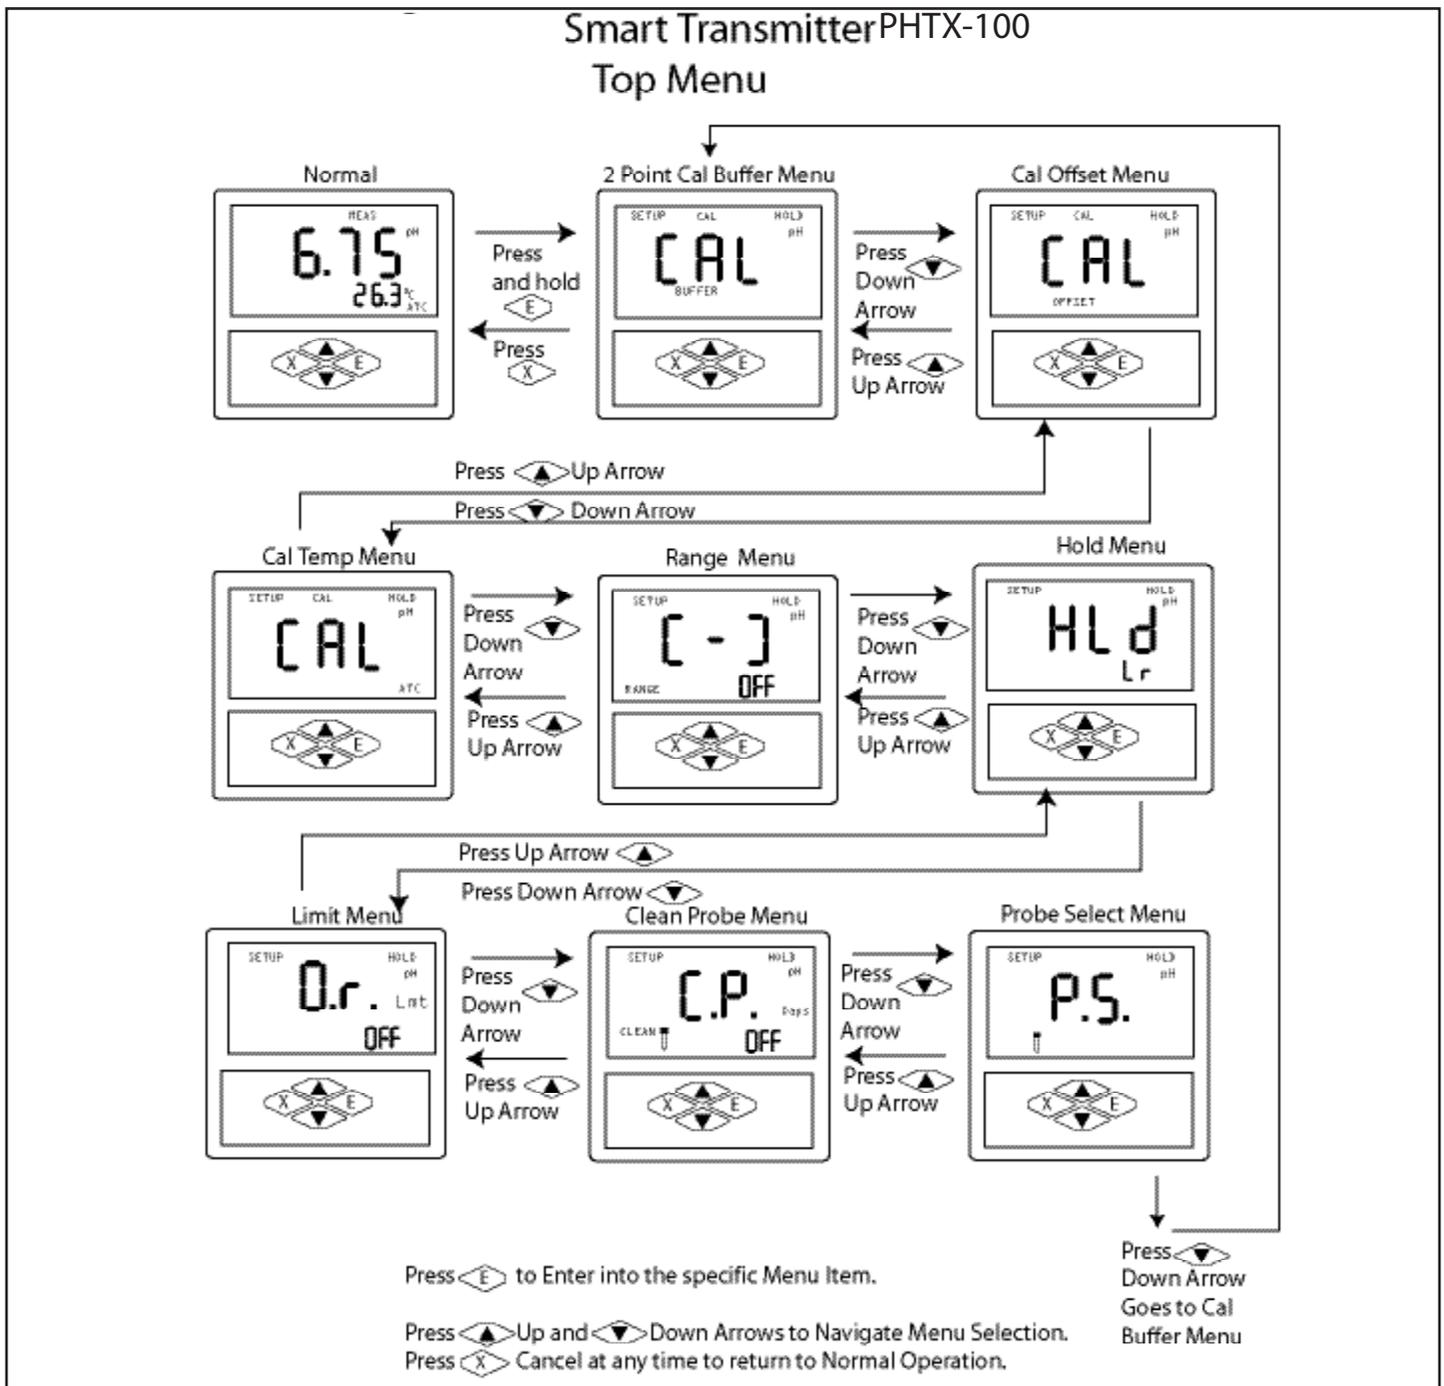


Figure 6.3

Part 8 Calibration

8.1 Getting Started

Before pH and temperature calibration is possible, some preparation is necessary. First, make sure you are in the proper measurement mode. The measurement mode is shown on the display in the upper right corner "pH" for pH and "mV" for ORP or other mV sensors.

Ensure the sensor is connected to the transmitter as shown in Part 5.1.

Always use fresh buffer solutions when calibrating. Check expiration date on buffer package.

If possible, use deionized water to rinse electrode before calibration and between buffers.

For temperature calibration, make sure the temperature sensor wires are connected as shown in FIG 5.1. If no temperature sensor is connected, the transmitter will default to read 25.0 degrees C or 77.0 degrees F.

8.2 2-Point pH Calibration

The PHTX-100 performs two-point calibrations using preprogrammed buffer choices. No mV calibration is required. See Figure 8.1 for calibration programming.

Smart Transmitter PHTX-100 2 Point Calibration Sub Menu

Description: Performs 2 point calibration on Transmitter

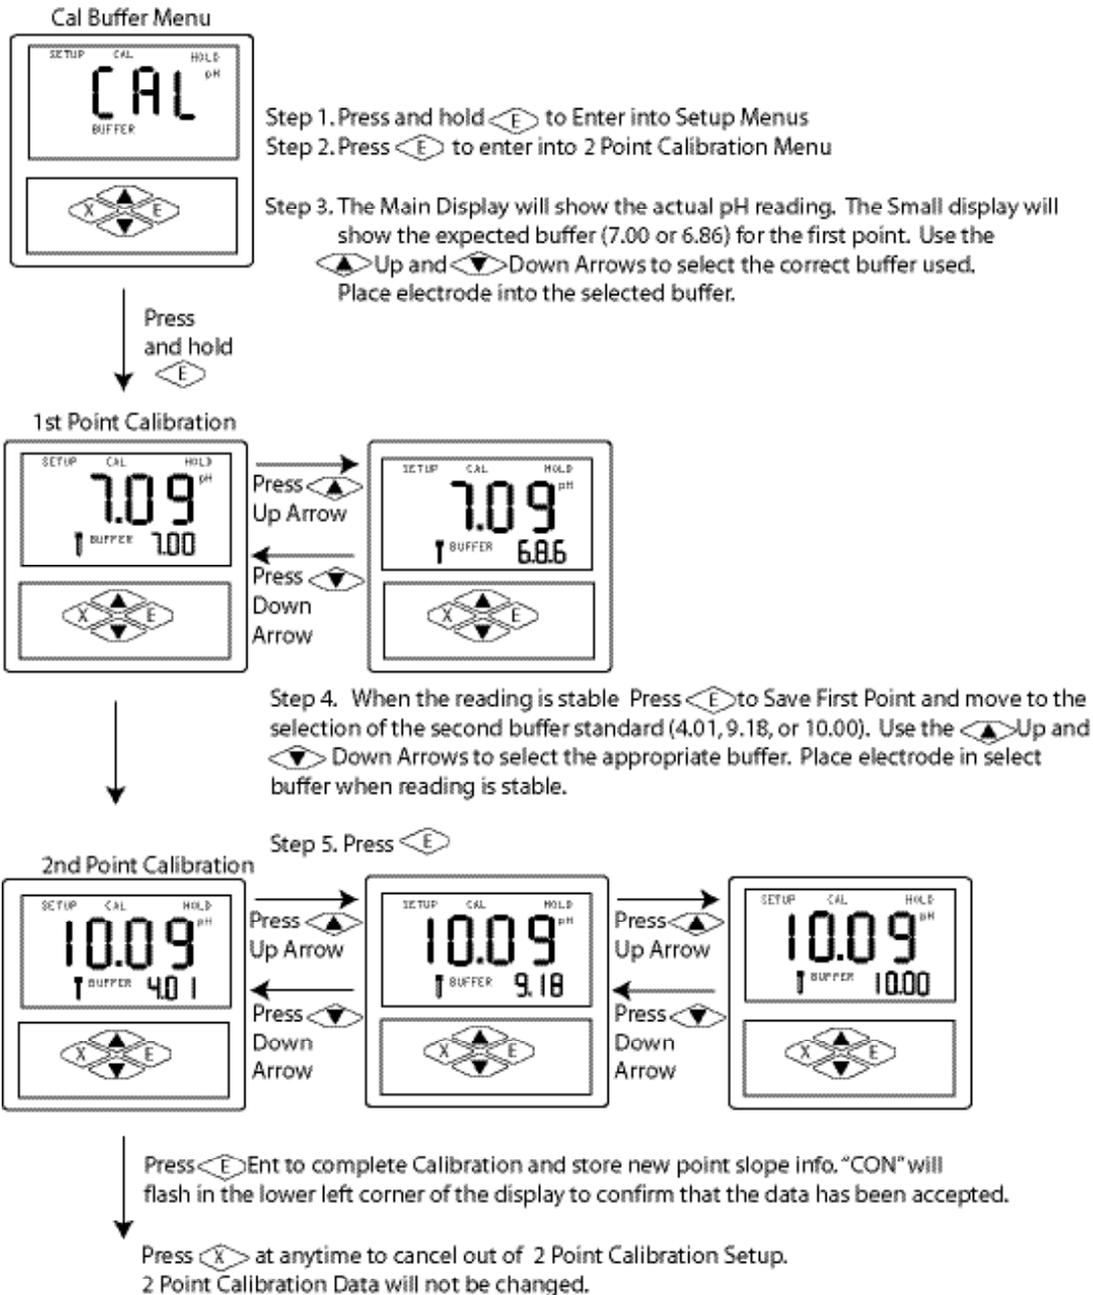


Figure 8.1

8.3 Temperature Calibration

This menu allows the user to select temperature units of measure and to calibrate the temperature displayed on the PHTX-100's screen to match another sensor or thermometer. This menu is only available in pH mode (See Probe Select menu for details)

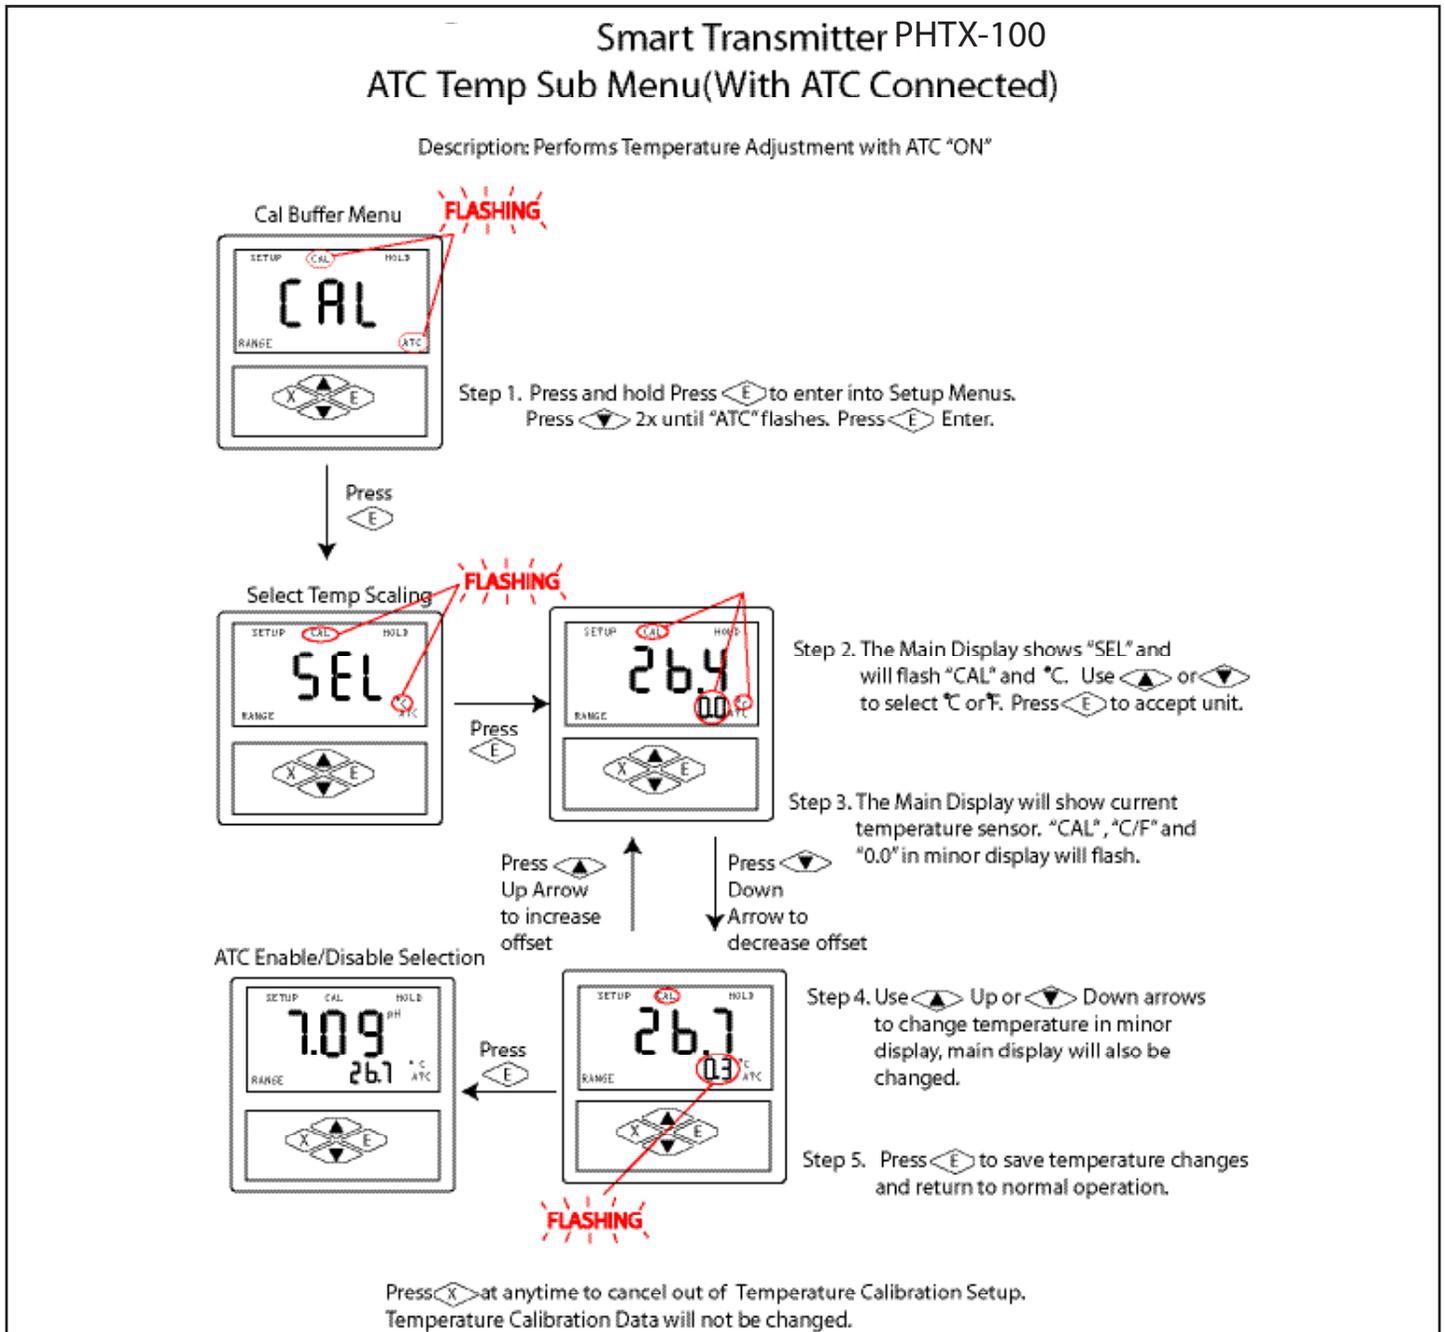


Figure 8.2

9.1 Probe Select Menu

Allows for selection of pH or ORP (mV) sensor. Menu is preset to "pH" from factory.

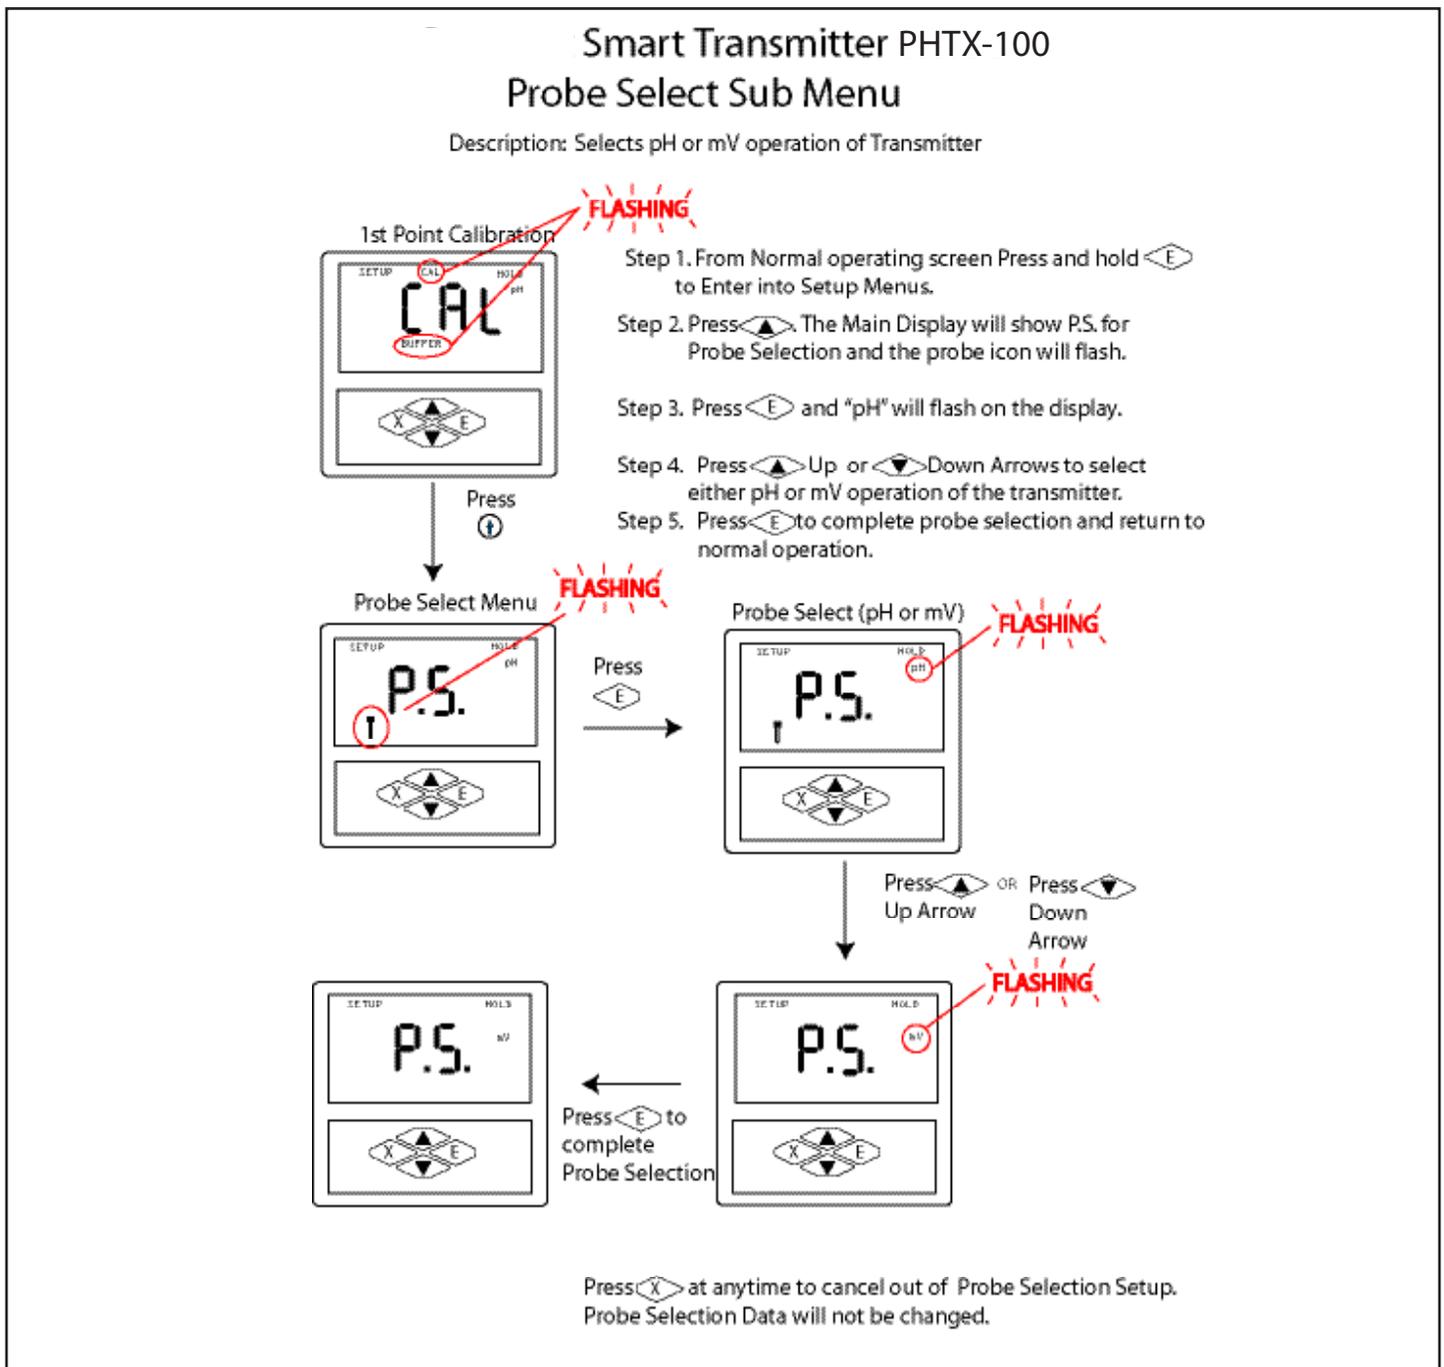


Figure 9.1

9.2 Calibration Offset

This mode allows the user to offset the current calibration by up to 2.00 pH units to make it equal to the calibration/reading of another meter.

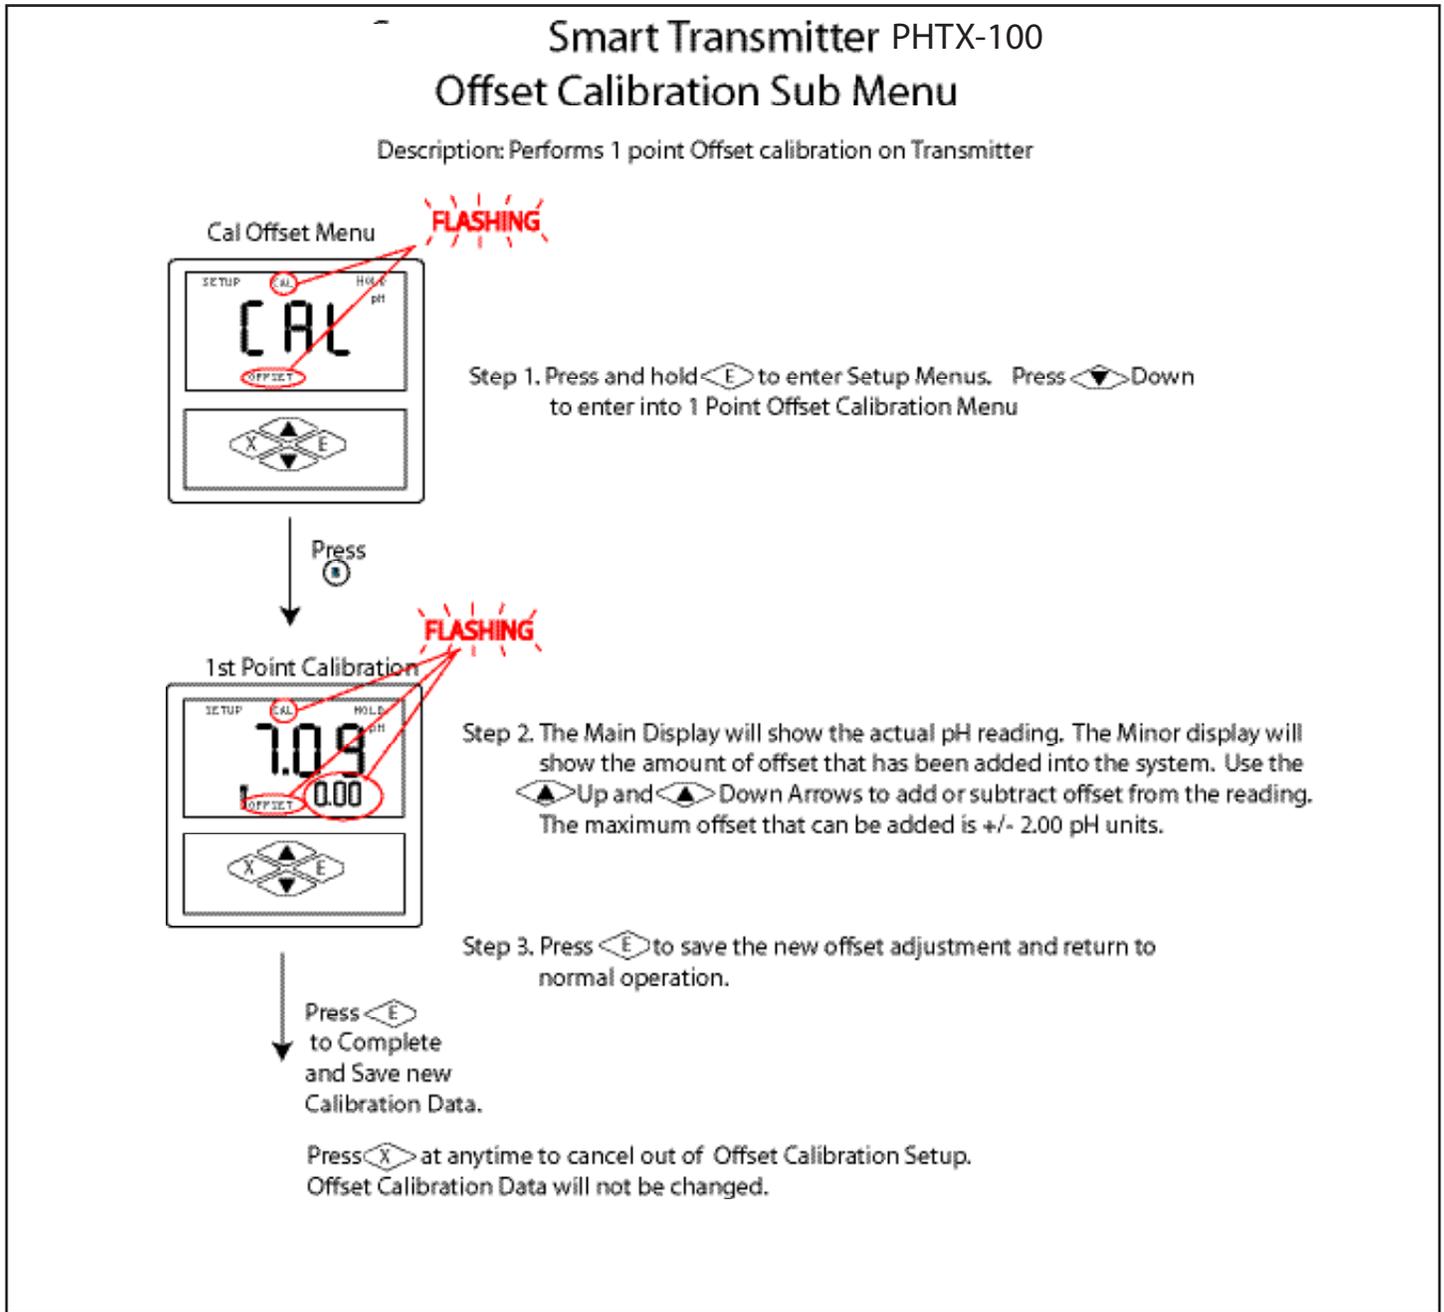


Figure 9.2

9.3 Range Menu

This calibration mode allows the user to define the pH values equal to 4.0 and 20.0mA. The factory preset Values are 0.0 pH for 4.0mA and 14.0pH for 20mA.

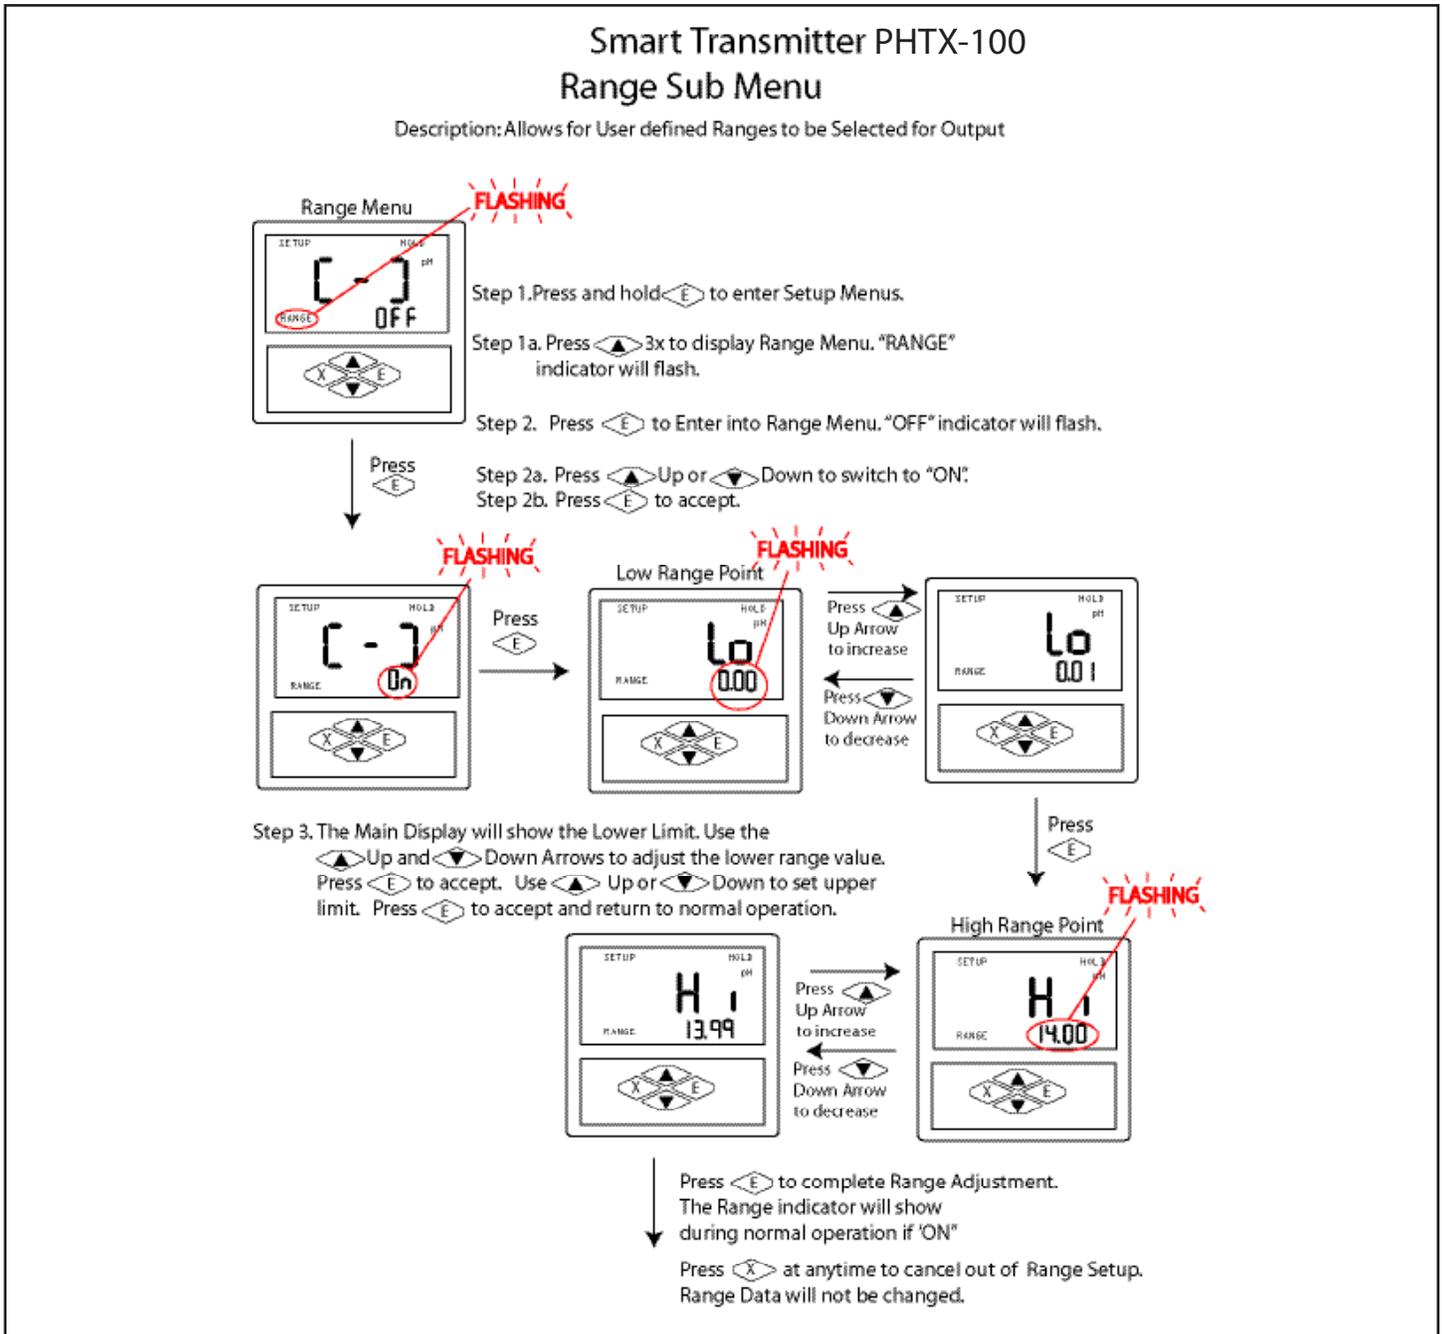


Figure 9.3

9.4 Limit Menu

This calibration mode allows the user to turn off or on the current output limit.

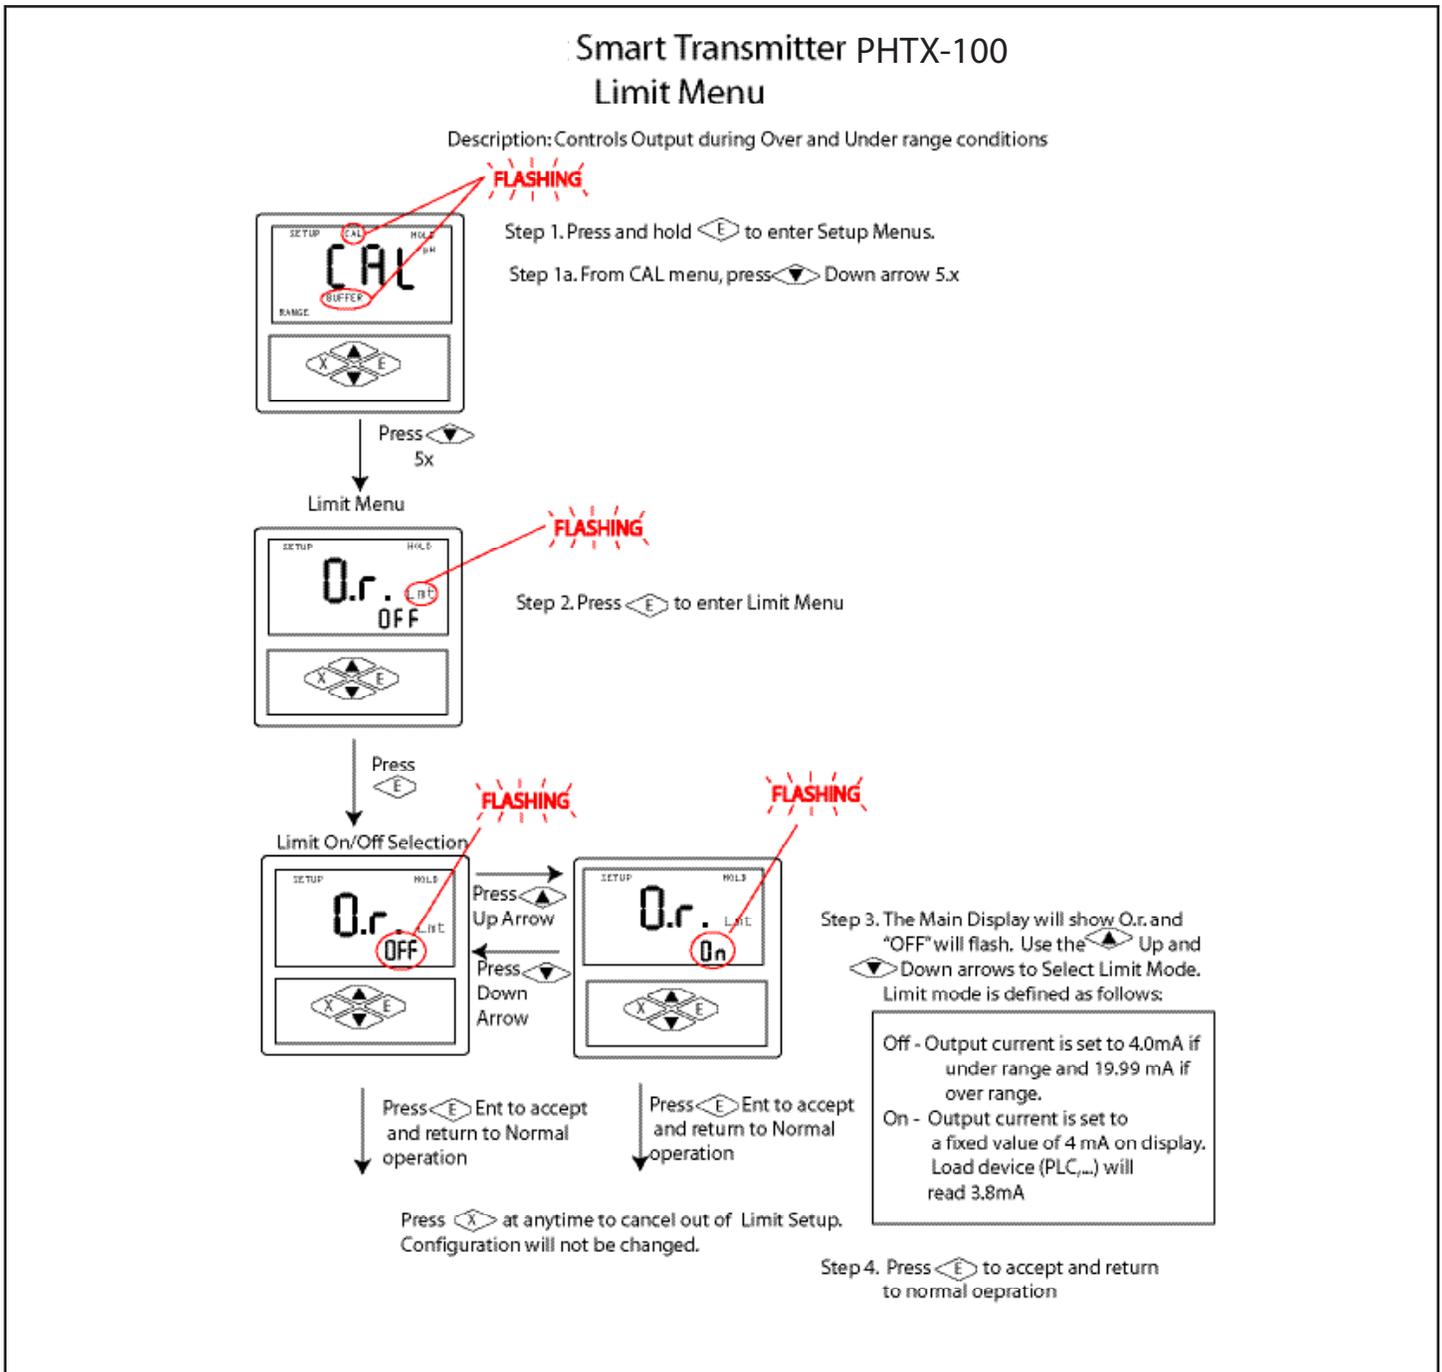


Figure 9.4

9.5 Hold Menu

Controls output during transmitter setup.

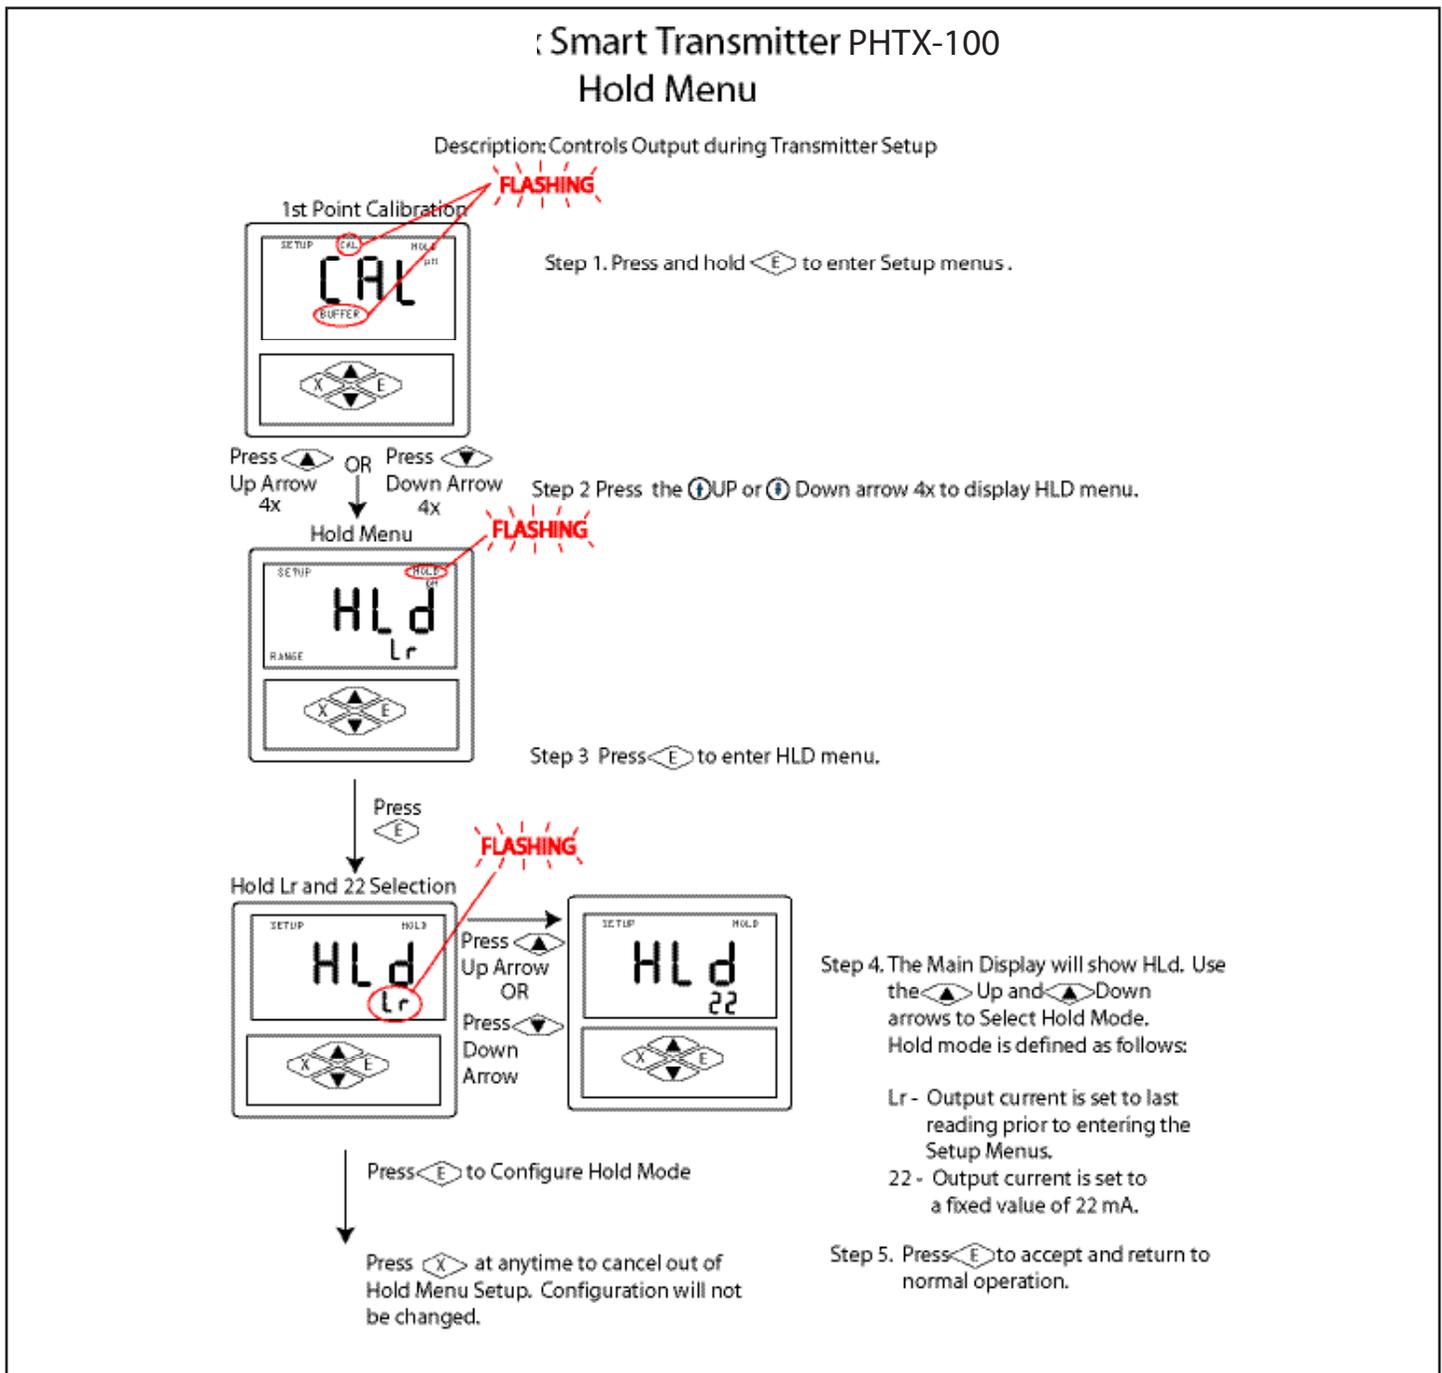


Figure 9.5

9.6 Clean Probe Menu

This menu allows the user to set a visual reminder to clean the probe. The reminder can be set to within 1-250 days. Once the timer has expired the clean probe icon will flash on the screen. Flashing probe icon is disabled by setting clean probe menu OFF.

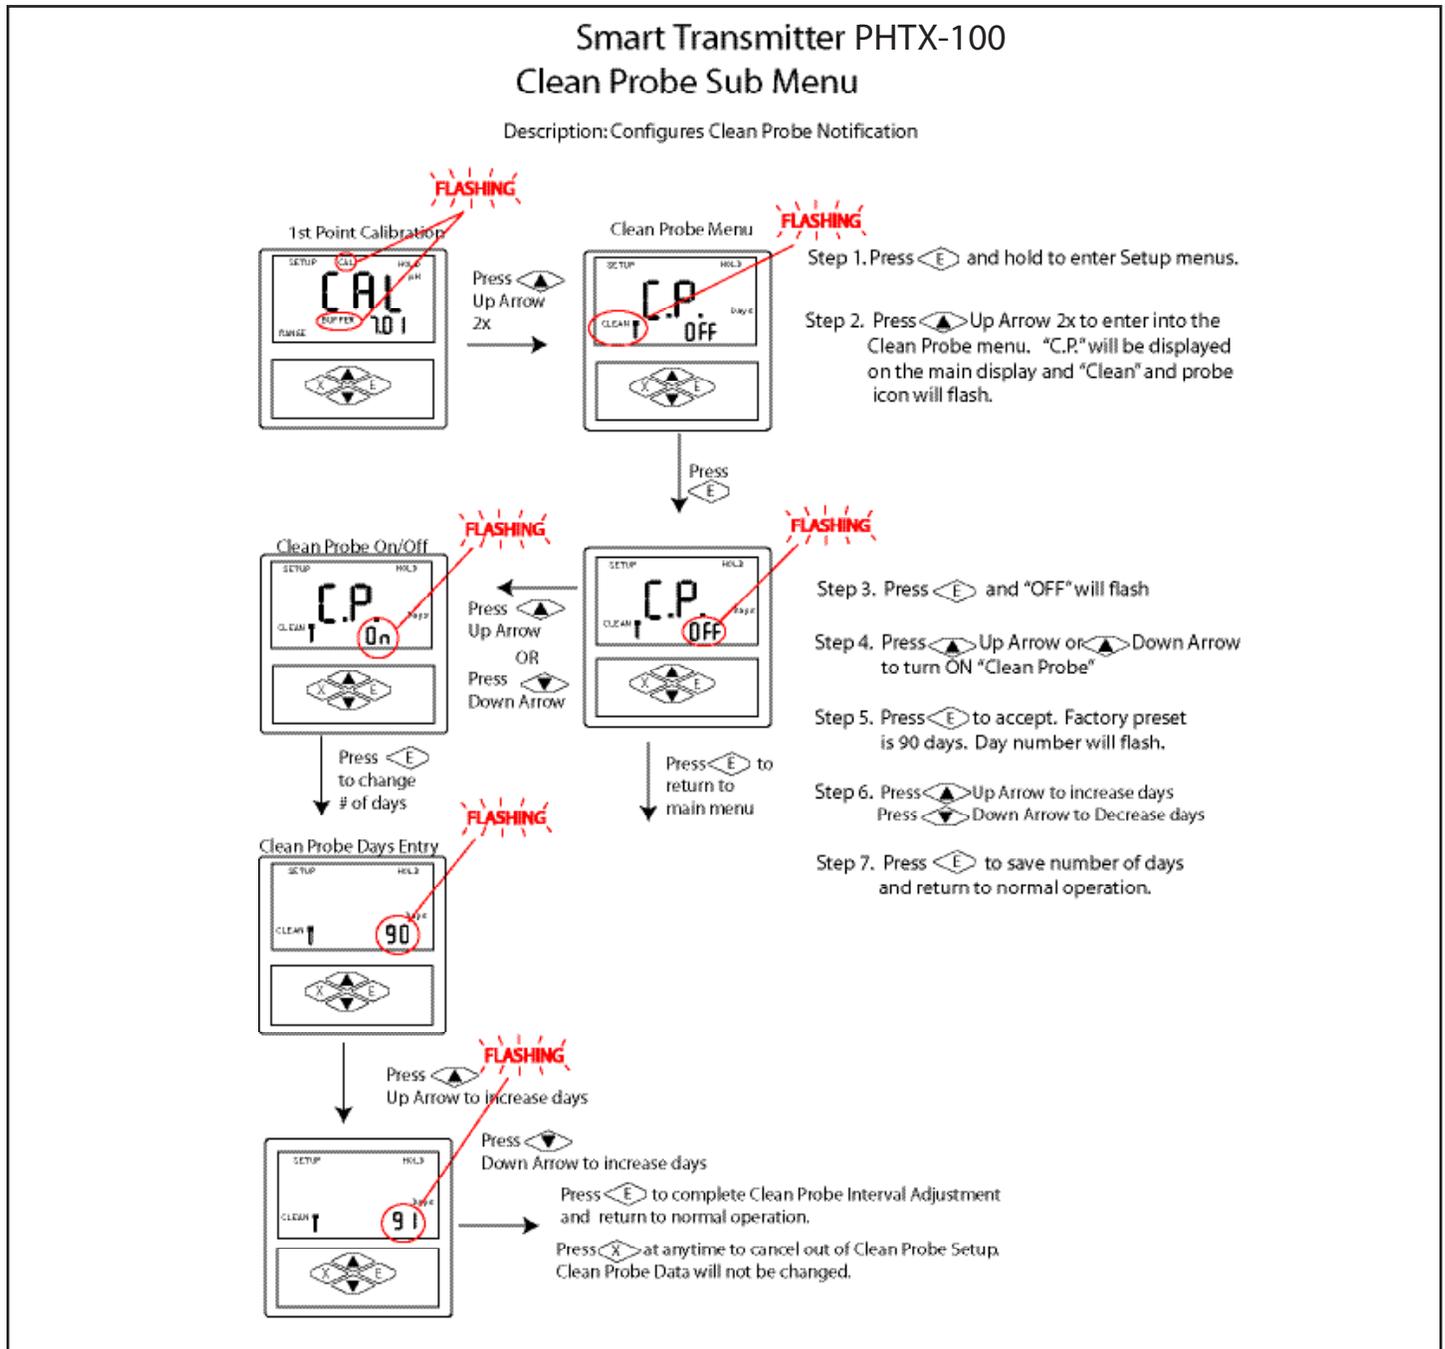


Figure 9.6

9.7 Factory Reset Menu

This menu allows the user to reset all programmed settings back to the factory defaults.

Factory Reset Values	
<p>pH Slope and Offset values reset to Ideal mV Slope and Offset values reset to Factory Calibrated Values pH Manual Offset reset to 0 mV Manual Offset reset to 0 Temperature Manual Offset reset to 0 Without TC, Default 25oC or 77oF</p>	<p>Range Mode [-] OFF Range Mode Lo mV reset to -999 mV Range Mode Hi mV reset to 999 mV Range Mode Lo pH reset to 0.00 Range Mode Hi pH reset to 13.99 Hold Mode HLd Lr Limit Mode O.r. OFF Clean Probe Timer C.P. OFF</p>

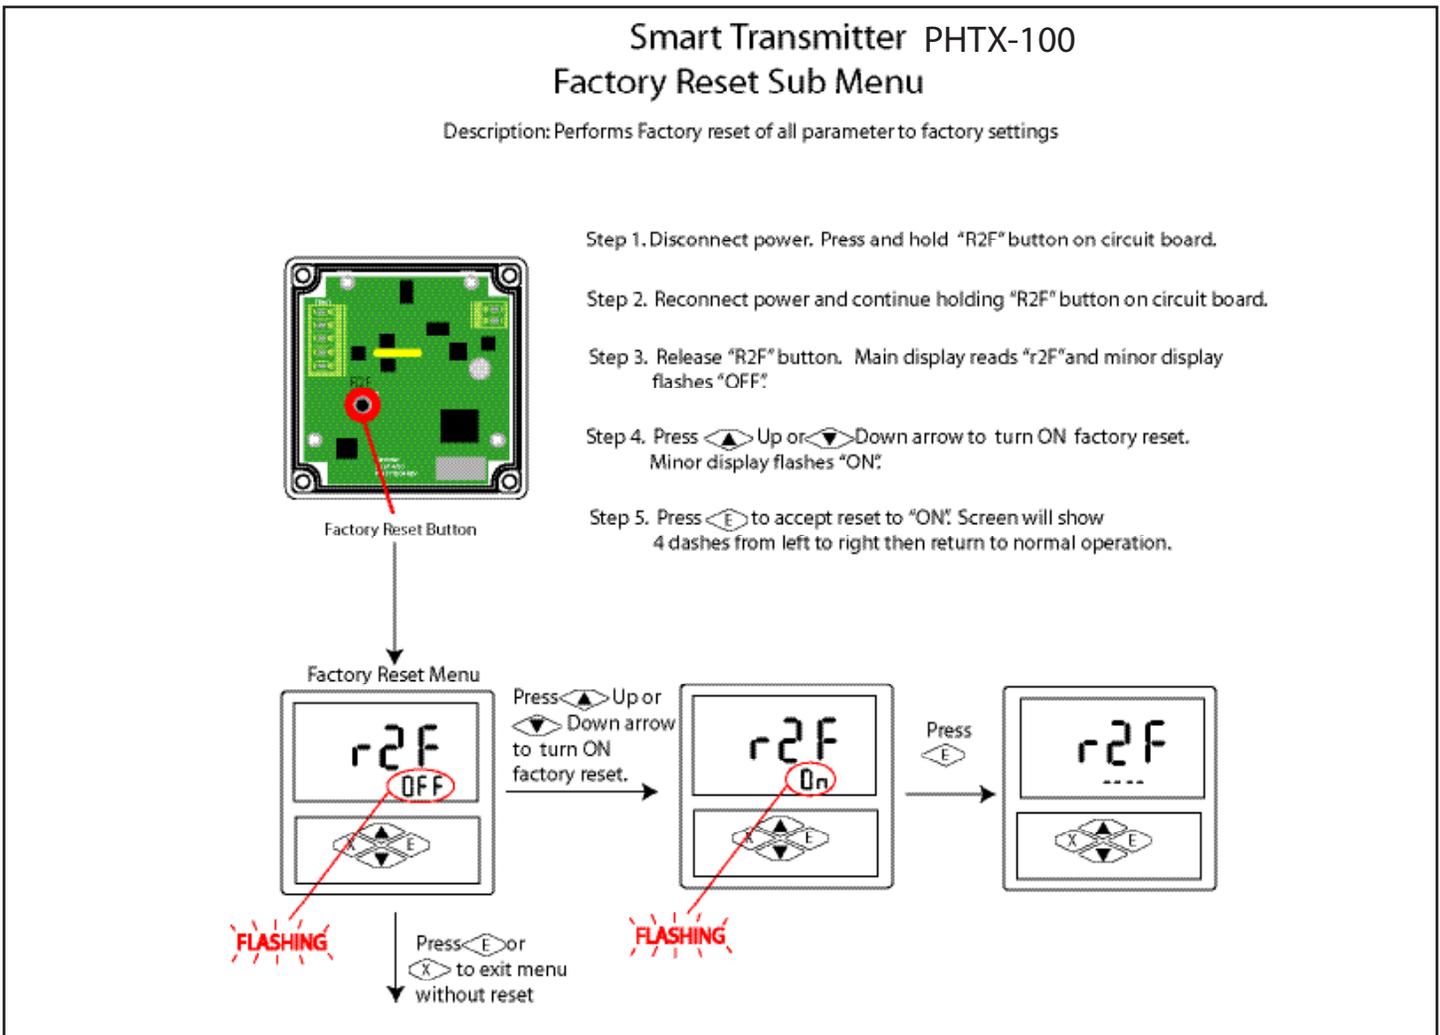


Figure 9.7

9.8 Manual Temperature Compensation

This menu allows the user to set the temperature displayed on the screen (when a temperature sensor is not attached) for temperature compensation.

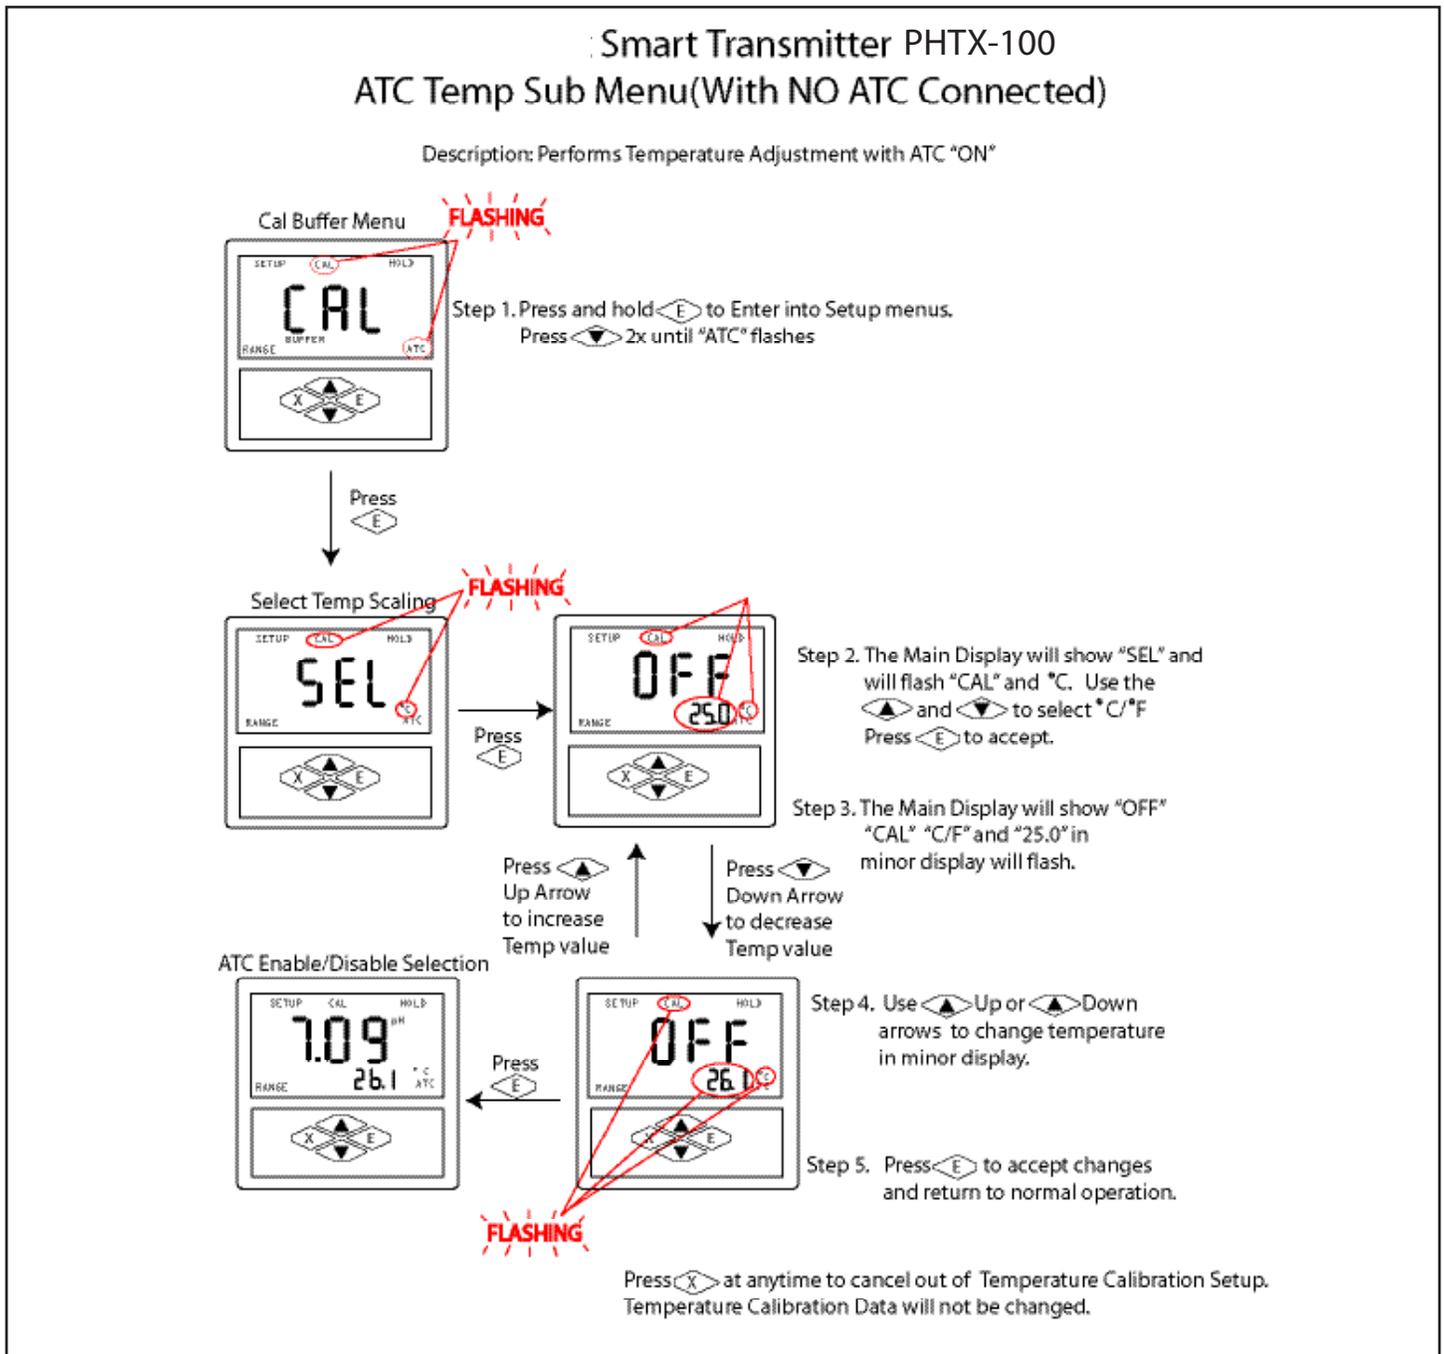


Figure 9.8

9.9 Temperature Unit Menu

This menu permits selection of either deg C or deg F.

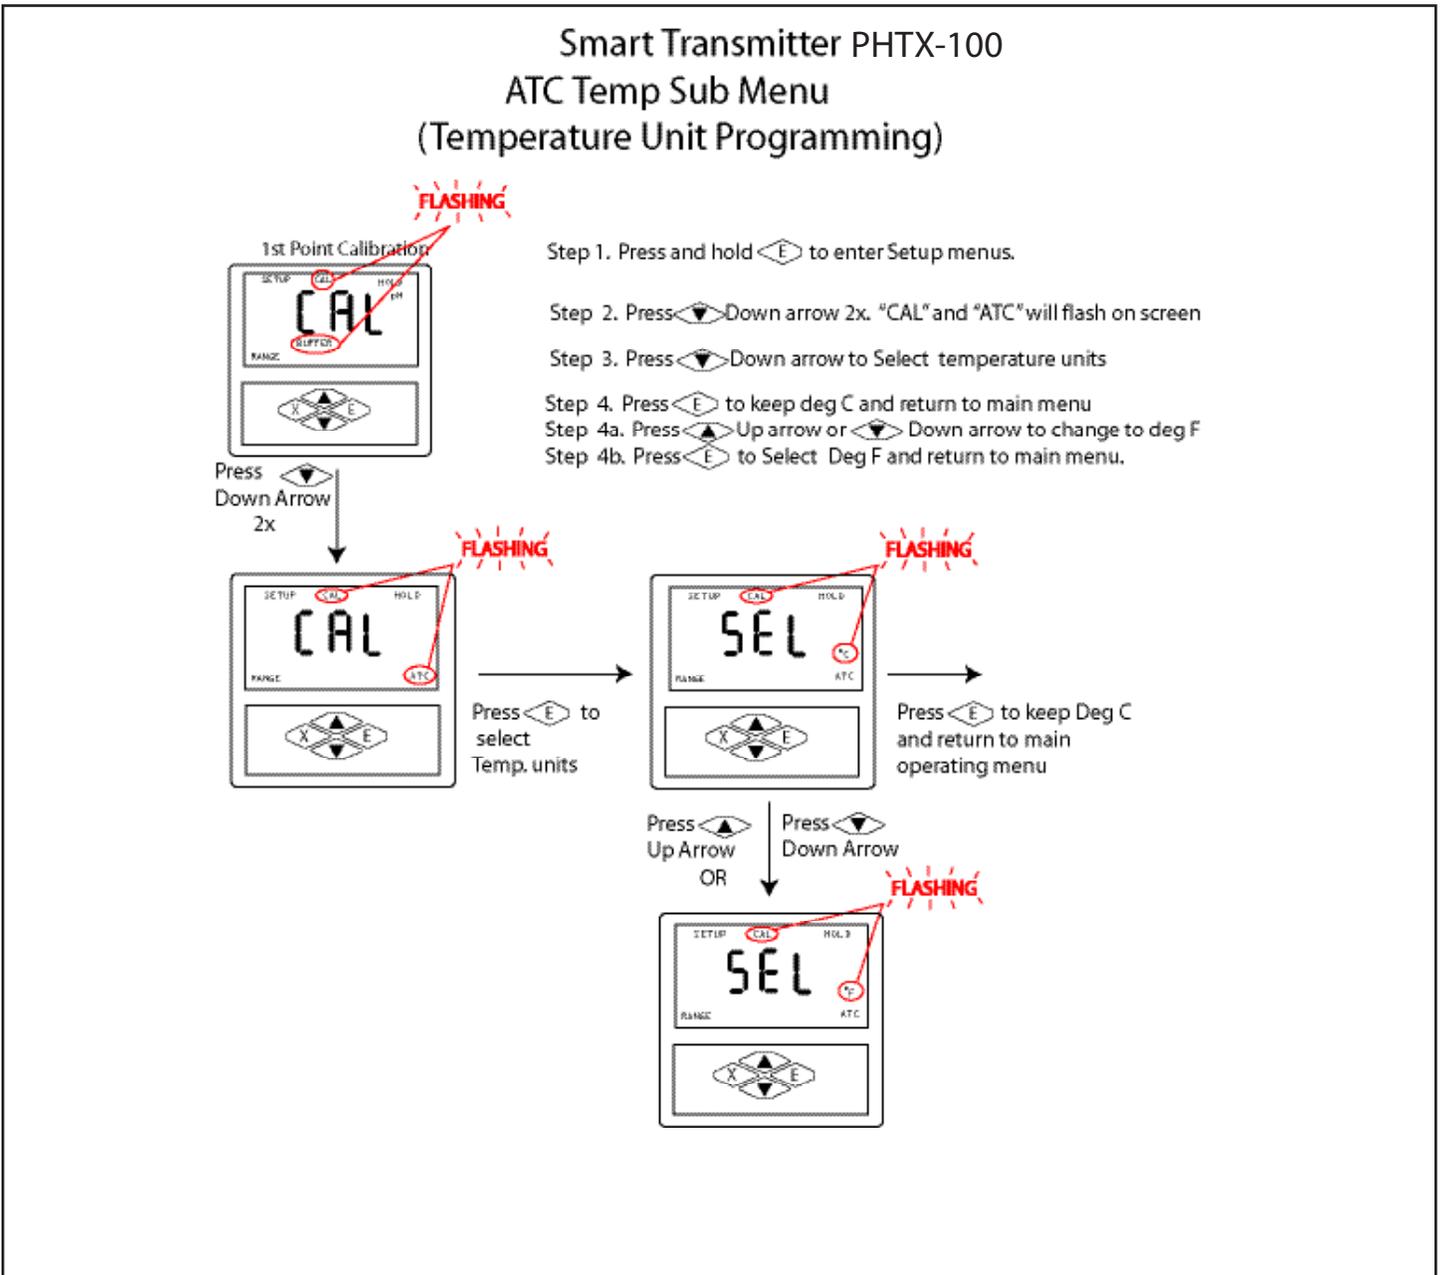


Figure 9.9

Part 10 Troubleshooting

10.1 General

The information included in this section is intended to be used to quickly resolve an operational problem with the system. During any troubleshooting process, it will save time if the operator can first determine if the problem is related to the transmitter, electrode, or some external source. Therefore, this section is organized from the approach of excluding any likely external sources, isolating the transmitter, and finally isolating the electrode. If these procedures still do not resolve the operational problems, any results noted here will be very helpful when discussing the problem with the factory technical support group.

10.2 Troubleshooting Guidelines

To begin this process, review the connections of the system to all external connections:

1. Verify the proper power input is present (12-24V DC, 8 amp maximum). Ensure the loads on the 4-20 mA outputs do not exceed the limit (See Section 4.2) .
2. Do not run sensor cables or analog output wiring in the same conduits as power wiring. If low voltage signal cables must come near power wiring, cross them at 90° to minimize coupling.
3. Check for possible ground loops. High frequency sources of electrical noise may still cause erratic behavior in extreme conditions. If readings are very erratic after wiring has been checked, check for a possible AC ground loop by temporarily moving the sensor to a sample of solution in a beaker or other container.

10.3 Troubleshooting Chart PHTX-100

Symptom/Problem	Possible Cause(s)	Solution
Display Not Working	<ol style="list-style-type: none"> 1) Power not connected 2) Power connections loose 3) Power connections reversed (reverse polarity) 	<ol style="list-style-type: none"> 1) Connect Power (see Section 4.2) 2) Tighten connections. Press removeable power terminal block tightly into receptacle. 3) Reconnect power supply in correct polarity (see Section 4.2)
"Buffer Err" displayed	<ol style="list-style-type: none"> 1) Wrong buffer used 2) Buffer value is more than 1.5 pH units away from calibration buffer value. 3) Input voltage (mV mode) is out of +/- 2000mV range 	<ol style="list-style-type: none"> 1) Make sure to calibrate in order, 7.00 or 6.86 first, then the 2nd buffer next (4.01 or 9.18 or 10.00). 2) Check to make sure correct buffer is used. If correct, electrode may be defective. Refer to electrode instructions for assistance. 3) Possible electrode problem. Replace electrode and check again. Return transmitter to Factory Settings. Refer to Section 9.7.
"--" displayed	Various	Return transmitter to Factory Settings (RTF) Refer to Section 9.7

Part 11 Maintenance

11.1 Overview

The PHTX-100 pH/mV transmitter needs little routine maintenance. The calibration of the transmitter should be checked periodically. To recalibrate the PHTX-100 and electrode, see Part 8.

11.2 Replacement Parts

Replacement parts for the PHTX-100 are available as a kit. This is the same kit that is in the PHTX-100 box. For individual parts, please contact the factory.

11.2.1 Wall Mount Parts

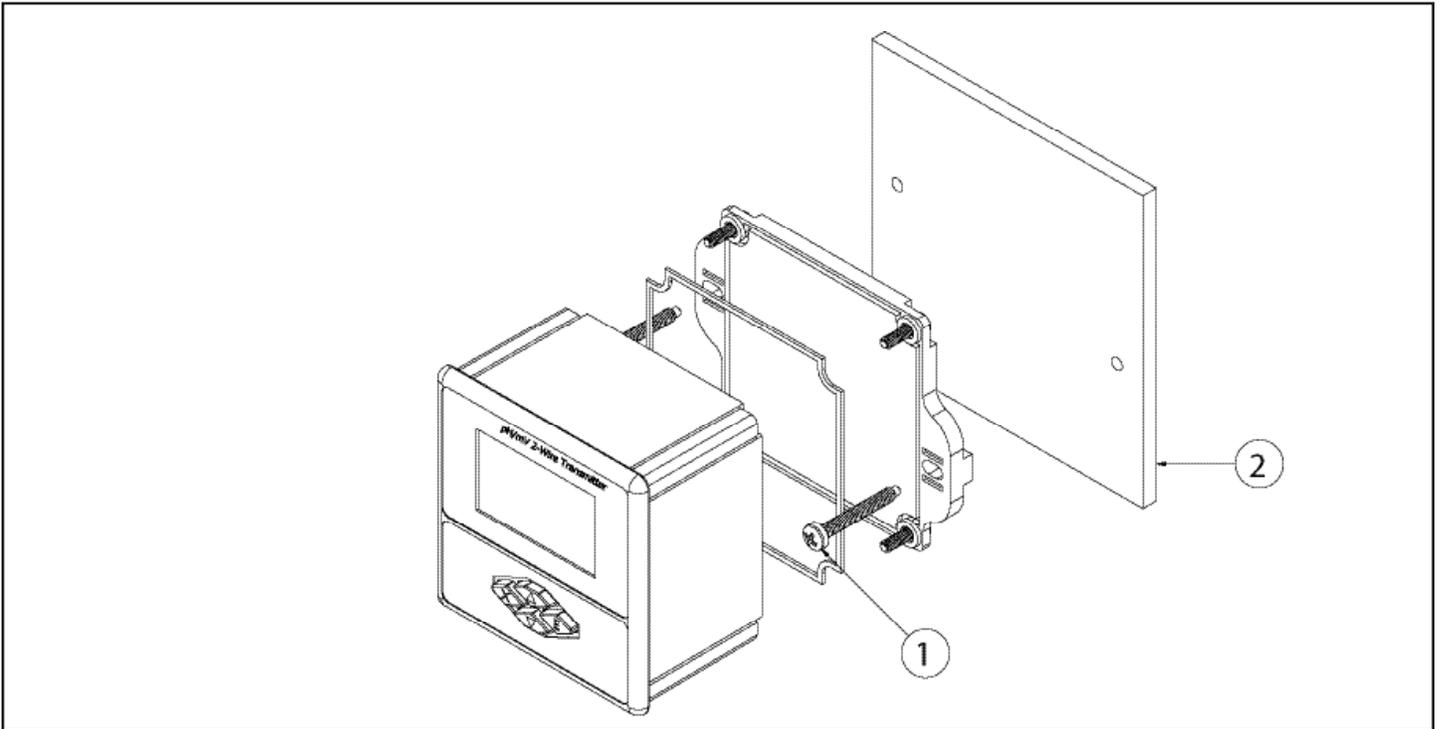


Figure 11.1

WALL MOUNT PARTS

Location in Fig 11.1	Qty in kit	Part Number	Description
1	0		No. 10 Self-tapping screw, 2 inches(customer supplied)
2	0		Wall (customer supplied)

11.2.2 Panel Mount Parts

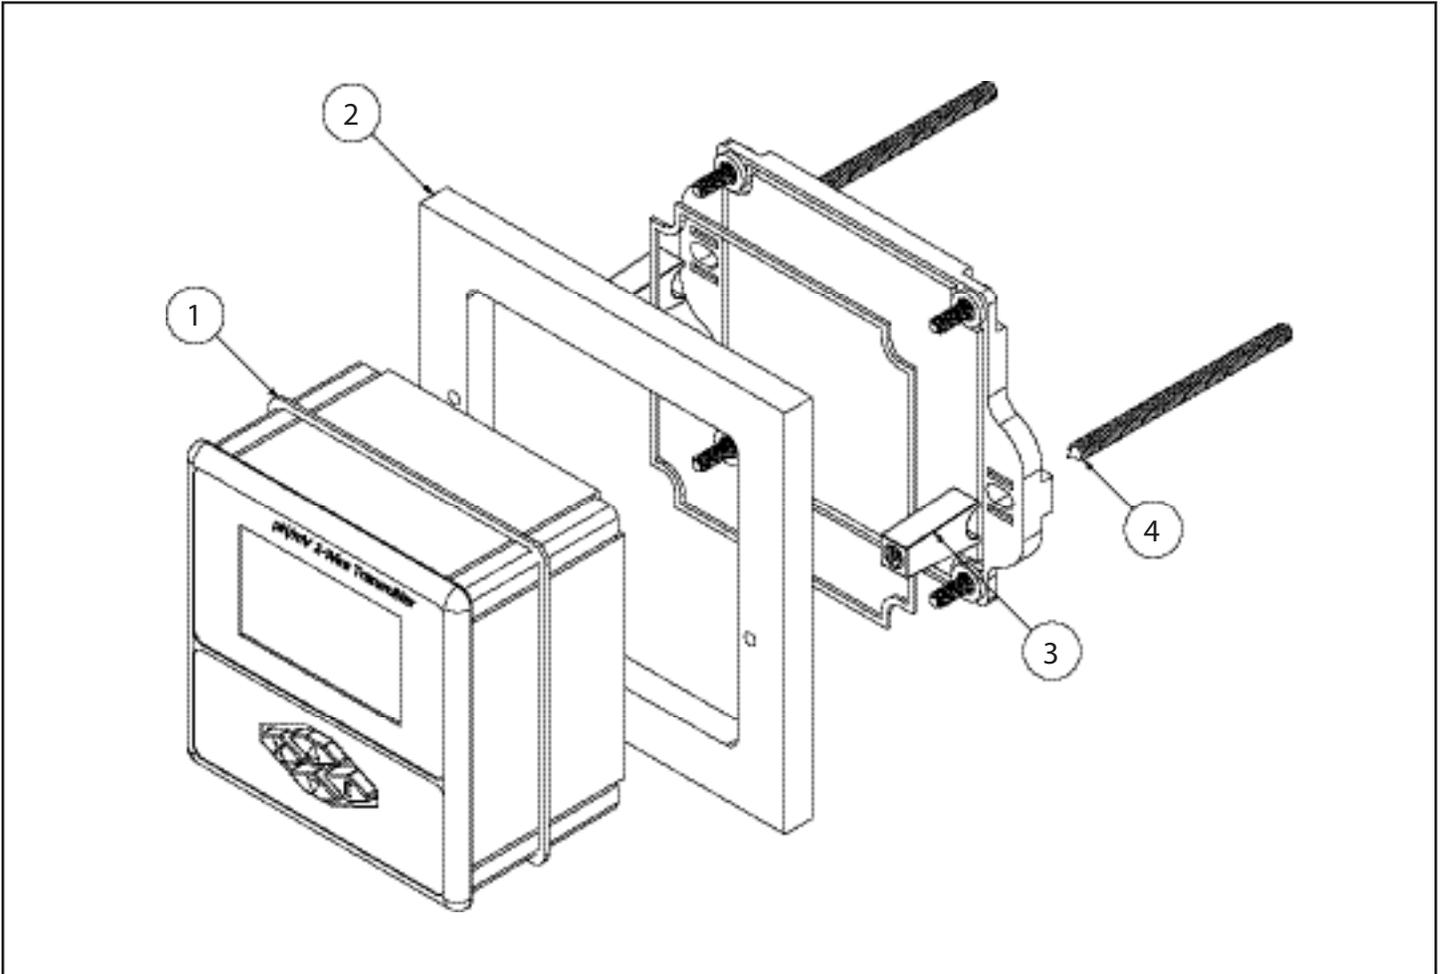


Figure 11.2

PANEL MOUNT PARTS

Location in Fig 11.1	Qty in kit	Part Number	Description
1	1	171121	gasket, panel seal
2	0	N/A	panel cut out (customer supplied)
3	2	171094	Panel mount bracket, plastic blue
4	2	271064	Threaded rod for panel mount

11.2.3 DIN Rail Mount Parts

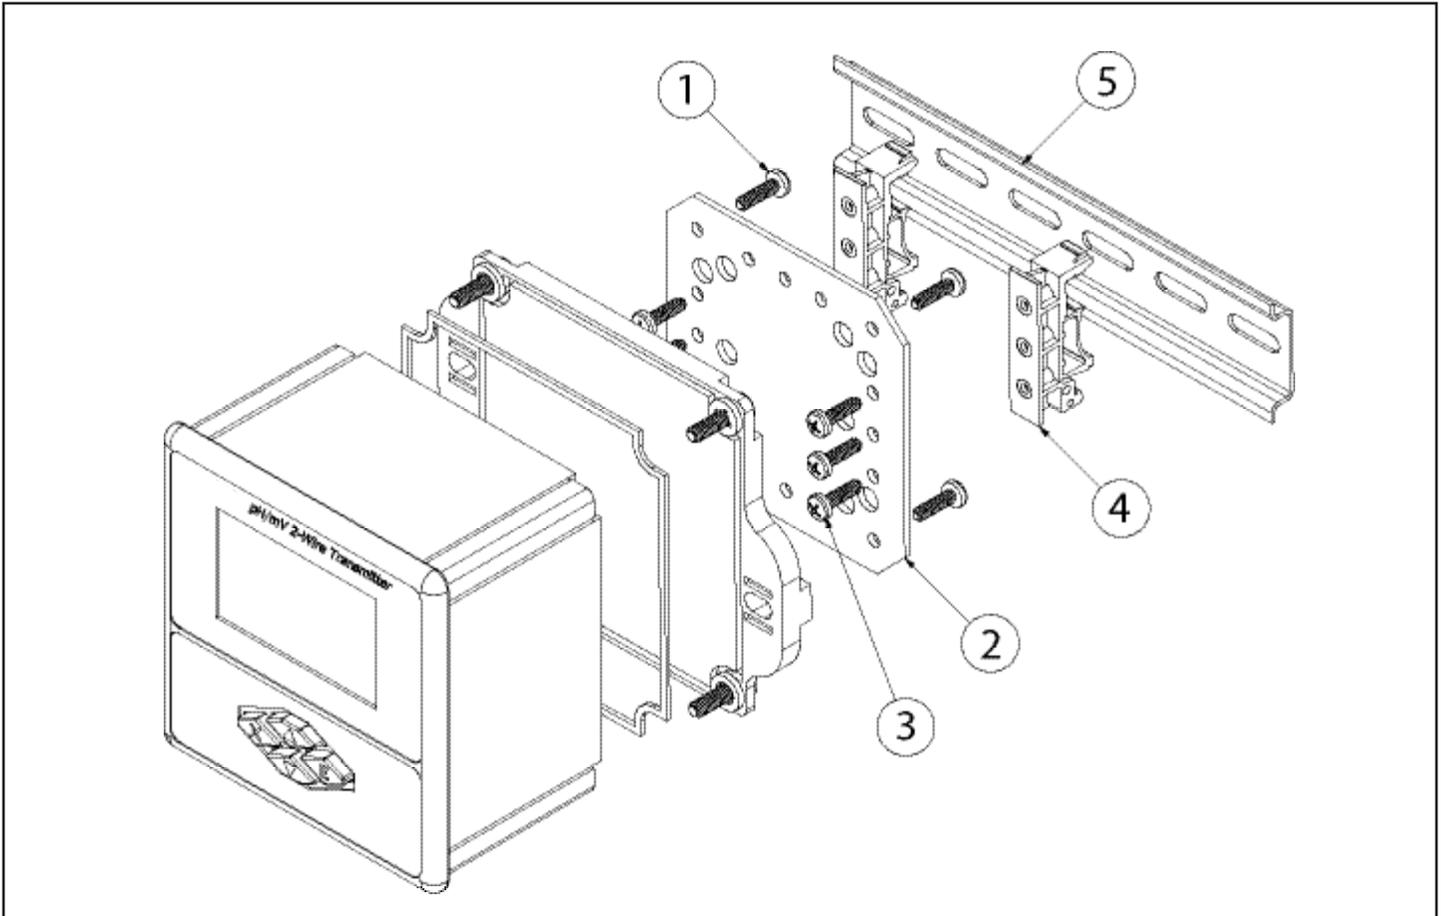


Figure 11.3

DIN Rail MOUNT PARTS

Location in Fig 11.1	Qty in kit	Part Number	Description
1	4	271067	Screws for mounting plate
2	1	171090	Mounting plate
3	6	271067	Screws for DIN rail clamp mounting
4	2	271073	DIN-rail clamp
5	0	N/A	DIN-rail (customer supplied)

11.2.4 Pipe Mount Parts

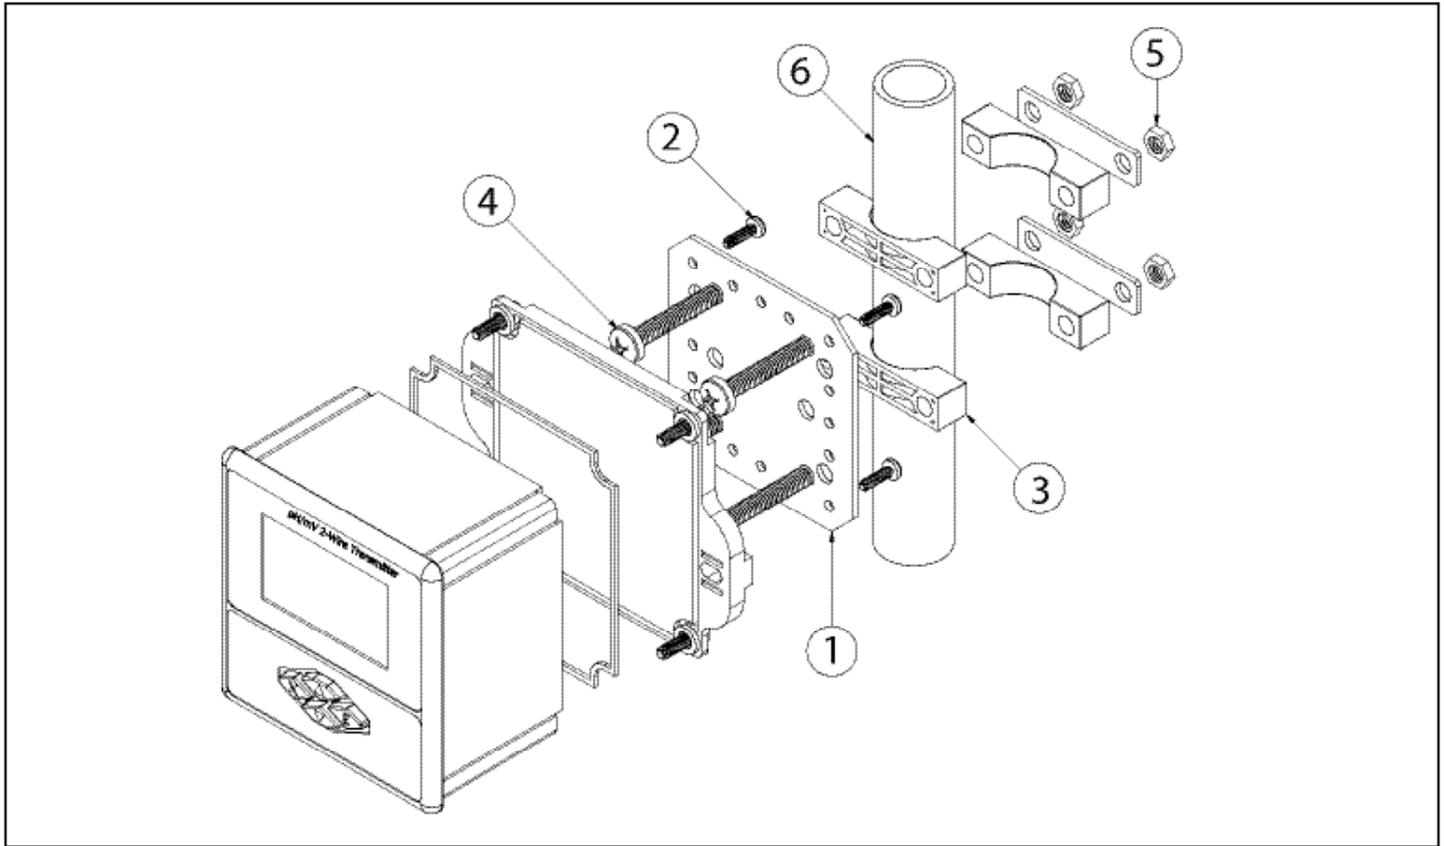


Figure 11.4

PIPE MOUNT PARTS

Location in Fig 11.1	Qty in kit	Part Number	Description
1	1	171090	Mounting plate
2	4	271067	Screws for mounting plate
3	4	171095	3/4" Pipe mount brackets, blue plastic
4	4	271068	Philips head bolt for mounting brackets
5	4	271071	Nut for mounting bracket bolt
6	0	N/A	3/4" pipe (customer supplied)
7	2	171091	3/4" pipe mounting plate/backing

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2015 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

Shop online at



TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments

M-5545/1015