

- Data-hold function for holding measuring values.
- Unit and sign display for easy reading.
- Automatic zeroing.
- Meter corrected for spectral relative efficiency.
- Correction factor need not be manually calculated for non-standard light sources.
- Short rise and fall times.
- Capable of selecting measuring mode in lux or fc scale, alternatively.
- Maximum and minimum measurements.

### III SPECIFICATIONS

- **Display** : 3-1/2 digit LCD.
- **Measuring Range** : 20.00 lux, 200.0 lux, 2000 lux, 20.00 Klux / 20.00 fc, 200.0 fc, 2000 fc, 20.00 Kfc.  
Note : 1fc = 10.76 lux , 1Klux = 1000 lux , 1Kfc = 1000fc
- **Overrange Display** : LCD will show "OL" symbol.
- **Spectral Response** : CIE Photopic. (CIE human eye response curve).
- **Spectral Accuracy** : CIE  $V_{\lambda}$  function  $f'_{\lambda} \leq 6\%$
- **Cosine Response** :  $f'_{\lambda} \leq 2\%$
- **Accuracy** :  $\pm 3\%$  rdg  $\pm 0.5\%$  f.s. ( $\pm 4\%$  rdg  $\pm 10$  dgts as  $> 10,000$  lux/fc range) .  
(calibrated to standard incandescent lamp at color temperature 2856 K) .
- **Repeatability** :  $\pm 2\%$  .
- **Temperature Characteristics** :  $\pm 0.1\%/^{\circ}\text{C}$  .
- **Sampling Rate** : 2.5 times/sec.
- **Photo Detector** : One silicon photo diode and spectral response filter.
- **Operating Temperature & Humidity** :  $0^{\circ}\text{C}$  to  $40^{\circ}\text{C}$  ( $32^{\circ}\text{F}$  to  $104^{\circ}\text{F}$ ) & 0% to 80% RH.

I . INSTRUCTION.....	1
II . FEATURES .....	1
III . SPECIFICATIONS.....	2
IV . NAME OF PARTS AND POSITIONS.....	3
V . OPERATING INSTRUCTIONS.....	4
VI . BATTERY CHECK-UP & REPLACEMENT.....	5
VII . SPECTRAL SENSITIVITY CHARACTERISTIC.....	5
VIII . MAINTENANCE.....	6
IX . RECOMMENDED ILLUMINATION.....	6

### I INSTRUCTION


- The digital illuminance meter is a precision instrument used to measure illuminance (lux, footcandle) in the field.
- It is meet CIE photopic spectral response,  $f'_{\lambda} \leq 6\%$ .
- It is fully cosine corrected for the angular incidence of light.
- The illuminance meter is compact, tough and easy to handle owing to its construction.
- The light sensitive component used in the meter is a very stable, long-life silicon photo diode and spectral response filter.
- U.S. Pat. No. Des. 446,135
- U.S. Pat. No. Des. 469,025

### II FEATURES

- Light-measuring levels ranging from 0.01 lux ~ 20.00 klux / 0.01 fc ~ 20.00 kfc, repeatedly.
- High accuracy and rapid response.

- **Storage Temperature and Humidity** :  $-10^{\circ}\text{C}$  to  $50^{\circ}\text{C}$  ( $14^{\circ}\text{F}$  to  $140^{\circ}\text{F}$ ) & 0% to 70% RH.
- **Power Source** : 6 pcs size AAA battery.
- **Battery life ( typical )** : 400 hours ( carbon zine ) .
- **Photo detector Lead Length** : 150 cm ( approx. ) .
- **Photo detector Dimensions** : 92Lx 60Wx 29H (mm);
- **Meter Dimensions** : 150Lx 72Wx 35H (mm);
- **Weight** : 320g .
- **Accessories** : Carry case, instruction manual, battery.

### IV NAME OF PARTS AND POSITIONS

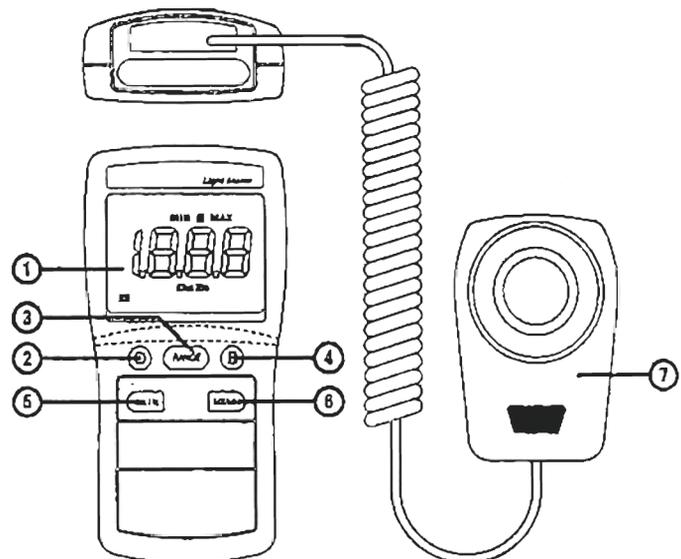

2. **Power Control key** : The power switch key turns the illuminance meter ON or OFF.
3. **Range Selector key** : It indicates 20.00 lux, 200.0 lux, 2000 lux, 20.00 Klux / 20.00 fc, 200.0 fc, 2000 fc, 20.00 Kfc, total 4 range for lux and 4 range for fc.
4. **Data-Hold key** : Data Hold control key.
5. **Lux/fc key** : Illuminance scale selects. 1 footcandle=10.76 lux.
6. **MX/MN key** : Maximum and Minimum reading recorder control key.
7. **Photo Detector**.

#### V OPERATING INSTRUCTIONS

1. Power-up : Press the power key to turn the meter ON or OFF.
2. Selecting the lux or fc scale : Set the range selection switch to desired lux or fc range.
3. Remove the photo detector cap and face to light source in a horizontal position
4. Read the illuminance nominal from the LCD display.
5. Overrange : If the instrument only display "OL", the input signal is too strong, and a higher range should be selected.
6. Data-Hold mode : Press the HOLD key to select Data-Hold mode. When HOLD mode is selected, the illuminance meter will stop all further measurements. Press the HOLD key again to exit DATA-HOLD mode. Then it resumes normal operation.

4

to exit this mode.


8. When the measurement is completed, replace the photo detector cap and turn the meter off.

#### VI BATTERY CHECK-UP & REPLACEMENT

1. As the battery power is not sufficient, LCD will display "BT" ; and, replacement of one new batterie type 6×1.5V is required.
2. After turning off the meter, press the battery cover and push in the direction of the arrow to open.
3. Disconnect the battery from the instrument and replace it with a standard 6×1.5V battery and go for the cover.

#### VII SPECTRAL SENSITIVITY CHARACTERISTIC

- To the detector, the applied photo diode with filters makes the spectral sensitivity characteristic almost meet C.I.E. ( INTERNATIONAL COMMISSION ON ILLUMINATION ) photopic curve  $V(\lambda)$  as the following chart described.

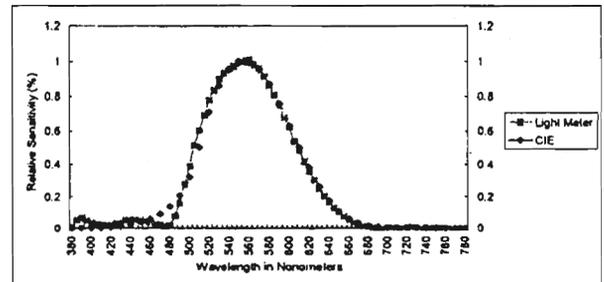

5

#### VIII MAINTENANCE

1. The white plastic disc on the top of the detector should be cleaned with a damp cloth when necessary.
2. Do not store the instrument where temperature or humidity is excessively high.
3. The reference level, as marker on the face plate, is the tip of the photo detector globe.
4. The calibration interval for the photo detector will vary according to operational conditions, but generally the sensitivity decreases in direct proportion to the product of luminous intensity by the operational time. In order to maintain the basic accuracy of the instrument, periodic calibration is recommended.

#### IX RECOMMENDED ILLUMINATION

1fc = 10.76 lux

LOCATIONS	lux	fc
• <b>OFFICE</b>		
Conference, Reception room.	200 ~ 750	18 ~ 70
Clerical work	700 ~ 1,500	65 ~ 140
Typing drafting	1000 ~ 2,000	93 ~ 186
• <b>FACTORY</b>		
Visual work at production line	300 ~ 750	28 ~ 70
Inspection work	750 ~ 1,500	70 ~ 140
Electronic parts assembly line	1500 ~ 3,000	140 ~ 279
Packing work, Entrance passage	150 ~ 300	14 ~ 28

• <b>HOTEL</b>		
Public room, Cloakroom	100 ~ 200	9 ~ 18
Reception	200 ~ 500	18 ~ 47
Cashier	750 ~ 1000	70 ~ 93
• <b>STORE</b>		
Indoors Stairs Corridor	150 ~ 200	14 ~ 18
Show window, Packing table	750 ~ 1,500	70~140
Forefront of show window	1500 ~ 3,000	140 ~279
• <b>HOSPITAL</b>		
Sickroom, Warehouse	100 ~ 200	9 ~ 18
Medical Examination room	300 ~ 750	28 ~ 70
Operating room		
Emergency Treatmet	750 ~ 1,500	70 ~ 140
• <b>SCHOOL</b>		
Auditorium, Indoor Gymnasium	100 ~ 300	9 ~ 28
Class room	200 ~ 750	18 ~ 70
Laboratory, Library, Drafting, room	500 ~ 1,500	47 ~ 140



omega.com info@omega.com

**Servicing North America:**

**U.S.A.:** Omega Engineering, Inc., One Omega Drive, P.O. Box 4047, Stamford, CT 06907-0047 U.S.A. Toll-Free: 1-800-826-6342 (USA & Canada only) Customer Service: 1-800-622-2378 (USA & Canada only) Engineering Service: 1-800-872-9436 (USA & Canada only) Tel: (203) 359-1660 Fax: (203) 359-7700 e-mail: info@omega.com

**Canada:** Toll-Free: 1-800-826-6342 (USA & Canada only) Tel: (514) 856-6928 Fax: (514) 856-6886 e-mail: generalinfo@omega.ca Web: www.omega.ca

**Servicing Mexico and Latin America:**

**Mexico/ Latin America:** Tel: 001-800-099-0420 (Mexico Only) Tel: 001-203-359-7577 (Outside Mexico) Fax: 001-203-968-7290 e-mail: ventas@mx.omega.com Web: mx.omega.com

**Servicing Asia:**

**China:** Hotline: (+86) 800 819 0559, (+86)400 819 0559 e-mail: info@cn.omega.com Web: cn.omega.com

**Servicing Europe:**

**France:** Freephone: 0805 541 038 (France only) Tel: 01 57 32 48 17 Fax: 01 57 32 48 18 e-mail: esales@omega.fr Web: www.omega.fr

**Germany/Austria:** Freephone: 0800 826 6342 (Germany only) Tel: +49 (0)7056-9398-0 Fax: +49 (0)7056-9398-29 e-mail: info@omega.de Web: www.omega.de

**Italy:** Freephone: 800 906 907 (Italy only) Tel: +39 022 333 1521 Fax: +39 022 333 1522 e-mail: commerciale@it.omega.com Web: it.omega.com

**Netherlands: Benelux:** Freephone: 0800 099 3344 (Netherlands only) Tel: +31 070 770 3815 Fax: +31 070 770 3816 e-mail: esales@omega.nl Web: www.omega.nl

**Spain:** Freephone: 800 900 532 (Spain only) Tel: +34 911 776 121 Fax: +34 911 776 122 e-mail: ventas@es.omega.com Web: es.omega.com

**United Kingdom:** Freephone: 0800 488 488 (United Kingdom only) Tel: +44 (0)161 777 6611 Fax: +44 (0)161 777 6622 e-mail: sales@omega.co.uk Web: www.omega.co.uk

**WARRANTY/DISCLAIMER**

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

**CONDITIONS:** Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

**RETURN REQUESTS / INQUIRIES**

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:  
1. Purchase Order number under which the product was PURCHASED,  
2. Model and serial number of the product under warranty, and  
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:  
1. Purchase Order number to cover the COST of the repair,  
2. Model and serial number of the product, and  
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2013 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

**Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!**  
*Shop online at omega.com<sup>SM</sup>*

**TEMPERATURE**

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

**PRESSURE, STRAIN AND FORCE**

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

**FLOW/LEVEL**

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/ Paddlewheel Systems
- Totalizers & Batch Controllers

**pH/CONDUCTIVITY**

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

**DATA ACQUISITION**

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Data Logging Systems
- Recorders, Printers & Plotters

**HEATERS**

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

**ENVIRONMENTAL MONITORING AND CONTROL**

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments